

Beverage Reference



Caffè latte
Strong coffee with milk



Flat White
Coffee infused with milk foam



Cappuccino
Milk foam infused with coffee



Hot water for green tea
Ideal for green, white and herbal teas



Hot water
Ideal for black and oolong teas

Notes:

S8

Freshly ground, not capsuled



TASK CARD




Task 1 Switch off after

- Touch "P" to enter programming mode
- Touch **Machine settings**
- Touch **Switch off after**
- Touch & slide to change switch off time after to 9 hours
- Touch "Save"
- Touch "Back" continually until START SCREEN appears

Task 2 Operating instructions

- Touch "P" to enter programming mode
- Touch **Machine settings**
- Touch & slide to the left, locate **Operating instructions**
- Touch **Operating instructions**
- Confirm **Operating instructions** are "ON"
- Touch "Back" continually until START SCREEN appears

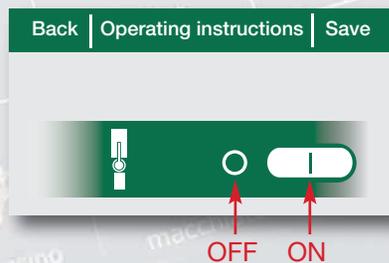

Task 3 Prepare a Cappuccino

- Touch & hold **Cappuccino** for 2 seconds to view list of product settings
- Touch **Product settings**
- Change **Cappuccino** to the following settings:

Strength	●●●●●
Amount of milk	5 seconds
Volume	5 oz
Temperature	High
- Touch "Save"
- Touch "Back" continually until START SCREEN appears
- Prepare a **Cappuccino** and set aside

Task 4 Add Caffè latte to Start Screen

- Touch & hold **Cappuccino**
 - **Replace product** with **Caffè Latte**
 - Touch "Yes"
 - Touch Product Selector
 - Prepare a **Cappuccino**
 - Compare **Cappuccino** to first one prepared
- NOTE:** When product goes to Product Selector, it reverts back to factory settings

Task 5 Change preset amounts

- Prepare a **Coffee**
- Touch & slide to change the strength to ●●●●●
- Change volume to 4 oz
- Once the drink is prepared, touch "Save"
- Preset amounts have been updated

Task 6 Prepare Hot water for green tea

- Touch "Product Selector"
 - Touch & slide to locate **Hot water for green tea**
 - Prepare **Hot water for green tea**
- NOTE:** Operating instructions will appear
- Touch "Next"
 - The preset amount of water will flow into the cup
 - Touch & slide to temporarily change volume to 2 oz

Task 7 Demo mode

- Touch "P" to enter programming mode
 - Touch **Machine settings**
 - Touch & slide to locate **Demo mode**
 - An identical screen to the START SCREEN will appear with **Demo mode** at the top
 - Touch **Latte macchiato** and watch the display walk you through the steps of preparing this drink
 - Touch "Back" to exit **Demo mode**
- NOTE:** **Demo mode** demonstrates the preparation of drinks without actually preparing the drink

Task 8 Maintenance status

- Touch "P" to enter programming mode
- Touch **Maintenance status**
- Touch & slide to locate **Maintenance status**
- Review progression bars for:
 - Clean**
 - Change filter**
 - Descale**