

Maintenance & Cleaning

Warnings



Before carrying out any cleaning work, it is necessary to **disconnect the electrical power supply of the equipment** (by acting on the system switch), wear appropriate personal protective equipment (e.g. gloves, etc.). The user must carry out only ordinary maintenance operations, for extraordinary maintenance contact a Service Center requesting the intervention of an authorized technician. The Manufacturer does not recognize in the warranty damages resulting from lack of maintenance or incorrect cleaning (e.g. use of unsuitable detergents).



To clean any component or accessory DO NOT use:

1. abrasive or powder cleaners;
2. aggressive or corrosive detergents (e.g. hydrochloric/muriatic or sulphuric acid, chlorine, caustic soda, etc.). Attention! Do not use these substances to clean the sub-structure/floor under the equipment or the basement;
3. abrasive or pointed tools (e.g. abrasive sponges, scrapers, steel brushes, etc.);
4. steam or pressure water jets.



To ensure that the appliance is in perfect use and safety, it is recommended to have it serviced and checked at least once a year by an authorized service center.

Cleaning the Equipment

Cleaning of external steel parts

► Fig.1.

Use a cloth soaked in warm soapy water and finish with a thorough rinse and drying, taking care to remove all traces of detergent.


Cleaning of the control panel and emergency button

Clean the control panel and emergency button with a soft, lightly detergent cloth for delicate surfaces. Avoid using large quantities of product as any infiltration could cause serious damage to the controls. Also avoid using too aggressive detergents that could ruin the construction material of the panel (polycarbonate).

Wheel cleaning

Clean the wheels with a soft cloth and a little detergent for delicate surfaces. Also avoid using too aggressive cleaning agents that could ruin the construction material of the wheels.

Fig.1.

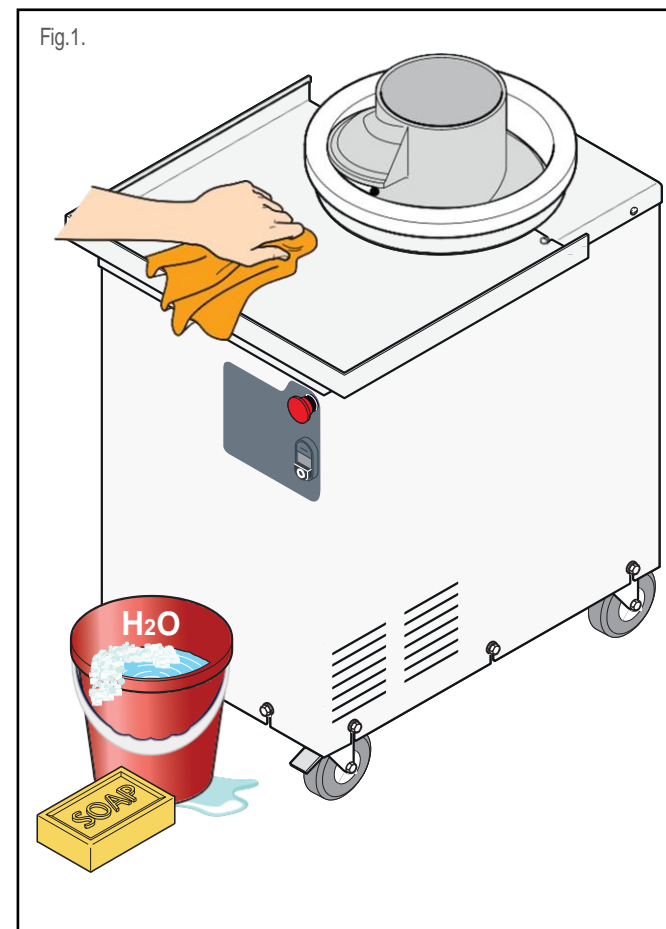

Maintenance & Cleaning

Cleaning tray, outer cylinder, auger and inner disc

Fig.2.

(1) Remove the 4 "V" screws that hold the tray to the machine body and slide it out (2).

(3a) Turn the outer cylinder counterclockwise until you feel a block (3b), (4) then lift it upwards to pull it out.

(5) Lift the auger up until it is fully pulled out.

(6) Remove the Bottom Disc.

(7) Vacuum the compartment inside the machine to remove any residue.

The tray, outer cylinder, auger and lower disc can be cleaned with a soft cloth dampened with warm water and dish soap.

Finish cleaning with a thorough rinse and dry. Reassemble the pieces only when they are perfectly dry.

