


USER INSTRUCTIONS

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE USE, TO HELP WITH THE INITIAL TENT SET-UP AND PACKING AWAY.

ASSEMBLY


1

REMOVE THE BEACH TENT FROM THE BAG. PLACE ON THE GROUND AND FOLD OUT THE 4 LEGS, KEEP THE CENTRAL HUB UPRIGHT ENSURING THE POLES ARE FULLY EXTENDED

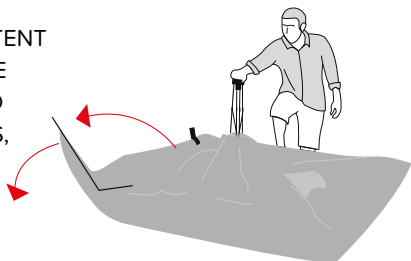


2

STANDING CLOSE TO THE HUB, LIFT THE TOP OF THE HUB TO HEAD HEIGHT

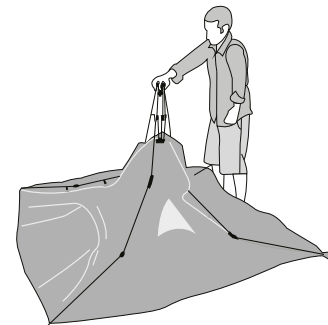


3

FIRMLY PRESS THE UPPER AND LOWER HUBS TOGETHER. AS THE HUBS GET CLOSER TO CONNECTING, THE RESISTANCE WILL INCREASE AND THE BODY OF THE TENT WILL START TO EXPAND OUTWARDS.

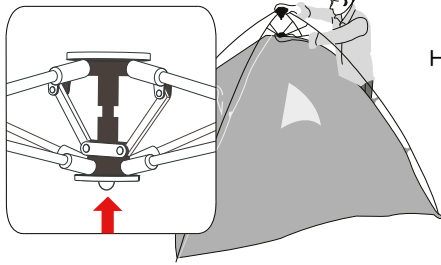

4

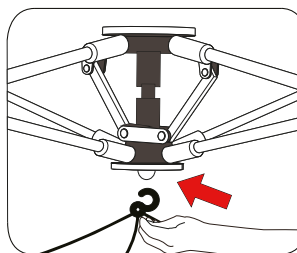


IMPORTANT!
THREAD THE HOOK THROUGH THE LOOP ON THE CENTRAL HUB

PACKING AWAY


1

REMOVE THE HOOK FROM THE CENTRAL HOOK

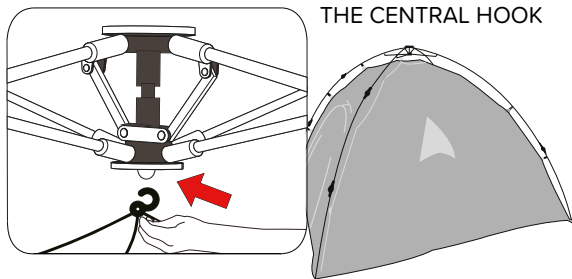


2

DISCONNECT THE 2 HUBS

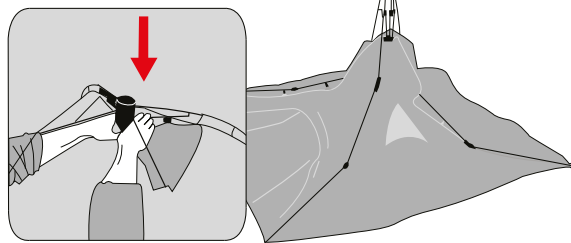


3

UNLOCK THE POLE JOINTS BY SLIGHTLY PULLING THE POLE SECTIONS APART.

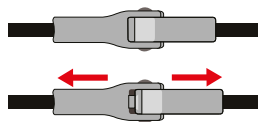


HOLDING THE CENTRE HUB UPRIGHT, FOLD THE POLES TOWARDS THE HUB.

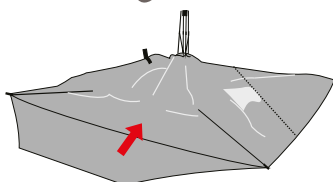

4

FOLD THE TENT MATERIAL AROUND THE CENTRAL HUB AND PLACE BACK IN THE CARRY BAG.

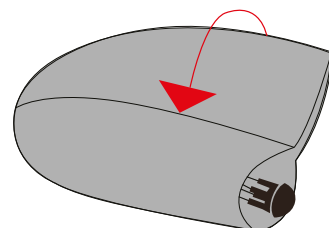

PLEASE RETAIN INSTRUCTIONS FOR FUTURE REFERENCE



This is not a toy, and is not suitable for children under the age of 3 years. Contains small parts that could be a choking hazard. Young children should be accompanied by an adult when using this product.

Colapz® do not take any responsibility for any damage to the product, property or persons due to misuse or for use in any other means not specifically directed by Colapz®. The product may be heavy during use, Colapz® cannot be held responsible for any injury due to overfilling of this product.

For further information contact:
colapz.co.uk