


>>> THANKS FOR READING!
If you have any questions about our product, be free to contact us.
support@istartop.com

CORRECT DISPOSAL OF THIS PRODUCT

 (Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.

FCC STATEMENT

Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.


USER MANUAL


SOLAR MOTION SENSOR LIGHT

 Water Proof

 Heat Resistance


 Frost Resistance





200 LED


INTRODUCTION


The solar motion sensor light can automatically detect brightness of surroundings: it enters charging mode to convert sunlight to electricity that is stored in the built-in battery in daytime; it automatically enters motion detection mode to illuminate when detecting motions at night. It has 3 modes, so you can adjust to a desired mode by pressing the back button.

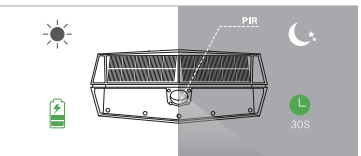


PACKING LIST

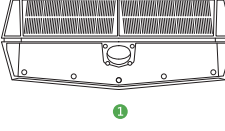 1. Solar Motion Sensor Light


 2. Screw

 3. Wall Plug

 4. User Manual

OPERATION GUIDE

- The default mode of the product is OFF mode. Press the back button to adjust modes when using the product.
- In mode 1 and mode 2, the lighting time automatically prolongs every time when it detects motions again during its illumination.

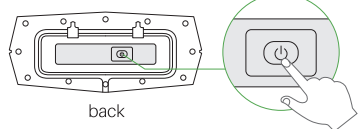

back

Mode 1 : Press the Power button for once, the LED light will flash once and then goes off. When it detects motions, it enters a high-light mode. In 30 s, it automatically goes off.


Mode 2 : Under Mode 1, press the Power button again. The LED light will flash for twice and then enters a dim-light mode. When it detects motions, it will enter a high-light mode. In 30 s, it will return to dim-light mode.

Mode 3 : Under Mode 2, press the Power button again. The LED light will flash for 3 times and enter a normal-light mode. Then the light will stay on.

Off : Under Mode 3, press the Power button again. The light will power off.


NOTE

1. It is recommended to turn off the light and charge it under direct sunlight for 1-2 days before the first use. Make sure the product has enough power.
2. If you want to check whether the product can work normally or not, please turn it on by pressing the back button, then cover the solar panel with your hands in the daytime or put it in dark environment.
3. If the brightness of the product is found to be low in the process of use, it means that the product enters a low power protection state, which is a normal phenomenon. It will return to high brightness after it's fully charged.

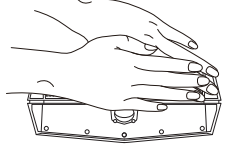

INSTALLATION

- Choose a place that can get enough sunshine to install the light, the longer it gets sunshine the longer it can illuminate.
- Using the included auxiliary card, punch two holes into the wall with a 1/4 drill bit. And insert the attached wall plugs into the hole. Then, twist the screws into the wall plugs while leaving some space for hanging.
- Hang the light.

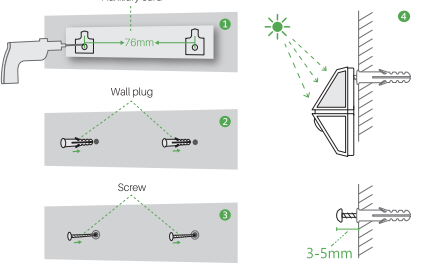

FAQ

1. **My light doesn't work after being used a few days or months. What happened ?**
 - The built-in battery is out of power, so you need to charge it under direct sunlight where there is no shade or eave can shelter the solar panel.
 - If there is no good sunlight for several days (like cloudy, rainy, snowy day), the light will be out of power thus not light up. It will get power if sunny day comes and light up at night after charging in the day.
2. **I find one or two products not working when installing multiple products. What happened ?**
 - Make sure the product is not illuminated by other lights. When installing multiple products, please keep the interval greater than 2 meters between two products. Otherwise, it may occur that the ambient brightness is too high, leading to one of the products to identify it as daytime, and turn off or not turn on the light.
 - In different installation place, it gets different extents of sunlight and electricity. It is the best to install all the products under direct sunlight where no shade or eave shelter the solar panel.
3. **The working time of my solar light is short, what's the problem ?**
 - The more it is charged during the day, the longer it works during the night.
 - Cloudy, rainy and snowy day will lead to less or no charging, thus the lighting time is short or the light is not bright. After it is fully charged on sunny days, the lighting time will be lengthened.
 - Check whether the solar panel is covered with dusts and clean it regularly.
 - The lighting time in winter is shorter than that in summer, because the solar light intensity is weaker and charging time is shorter in winter.
3. **Sometimes, the motion sensor is insensitive and detection distance is short. How to fix it ?**
 - The motion sensor may be affected by the temperature. The lower temperature, the less sensitive it is.
 - When you walk to the light, the motion in transverse direction is more sensitive and leads to a longer detection distance than that in longitudinal direction.
 - Mounting height will affect the sensitivity and detection distance. The mounting height is best below 3 meters.
3. **The light is waterproof. What causes it waterproof failure ?**
 - When installing or using, if the product falls from a high place, it may cause waterproof failure.
 - It's subject to high-intensity storms continuously.

In order to use safely, if you find that the product has waterproof problem, please contact us to replace it in time.

 By PD	成品尺寸: 70 x 130(mm)	设计师: Minor	本品牌及其所使用的标志、名称、图像以及所有内容设计, 其版权均为本公司所有, 未经授权任何组织、个人、商业团体不得擅自使用、翻印, 本公司保留追究其法律责任的权利!
	展开尺寸: 280x 130(mm)	日期: 19-06-28	
	印刷颜色: 四色 + 专色印刷	材质及工艺: 80克铜版纸 覆哑膜 双面印刷	
	 PANTON 361U	备注:	