 


## DD3 Classic MK2

### Desiccant Dehumidifier

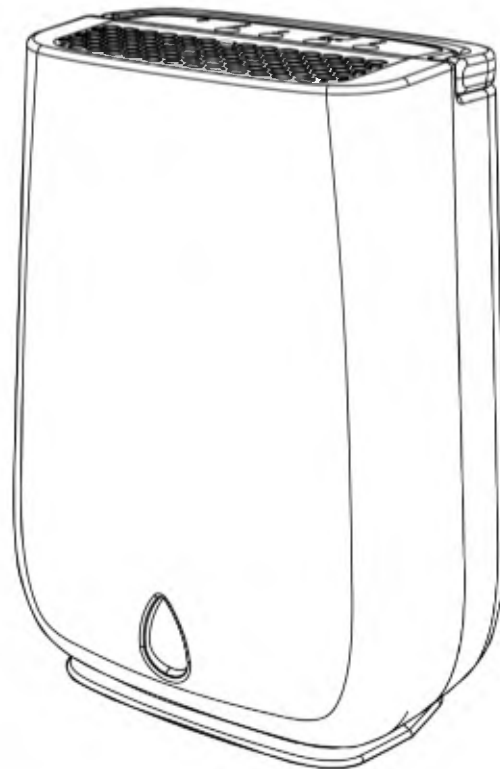

## Congratulations!

You have purchased the very latest in dehumidification technology. Your new EcoAir high efficiency room appliance will give you many years of dependable service. Many features have been built into your EcoAir portable appliance to assure quiet operation, functional controls and the most economical operation.

|                                               |                   |
|-----------------------------------------------|-------------------|
| <b>Key Features .....</b>                     | <b>Page 3</b>     |
| <b>Quick Start Up .....</b>                   | <b>Page 4 - 5</b> |
| <b>Empty Water Tank Instructions.....</b>     | <b>Page 6</b>     |
| <b>Continuous Drainage Instructions .....</b> | <b>Page 7</b>     |
| <b>Maintenance .....</b>                      | <b>Page 8</b>     |
| <b>Troubleshooting .....</b>                  | <b>Page 9</b>     |
| <b>Specifications .....</b>                   | <b>Page 9</b>     |

## *Appendix*

*App 1. Welcome*

*App 2. Guarantee Card*

*App 3. BS Plug Wiring*

*App 4. Important Safety Instructions*

**When using this appliance in European countries, the following information must be observed:**

Do not dispose of this product as unsorted waste.

It is prohibited to dispose of this appliance as domestic household waste. For disposal:

 
- Contact your local council
- The manufacturer will take back the old appliance for disposal when you replace it with a new product.
- Old products contain valuable resources, which should be recycled as scrap metal.




WEE/EC2601UR

Wild disposal of waste in forests and landscapes endangers your health when hazardous substances leak into the ground-water and find their way into the food chain.

# KEY FEATURES

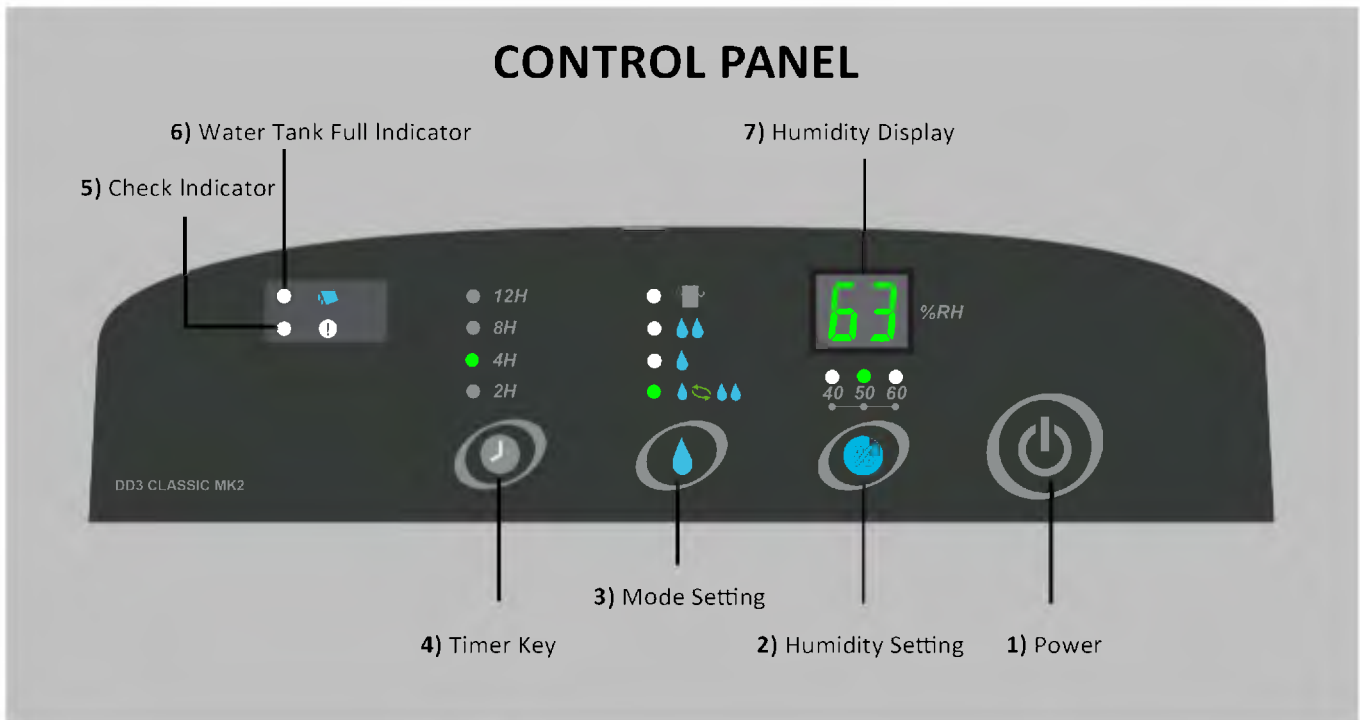

 - Power Key** - Turn unit on ON/ OFF.
- Humidity Setting** - Set the humidity in the following loops with 1 or 2 LED, 5% stage display :

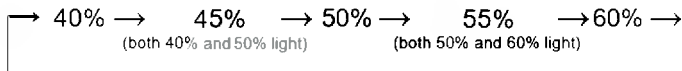

Note: The humidity settings are displayed with a single or two LEDs, e.g. both 40% and 50% mean 45%.

- Mode Setting** - The fan speed and heater are controlled by a mode setting function. Select AUTO , the fan speed and heater will run automatically. While selecting ECONOMY or High setting, will make the machine run with a low or high fan speed and heat setting. Select Laundry Mode to run the appliance continuously.
- Timer Key** - Select 2 or 4 or 8 or 12 hours' timer.
- Check Indicator** - Indicator lights up when the unit needs attention.
- Water Tank Full Indicator** - Indicator lights up when the water tank is full or incorrectly installed.
- Humidity Display** - The display by default shows the ambient humidity level. It will also show the setting humidity when you push the humidity setting button.




# QUICK START UP
 
## STEP 1 - WHERE TO POSITION YOUR DEHUMIDIFIER?

Ensure the dehumidifier is a safe distance away from a wall or furniture, away from direct sunlight.


**TIP:** Position the dehumidifier in the dampest room or somewhere central like a landing or a hallway. As long as the internal doors are open the excess moisture from all of the rooms in the house will migrate naturally towards the dehumidifier and be processed.

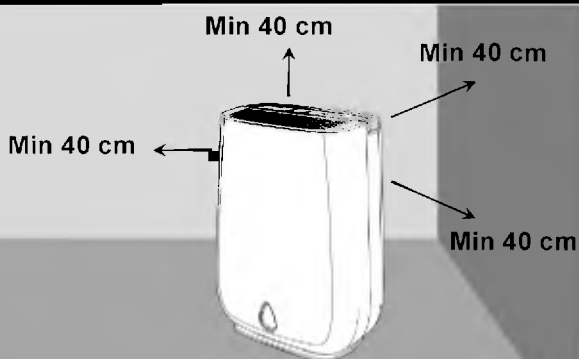

## STEP 2 - CAUTION - AVOID USING IN



 - Areas where ambient temperature falls below 1°C.
- Small confined area i.e. broom cupboard, boiler room, unventilated rooms etc.
- Close proximity to a heat source such as heater, tumble dryer, cooker.
- Dusty or building sites or an industrial environment where particles can clog up the filter or internal components. This will cause the dehumidifier to malfunction, voiding your guarantee.

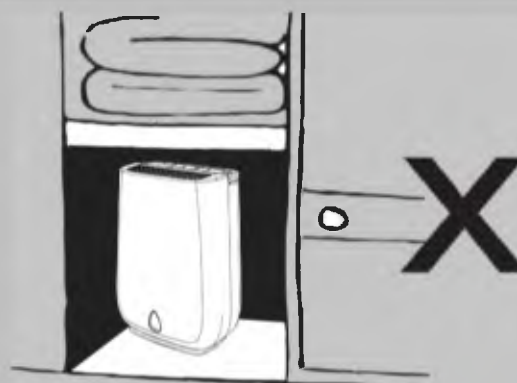


## STEP 3 - ON/OFF



TO  
OPERATE  
DD3  
CLASSIC  
MK2

 
- Always place the dehumidifier in an upright position on an even level surface.
- Plug the dehumidifier into the mains socket, the standby mode indicator will remain on whilst the dehumidifier is plugged in to the mains.
- Press the ON/OFF button to operate the dehumidifier.

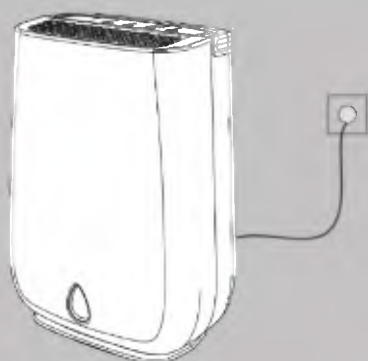

## STEP 4 - HUMIDITY SETTING



 - Press the humidity setting button to set the humidity in the following loops with 1 or 2 LED, 5% stage display:

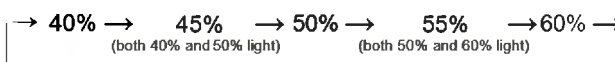

Note : The display will go back to the ambient humidity level in 3 seconds, after setting the desired humidity level.


- When the humidity setting is higher than the indoor humidity, the humidity setting LED flashes and the machine will enter energy saving mode, HEATER turns OFF and the FAN stops after 2 minutes for cooling operation.
- After 30 minutes pause, the fan will start and run for 5 minutes while the unit checks the indoor humidity. If the humidity is higher than 5% of the set value, the machine will restart.
- If not, it stops for another 30 minutes. During the pause, buttons are still settable.

# QUICK START UP
 
## STEP 5 - MODE SETTING



- Press the "MODE" setting button to set the mode in the following loop. The LED display will guide you.

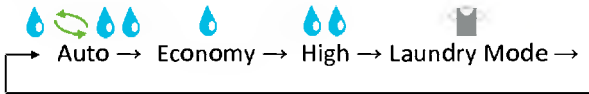

**TIP:** Avoid using the Laundry modes for normal daily use. You may use to dry very damp rooms over 2–3 days and then switch to the recommended Economy mode.


|                     |                                                                                                                                                                                                                                                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Auto</p>         | <ul style="list-style-type: none"> <li>• The fan speed and heater are controlled from low to high when the room humidity is 10% higher than the setting, and turn from high to low when only 5% or less.</li> </ul>                                                                                                                                  |
| <p>Economy</p>      | <ul style="list-style-type: none"> <li>• The machine runs with a low fan speed and a low Heat setting.</li> </ul>                                                                                                                                                                                                                                    |
| <p>High</p>         | <ul style="list-style-type: none"> <li>• The machine runs with a high fan speed and a high heat setting.</li> </ul>                                                                                                                                                                                                                                  |
| <p>Laundry Mode</p> | <ul style="list-style-type: none"> <li>• Select the laundry mode for continuous dehumidification, and the display will show "Co" at the same time. While selecting the laundry mode, the Humidity Setting is disabled.</li> </ul> <p>Note : The display will go back to the ambient humidity level in 3 seconds, after setting the laundry mode.</p> |

## STEP 6 - TIMER



 - Press the "TIMER" Key to select your desired running time

- Press the TIMER button to set the timer, as it counts down the remaining time is displayed via the LED's.

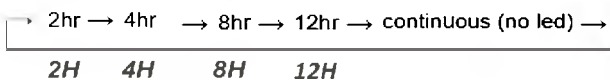


## USERFUL INFORMATION

- After turning the dehumidifier OFF, the fan will continue to run for a two minutes period. This is a normal procedure and helps to cool & protect the internal components. During these two minutes **DO NOT** remove the power plug from the power socket; wait for the fan to stop running.

- When you first use your dehumidifier, it will work harder to reduce the room humidity to its target i.e. approximately 50-60%RH, this is the time when it will produce the most water and need emptying most frequently. As the room becomes drier the dehumidifier collects less water and runs at a lower fan speed.
 
## STEP 8 - CHECK LIGHTS

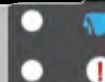

|                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Water Full Indicator</p>                                                                                                                                                                                                       | <ul style="list-style-type: none"> <li>• Lights up when water tank is full or not properly inserted.</li> </ul>                                                                                                                                                                                                                                               |
| <p>Check Indicator</p>                                                                                                                                                                                                            | <ul style="list-style-type: none"> <li>• Antibacterial Nano Silver Filter needs cleaning.</li> <li>• Dehumidifier needs to cool down. Switch OFF and leave for 30 minute and turn on again. This is normal.</li> <li>• In low humidity or temperature conditions.</li> <li>• In high temperature condition over 40°C or low temperature below 1°C.</li> </ul> |
| <ul style="list-style-type: none"> <li>• <b>TIP:</b> When the check light comes on, remove the plug from the socket. Move the unit to another room after it cools down or when conditions allow, follow Steps 1 and 3.</li> </ul> |                                                                                                                                                                                                                                                                                                                                                               |


## USERFUL INFORMATION

 - When you first use the dehumidifier and periodically thereafter you may notice a smell coming from the dehumidifier. This is caused by the Zeolite desiccant material and is NOT a sign that the dehumidifier is faulty, nor is it harmful to humans or pets. Odour will reduce gradually, this is normal. Ventilate the room if necessary, to reduce the odour.


- The Zeolite absorbs odours from items such as cigarettes, cosmetics, hair sprays, building materials and new furniture and then when the desiccant is heated the smell is discharged into the room. (This smell has been described as being like a burning smell or a sour smell). This is normal and will NOT last long, nor is it a sign of a fault.

- Once the power is restored after a power failure, the dehumidifier will continue to operate at the selected settings prior to the power failure.


# EMPTYING THE WATER TANK

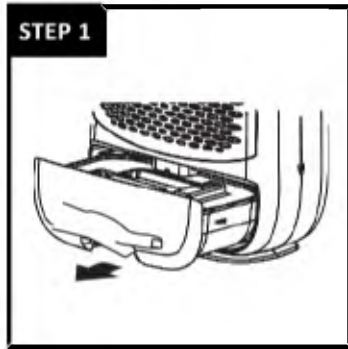


Slide the water tank out

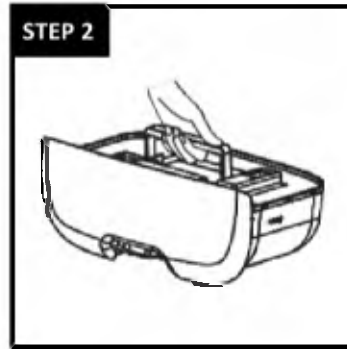 


Lift by the handle

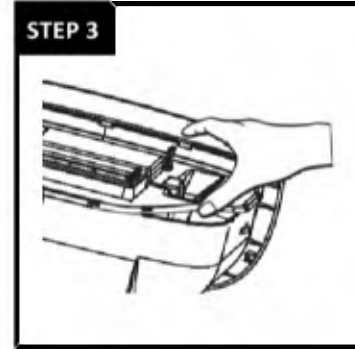 


Open the corner of bucket cover

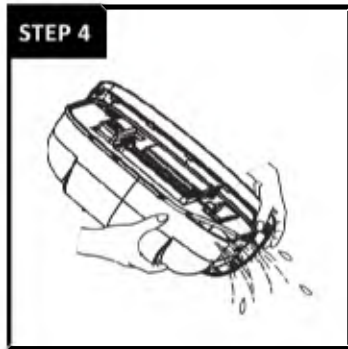 

Pour the water away

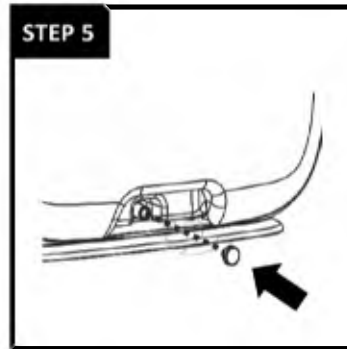 

Check the rubber plug

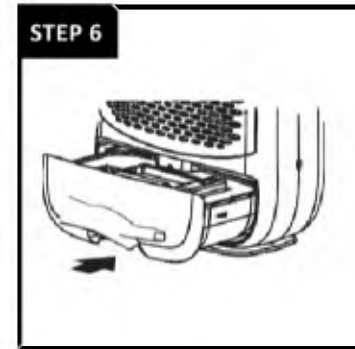 


Restore the tank

1. The Water Full Indicator lights up when the water tank is full and the dehumidifier stops operating.
2. Do not move the dehumidifier or remove the water tank when the dehumidifier is running, as water may leak; causing damage to the dehumidifier or an electric shock.
3. Before removing the water tank leave the dehumidifier to stand for approximately 10 minutes to ensure all water has dripped into the water tank.
4. To remove the water tank, slide it out gently by gripping the water tank from bottom cutaway and pull out carefully.
5. Pour the water away by tilting the water tank, (see step 4 picture) to the right side. Clean the water tank if needed.
6. Reinsert the water tank to the correct position, as soon as possible to prevent water dripping from the dehumidifier.
7. Check the rubber plug is firmly in place. Insert the water tank back to the correct position.


## NOTE :

 - Clean the water tank with clean water if needed. Do not use detergent, solvents, abrasives or hot water to avoid damaging the water tank or float.
- Do not remove or damage the float in the water tank or the dehumidifier will not operate properly.
- The Water Full light indicator illuminates if the water tank is not correctly in position.
- Do not tilt the dehumidifier when removing the water tank.
- If the water tank is removed whilst the dehumidifier is running the fan will continue to run for 3 minutes.


# CONTINUOUS DRAINAGE

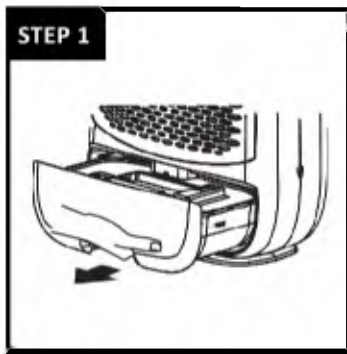

Slide water the tank out

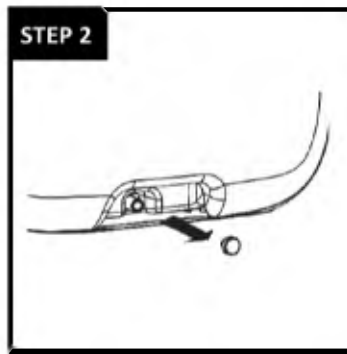 

Remove the plug

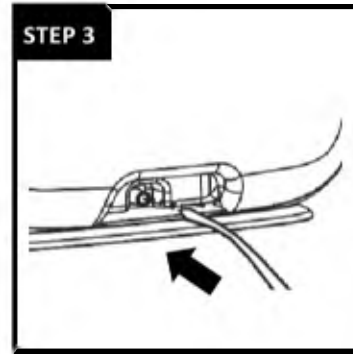 

Pass the hose through


You may use a hose with an inner diameter of 12mm for continuous drainage (supplied):

1. Remove the watertank.
2. Remove the plug from the drain hole at the bottom of the water tank and store it properly.
3. Insert the drainage hose into the drain outlet.
4. Reinsert the water tank to the correct position.
5. The hose must lead to an appropriate drain at a downward slope with no sharp bends.

## NOTE:

 - Ensure the tank and the hose are securely fitted in position before turning the dehumidifier on.
- Before removing the water tank, ensure that the hose is disconnected.

## ATTENTION

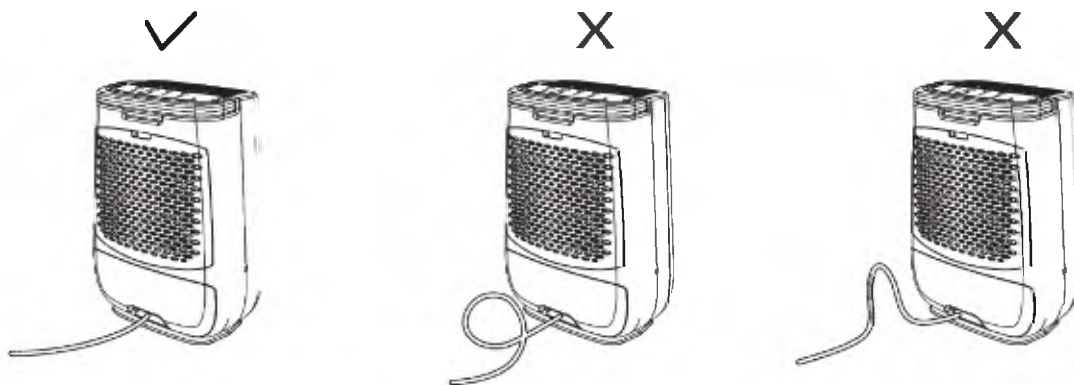


When using the continuous drainage option, place the dehumidifier on a level surface and make sure the hose is clear of any obstructions and is directed downwards.

Avoid placing the dehumidifier on an uneven surface and improper hose installation as it may result in the unit shutting off. Empty the water tank if shut off occurs, then check the dehumidifier location and hose for proper setup.

# MAINTENANCE
 
## STEP 1 - CLEANING YOUR ANTIBACTERIAL NANO SILVER FILTER

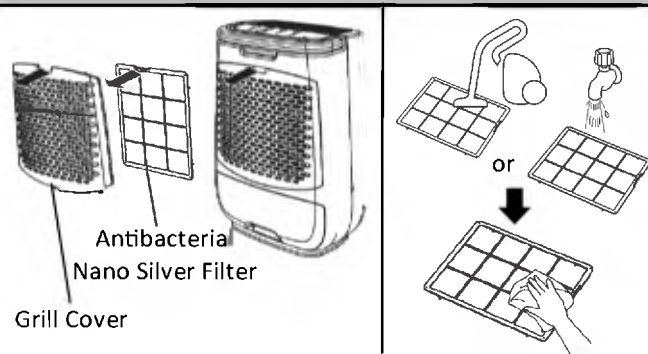


1. Turn OFF the dehumidifier and remove the filter from the unit.
2. Clean the filter lightly with a brush or vacuum cleaner or warm mild soapy water. Allow the filter to air dry fully.
3. Replace the filter back into position.
4. If the filter is covered with dust, the airflow and the performance of the dehumidifier will be affected. Check the filter periodically to ensure all dust is removed.

**Tip:** Clean your filter every 2 weeks to keep your air clean and prolong the life of your dehumidifier. The frequency will depend on the conditions of operation.

## STEP 3- CLEANING YOUR DEHUMIDIFIER

 1. Turn the dehumidifier OFF, wait for the fan to stop and unplug the dehumidifier from the socket.

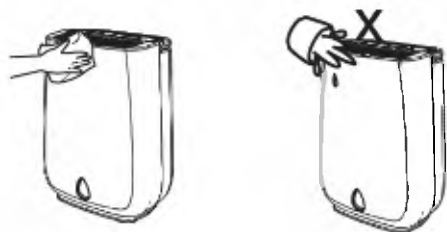


2. Clean the surface with a soft damp cloth.
3. Dry thoroughly with a dry towel after cleaning.
4. Empty the water tank. Allow the water tank to drip dry or dry with a cloth.
5. Please take care when cleaning or drying around the float area.

### Caution:

 - Do not wash the dehumidifier or immerse in water.
- Do not let water drip into the air inlet or outlet.

## STEP 2 - REPLACING YOUR ANTIBACTERIAL NANO SILVER FILTER

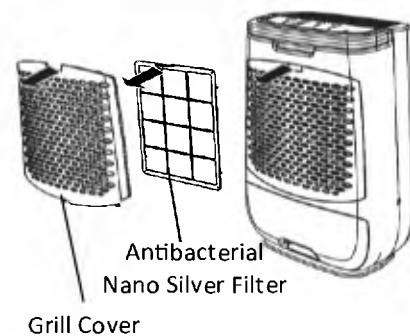

It is recommended that the Antibacterial Nano Silver Filter is replaced every 1 year for optimal performance and hygiene standards. To purchase a replacement filter please visit:

**[www.ecoair.org](http://www.ecoair.org)**



 
 


## STEP 5- STORING YOUR DEHUMIDIFIER

1. Turn OFF the dehumidifier, wait for the fan to stop and unplug the dehumidifier from the power socket.
2. Leave the dehumidifier to drain for approximately one day. Clean and dry the water tank.
3. Clean the filter and the dehumidifier. Cover the dehumidifier to prevent it from gathering dust. Store it upright in a cool dry place.
4. Do not expose to direct sunlight.



# TROUBLESHOOTING

CHECK THE FOLLOWING POINTS BEFORE CONTACTING TECHNICAL SUPPORT.

| PROBLEM                                                                                                   | REASON                                                          | SOLUTION                                                                                                           |
|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| No Power<br>             | Dehumidifier is not plugged in or there is no power supply      | Plug the dehumidifier into mains and switch plug ON. Check the main power supply                                   |
|                                                                                                           | Filter clogged                                                  | Check and clean or replace the filter                                                                              |
|                                                                                                           | The air inlet or outlet is blocked or covered                   | Remove obstructions                                                                                                |
| Check Light On<br>       | Low humidity condition                                          | Switch off unit and move to another room                                                                           |
| Water Full Light On<br>  | Water tank is full or installed incorrectly                     | Empty water tank or re-install correctly                                                                           |
|                                                                                                           | Water float out of position                                     | Restore water float back into position                                                                             |
|                                                                                                           | Dehumidifier on uneven surface or water tank fitted incorrectly | Ensure the dehumidifier is on a flat, even surface, use a spirit level to check, remove tank and replace correctly |
| Water Leaking<br>        | Filter clogged                                                  | Clean or replace filter                                                                                            |
|                                                                                                           | Damaged water tank                                              | Remove the water tank, fill with water and place on a hard even surface to test for leakage                        |
|                                                                                                           | The continuous drainage is clogged or loose                     | Check the continuous drainage hose and its connection                                                              |
|                                                                                                           | Set humidity is reached                                         | Read adjust the humidity settings                                                                                  |
| Not Collecting Water<br> | Room is very cold or very dry for the current settings          | Read adjust the humidity setting or increase the room temperature<br>Check room temperature and humidity levels    |
|                                                                                                           | Filter dusty                                                    | Clean the air filter or replace it                                                                                 |
|                                                                                                           | Dehumidifier set up incorrectly                                 | Ensure unit is set up correctly (QuickStart Up)                                                                    |
|                                                                                                           | Room Temperature is too hot<br>Room Temperature is too cold     | Open the window or door to ventilate Or Increase the heat in the room                                              |
|                                                                                                           | Room Temperature is too hot<br>Room Temperature is too cold     | Open the window or door to ventilate Or Increase the heat in the room                                              |
| Noisy<br>               | Water tank or filter fitted incorrectly                         | Check and refit the water tank or filter Check unit is on an even level surface                                    |

## SPECIFICATIONS

| MODEL                            | DD3 CLASSIC MK2             |
|----------------------------------|-----------------------------|
| Temperature Range                | 1°C ~ 40°C                  |
| Dehumidification Extraction Rate | 10 Litres day (20°C, 60%RH) |
| Water Tank Capacity              | 4.2 Litres                  |
| Voltage                          | 220 - 240V ~ 50Hz           |
| Noise Level                      | 36/ 47 dB(A)                |
| Net Weight                       | 7.5 Kg                      |
| Gross Weight                     | 8.5 Kg                      |
| Net Dimension (W x H x D)        | 379mm x 520mm x 239mm       |
| Gross Dimension (W x H x D)      | 436mm x 587mm x 294mm       |

In the unlikely event of a problem with your product, please refer in the first instance to:  
**ECOAIR TECHNICAL SUPPORT**

[www.ecoair.org/support](http://www.ecoair.org/support)

EcoAir reserves the right to change product specifications without prior notice.

 
# WELCOME

Thank you and congratulations for choosing an EcoAir dehumidifier to help you control the Relative Humidity within your home. Inside this manual you will find many helpful tips on how to use and maintain your dehumidifier efficiently. Just a little preventative care can save you money and prolong the life of your dehumidifier.

The purpose of the dehumidifier is to remove the excess moisture in the air by detecting the humidity level in the room. By keeping humidity within recommended levels, a dehumidifier combats household damp, mould and mildew. Dehumidifiers can help to reduce the symptoms of asthma, allergies, and other respiratory health conditions. They can also be used to help dry laundry quicker and control moisture-based damage (such as the aftermath of flooding, leaks or rising damp) to valuable belongings and furniture.

## HUMIDITY GUIDE

There will always be water vapour in the air. The water vapour (or commonly known as moisture) in the air is measured in % Relative Humidity (RH). RH is the ratio of the actual amount of water vapour in the air to the amount it could hold when saturated expressed as a percentage. Too much or too little moisture in our homes can be unhealthy and uncomfortable. The optimum humidity level is between 40% and 60% (RH) where we feel most comfortable.

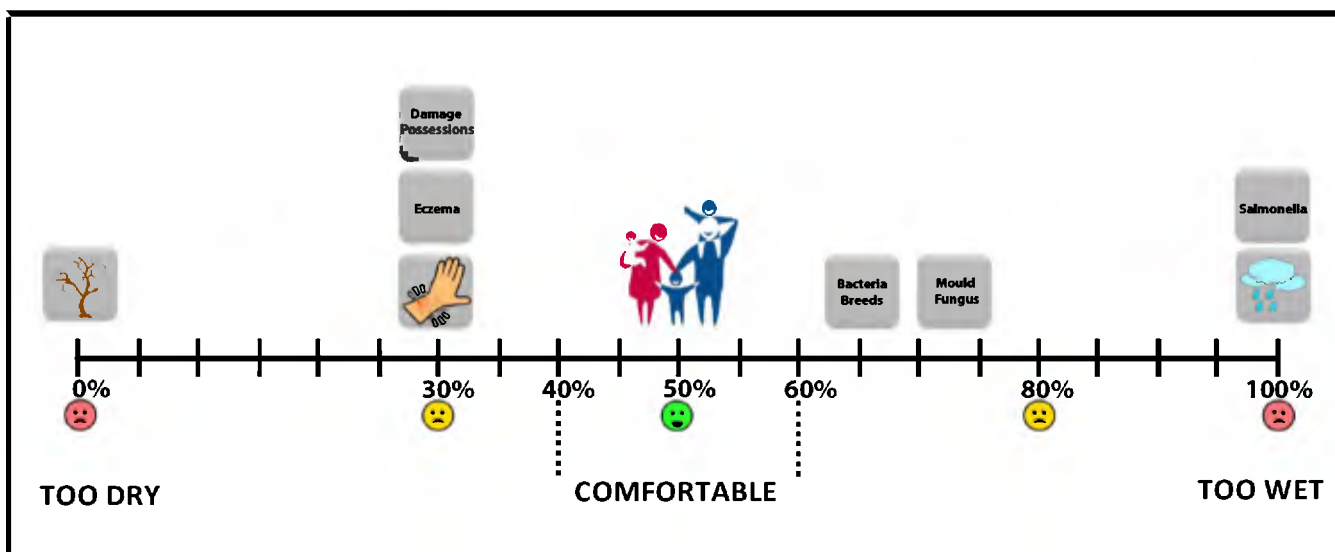

## LOW HUMIDITY

Low humidity indoors causes excess drying which can trigger skin irritations such as eczema, chapped skin and dry nose. It can also damage possessions, such as wooden furniture, musical instruments and artwork by drying it out too much.

## HIGH HUMIDITY

High humidity indoors causes damp and condensation. The damp left by condensation can damage plaster, wall paper, furniture, vehicles, timber windows, doors and clothes. It can be harmful to our health when bacteria thrives, causing mould and fungus.

## MAINTAINING SAFE LEVELS OF HUMIDITY

It is important to maintain a consistent humidity range to preserve furniture, paintings, door and window frames. High humidity causes swelling, corrosion, softening of glues and paint. Low humidity causes shrinking, cracking, warping of wood surfaces and gaps in joints, doors and windows. Frequent changes in humidity levels can accelerate damages to property and belongings.

## CONDENSATION

The warmer the air, the more moisture the air can hold than colder air. So, when the air inside the house becomes colder, the moisture contents in the air becomes saturated, and gets heavier resulting in moisture concentration on the coldest parts of the house particularly on the windows, bathroom mirrors and walls. This is condensation, caused by a sudden increase in humidity, cooking, showers, drying clothes, inadequate ventilation and poor thermal insulation.

Condensation does not disappear instantly even with the dehumidifier on. Where excessive condensation appears for example, on your windows, you may want to open your windows to expel the excess humidity for several minutes. It will take a while for the condensation to generally increase the humidity in the room. Once the humidity level in the room around the dehumidifier is increased above the level you have set on the dehumidifier, it will then begin the dehumidification process.

EcoAir guarantees this product to be free from defects in materials and workmanship for a period of (2) years from the date of purchase. Coverage is valid only with proof of purchase.

## Warranty Terms and Conditions

The conditions below apply to our warranty. They do not affect your statutory rights or the obligations of your retailer and your contract with them.

We provide warranty cover for this appliance subject to the following conditions:

1. We will rectify defects affecting the appliance which are clearly attributable to material and/or manufacturing faults, provided they are reported immediately after being identified within the Warranty Period supported by proof of purchase.
2. Service may not be available to all the islands around the UK. Please check with your retailer or contact our customer service department.
3. The warranty will not extend to consumables such as air filters.
4. Warranty liability will not be triggered by minor variances from nominal features which are of no significance to the appliance's value or fitness for purpose, nor damage caused by wear and tear, exceptional environmental conditions and inappropriate operating conditions.
5. No warranty liability will be accepted:-
  - a. If the defects stem from transport damage for which we are not responsible.
  - b. Improper installation and assembly or non-compliance with the safety regulations and warnings given in the operating instructions.
  - c. Improper use, to also include poor maintenance caused by insufficient aftercare or cleaning and failure to observe operating or assembly instructions or use with improper voltage recommendations.
  - d. Use in a non-domestic environment, to include appliance for rental.
6. No rights are given under this warranty to a person acquiring the appliance second hand.
7. The warranty will be invalidated: -
  - a. If repairs or other interventions are performed by persons not authorised by us.
  - b. If our appliances are fitted with non-original spare parts, extras or accessories.
  - c. If our appliance has been altered and damaged by owner or third parties.
  - d. In the event of abuse (whether physical or verbal abuse) towards any member of staff.
8. Warranty provision will be free of charge and we will decide whether this will take the form of a repair or the replacement of the appliance. Small appliances that can be reasonably transported or posted may need to be handed over or shipped to our customer service centre. A purchase receipt must be presented in each case. Replaced parts pass into our ownership.
9. Under no circumstances shall the application of this warranty give rise to the complete replacement of the appliances. In the event of a replacement appliance being supplied at our discretion, we reserve the right to charge an appropriate monetary offset in respect of the period of use already enjoyed.
10. The provision of services under warranty neither extends the term of the warranty nor sets in motion a new Warranty Period. The Warranty Period for spare parts fitted ends with the expiry of the warranty on the appliance as a whole.
11. EcoAir shall not be liable for loss of goods, loss of use, or any special, indirect, consequential or pure economic loss, costs, damages, charges or expenses.
12. Our Warranty service is on a return to base basis.


These warranty conditions apply to appliances purchased in the United Kingdom. If appliances shipped to other countries feature the appropriate technical conditions (e.g. voltage, frequency, gas-types etc.) for the climatic and environmental conditions in the country concerned, the terms of the warranty will apply, provided a local customer service network exists. Appliances purchased outside the United Kingdom are subject to the warranty conditions published by the appropriate local representative office of that country. These can be obtained via the specialist dealer from whom you bought appliance.

# BS PLUG WIRING

**Wiring Instructions:** Should it be necessary to change the plug, please note the wires in the mains lead are coloured in accordance with the following codes:

**BLUE - NEUTRAL**  
**BROWN – LIVE**  
**GREEN AND YELLOW - EARTH**

 
In the event that the colours of the wires in the mains lead of this appliance does not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is **LIVE** and must be connected to the terminal which is marked with the letter **L** or coloured **RED**.
3. The **GREEN/YELLOW** is **EARTH** and must be connected to the terminal which is marked with the letter **E** or  or coloured **GREEN** or **GREEN/YELLOW**.
4. Always ensure that the cord grip is positioned and fastened correctly.

If a **13A (BS 1363)** fused plug is used it must be fitted with a **13A** -fuse. If in doubt consult a qualified electrician.

## Wiring for a 13 Amp Plug (BS1363)

Please note. The Earth Terminal is marked with the letter **E** or  Earth Symbol.

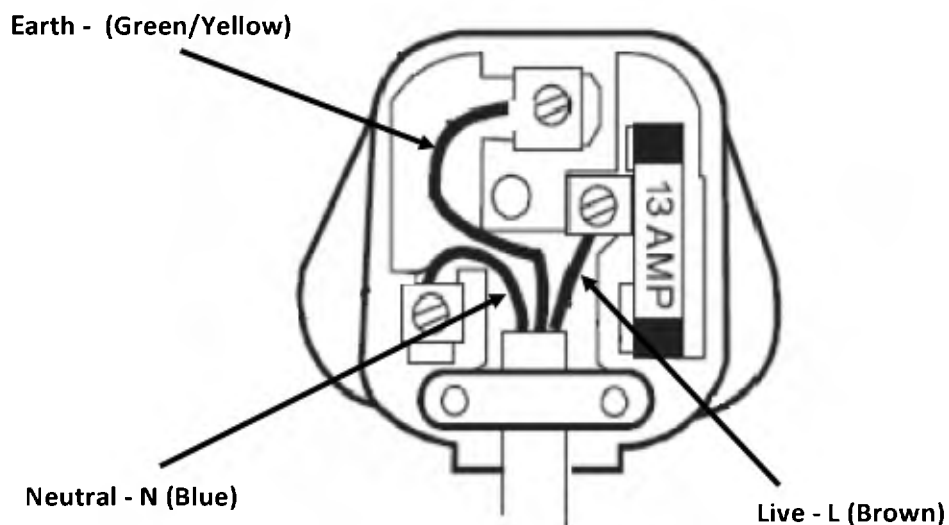

# IMPORTANT SAFETY INSTRUCTIONS

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.**

## **WARNING!**

This appliance is intended for domestic use only. It is not suitable for outdoor use. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injuries to person or property. EcoAir cannot be held liable for damage resulting from incorrect or improper use or operation.

**When using electrical appliances, basic safety precautions should always be followed:**

1. Do not operate the appliance if there is a damaged cord, plug or after it malfunctions if it has been dropped or damaged in any way. Arrange for the appliance to be examined or repaired by an authorised technician.
2. Always keep the appliance in an upright position to avoid any damage. Place the appliance on an even level surface during operation.
3. Ensure the household voltage matches the rated specification for the appliance before use.
4. Ensure that the air inlets and outlets are not blocked or covered. Do not insert fingers or any objects into the air inlet or outlet openings.
6. Do not place the unit too close to curtains or any other objects, keep minimum distance of 40cm.
7. Never place anything on top of the appliance and do not cover while in use.
8. To protect against electric shocks, do not immerse or spray the appliance or any of its parts in water.
9. Never unplug the power cord without switching OFF the appliance first.
10. Always unplug the appliance when not in use or when moving location. To disconnect the appliance from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
11. Always empty the internal water tank before storing the appliance away.
12. Close supervision is necessary when the appliance is used in the presence of children and pets.
13. Do not run power cord under carpeting, or cover with rugs or runners. Arrange the cord away from areas where it may become a trip hazard.
14. Never operate or store the appliance in direct sunlight.
15. Never open the unit casing yourself and attempt to repair. Repairs must be carried out by an authorised EcoAir technician using original parts, failure to do so will risk damage to the appliance or injury to persons or property and will void the warranty.
16. Do not connect via an extension lead or Multi-socket plug. As it is a fire hazard.
17. Do not use the appliance without the air filter. Check and clean the air filter every two weeks. Excess dust on filters is a fire hazard.
18. Do not leave the appliance unattended over a long period of time. Leaving your appliance unattended for long periods of time with an uncleaned filter may lead to overheating.
19. Do not use the Laundry Mode function over a long period of time. Do not put clothes above the appliance to dry and keep the laundry at a safe distance from the dehumidifier.
20. At the end of its working life dispose of the appliance responsibly, in accordance with local regulations.
21. Before cleaning or maintaining the appliance, please turn off the power and unplug.
22. Do not insert or pull out the power plug with wet hands.
23. Do not operate heating equipment around the appliance.
24. Keep a safe distance from fire source, inflammable and explosive objects.
25. This appliance is not for use in a commercial environment, such as Server Room, factory or any other similar environment.
26. Dispose of the water collected from the dehumidifier, this water is not drinkable.
27. Do not remove the water tank when running, this may cause water to leak.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**READ & SAVE THESE IMPORTANT SAFETY INSTRUCTIONS FOR FUTURE REFERENCE**