

JENSEN®


The Ultimate In-Wall / In-Ceiling Speakers

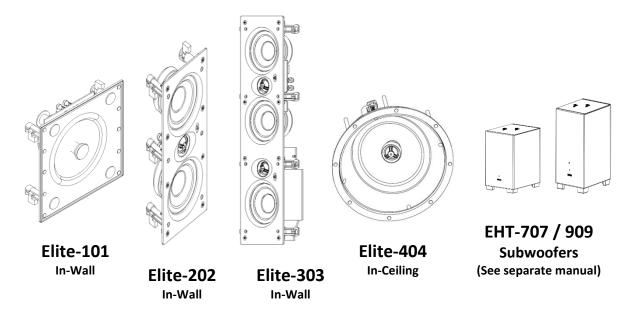

Congratulations in investing in the very best In-Wall/Ceiling Speaker systems on the planet. You will find this information valuable for the long-term enjoyment of your new JENSEN Speaker System.

Check for damage: We know you will be eager to install your new JENSEN Speakers, however please firstly inspect your units for any damage. Contact details are on back page if necessary.

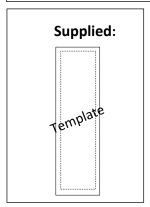

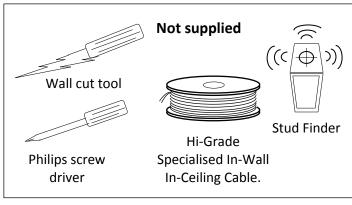

Cavity needed inside Wall/Ceiling

Elite-101: 85mm
Elite-202: 62mm
Elite-303: 75mm
Elite-404: 140mm

Actual cavity needed (min)

Break in Period: Premium grade parts and materials have been used in these products so maximum performance can be obtained in damp and dusty environments such as wall and ceiling cavity. Break In period is appx 10-20 playing hours after which time cones will loosen and Bass will improve. There is no need to limit playback volume at all during this time.

Installation:

assist here.

Step 1: Advanced Planning

Decide the placement for your speakers. Advance planning in regards to the placement of your speakers is critical. It is imperative that the wall or ceiling cavity be free from debris, moisture, insulation, and any other materials that are easily combustible. The mounting location must also be void of wall studs or bracing in the location for the cutout. Ensure mounting depth required (see Page 1) to allow speakers to fit flush to the wall or ceiling surface is important. If you are unsure of the contents of the wall in which you wish to mount the speakers, Electronic Stud Finders (FIG 1) work very well otherwise a professional installer or any qualified Electrician can

Step 2: Fitting Glass covers.

Elite-101: Fit grills squarely and be certain ALL 4 magnets click into place and not just 2 or 3.

Elite-202/303: Ensure all 8 pins align before gently pressing glass panel in to rubber bushes. When removing, pull glass a little from top, then from bottom and remove evenly.

 
Elite-404: Grill will self-click into place.

Step 3: Template:

Use the supplied template and mark the cut-out on the wall or ceiling. To mark simply trace with a pencil, along perforated line (See FIG 2). Ensure your markings are level and parallel.

Step 4: Cutting the Wall / Ceiling

Using the appropriate Gyprock/Plaster wall-cutting tool, blade or Stanley knife, accurately cut the hole in the wall based on correct cutting dimension (see FIG 3) and Template provided inside carton.



Stud Finder

Step 5: Certified CL-2 Speaker Leads

All In-Wall and In-Ceiling Speakers must use certified CL2 Speaker Lead. Our **Oxygen Free, Heavy Duty 14 Gauge Speaker Lead with protective outer jacket** are ideal for such locations. The Outer-jacket shielding protects against unwanted inteference and hum sometimes induced by surrounding electrical wires as well extra protection from possible hungry rodents. Purchase in 50 Mtr rolls freight-free from website.

For Elite-101, 202 and 404, from your AV Receiver run one speaker cable thru the wall/ceiling to each Left and Right speaker (see FIG 4).

For Elite-303, run <u>TWO</u> speaker cables thru the wall/ceiling to each Elite-303 as this model has inbuilt <u>Centre/Left</u> and <u>Centre/Right</u> speakers as well as <u>Left</u> and <u>Right.</u> (See FIG 5 and FIG 7). In both cases, leave enough slack in the wire so that it can hang out of the hole.

Step 6: Red to Red & Black to Black

Connect the speaker wire from the positive (RED+) terminal on the receiver to the positive (RED+) terminal on the speaker. Ditto with all negatives (BLACK-). Note: If you inadvertently reverse one of the connections (i.e. RED to BLACK) you will notice a severe lack of Bass from your system. This is called "Out of Phase". If this occurs, check the wiring and reconnect immediately.


Step 7: Mounting Speakers

Insert the entire speaker into the hole. Move Speaker wire well-away from back of cone to avoid a possible rattle or vibration. Using a Phillips head screwdriver, tighten the screws attached to the dog clamps until you feel Dog Clamps take grip (9~10 FULL TURNS). At this point you can see the gap between Speaker Frame and wall/ceiling close fully. Then, <u>NIP THESE UP - DO NOT OVERTIGHTEN</u>. See FIG 6. Note: If you are unable to install these speakers yourself, any licensed electrician can easily do this for you.

Sound Settings

Boost switch. Elite-202/303 models are fitted with Treble switches. Adjust, set-and-forget to suit your sound preference. If using a Subwoofer set to (+) to fully maximize performance. Note: Elite-101/404 have no switches and are factory preset to Max (+) Boost.

Eyeball Tweeters. You can adjust the angle of the Tweeter slightly in order to compensate for poor mounting locations. Do this by adjusting Tweeter casing. <u>DO NOT touch the Tweeter</u> in any way as permanent damage may occur.

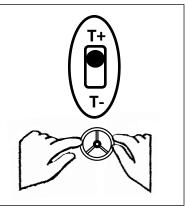


Matching EHT (Explosive Home Theatre) Subwoofers

EHT-707 160 Watts RMS, Monster 10" with huge performance. **EHT-909** 280 Watts RMS, Twin Monster 10" with enormous

performance. (see separate Manual)

Note: Earplugs are supplied with each model in order to remain on good terms with neighbours...

Elite -101 / 202 / 303 / 404

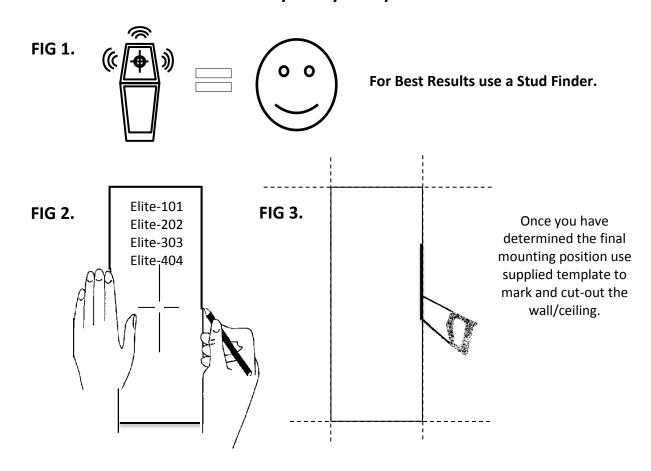

TIPS:

- \checkmark 1. Use Laser level or Spirit level to ensure template is perfectly square.
- ✓ 2. Use a Stud Finder to Pre-plan your locations.
- ✓ 3. Both ends of Speaker Leads must be + to + & to -.
- ✓ 4. Do not use Battery Drill.

FIG 4. Elite-101 / 202 / 404 Run 1 Speaker lead to each Left & Right Speaker.



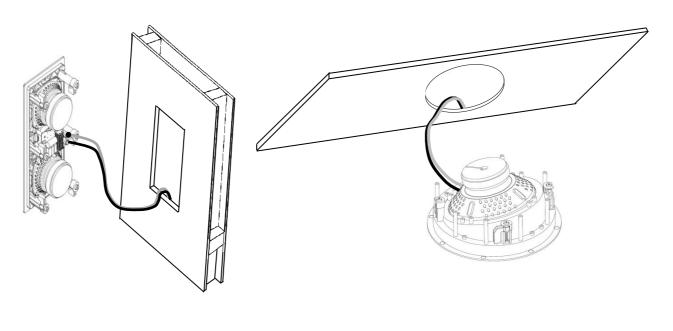



FIG 5. Elite-303
Run 2 Speaker leads to each Left & Right Speaker. (also see FIG 7)

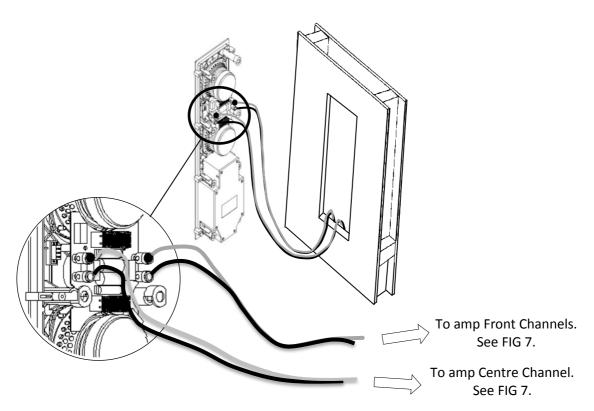

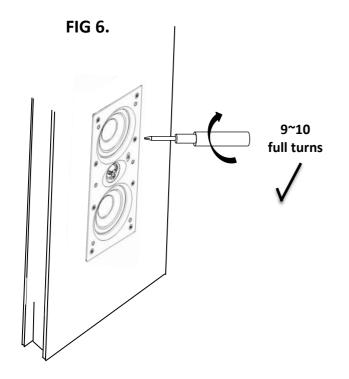


TIPS:

 - 1. 9~10 Full Turns.
- 2. With a screw cutting a new plastic thread, the first few turns may appear stiff. It will become easier.
- 3. The trick is to gently close the gap between Speaker panel and wall.
- **4.** Then NIP THESE SCREWS UP **DO NOT OVERTIGHTEN.**



Elite-303 wiring diagram

Front Channels Left & Right. From Receiver, run 2 Speaker Leads to each LEFT and RIGHT Speaker (see FIG 7). Centre Channels Left & Right. Twist both POS (+) together and connect to POS on amp. Ditto with both NEG (-)

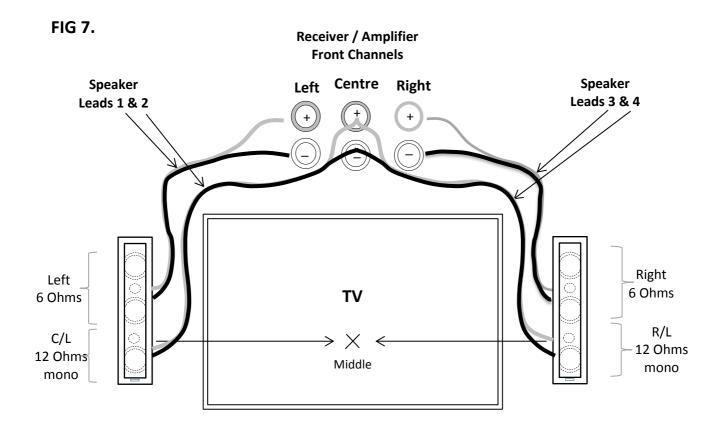

Placement: Only rule is LEFT and RIGHT Speakers to be same distance from TV screen.

	Elite-101	Elite-202	Elite-303	Elite-404
Shape	Square	Rectangular	Rectangular	Round
Suited for	Wall. Front/Rear	Wall. Rear	Wall. Front/Rear	Ceiling. Atmos/Rear
Description	Glass front 6.5" 2 Way 28mm	Glass front Twin 4.5" 2 Way 28mm	Glass front Twin 4.5" 2 Way + inbuilt Twin 4.5" 2 Way Centre Speaker Twin 28mm	Glass front 8" 2 Way with wide sound array 28mm
Tweeter size mm / inches	Pure Silk Dome	Pure Silk Dome	Pure Silk Domes	Pure Silk Dome
Power Handling	110 W RMS	140 W RMS	140 WRMS + 140WRMS	140 W RMS
Nom. Impedance	6 Ohms	6 Ohms	6 Ohms	6 Ohms
Sensitivity	91db	90db	90db	90db
Frequency Resp.	42Hz-21kHz	40Hz-21kHz	40Hz-21kHz	35Hz-21kHz
Min. Mounting Depth mm	85mm	62mm	75mm	140mm
Tweeter Boost switch	NO	YES	YES	NO
Eyeball tweeter	YES	YES	YES	YES
Tweeter Protection	YES	YES	YES	YES
Glass Grille fixings	Magnetic	Chrome Pins	Chrome Pins	Magnetic
Glass Colours	Black / White	Black / White	Black / White	Black / White
Suitable for Stereo H/ Theatre	Both	Both	Home Theatre	Both
Outer Glass Dimensions	240 x 240mm	570 x 163mm	650 x 163mm	287.5mm
Cut-out Template Dimensions	226 x 226	325.5 x 137.5	568.5 x 137.5	256
Warranty	5 Years	5 Years	5 Years	5 Years



www.**jensenspeakers**.com.au

B.D Imports Customer Support:

Ph: 61+ 3 9846 3996 **E-Mail:** info@bdimports.com.au **Web:** www.jensenspeakers.com.au Distributed in Australia & New Zealand by B.D Imports Pty Ltd., Vic. Australia, under license from Audiovox, USA.