



I Unfasten velcro strap



II Lower bottom leg of stand



III Place upper leg of stand into desired height setting




IV Secure with velcro strap



V Anchor ground stakes, if needed, for additional stability

Keep **The Golf Target** upright or lay flat when not in use – to maintain optimal shape.

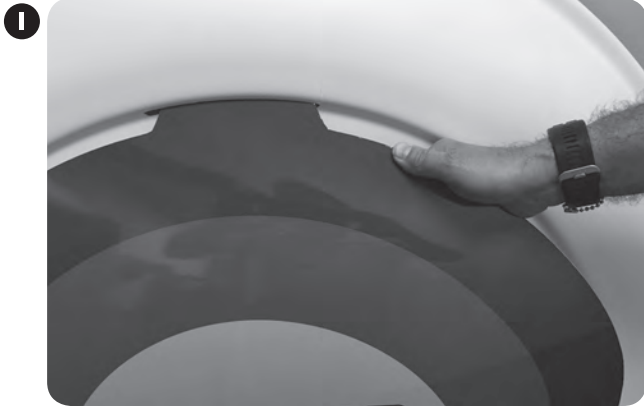

I Lift the Graphics Panel by the edge and bend until top tab comes out



II Repeat for the bottom tabs



III To replace, insert one bottom tab



IV Bend Graphics Panel to insert other bottom tab



V Finally, bend to insert the top tab