

LINEAR RGBW WALL WASH INTERNAL SETTINGS

USE UP / DOWN BUTTONS TO SELECT MODE

PRESS MENU BUTTON TO ACCESS MODE SETTING

USE UP / DOWN BUTTONS TO ADJUST MODE SETTING

PRESS MENU BUTTON TO RETURN TO MODE SELECTION

| MODE | MODE SETTINGS |
|-------------|--|
| A-1 | FUNCTION - PREPROGRAMMED 7 COLOR FADE-IN / FADE-OUT CYCLE * |
| | PRESS MENU. Use UP / DOWN buttons to set speed of Fade-In / Fade-Out Cycle |
| A-2 | FUNCTION - PREPROGRAMMED 7 COLOR FLASH CYCLE (NO FADE-IN / FADE OUT)* |
| | Press MENU. Use UP / DOWN buttons to set speed of Flash Cycle |
| A-R | FUNCTION - ADJUST LEVEL OF RED SATURATION |
| | Press MENU. Use UP / DOWN buttons to set the level of RED light displayed |
| A-G | FUNCTION - ADJUST LEVEL OF GREEN SATURATION |
| | Press MENU, Use UP / DOWN buttons to set the level of GREEN light displayed |
| A-B | FUNCTION - ADJUST LEVEL OF BLUE SATURATION |
| | Press MENU, Use UP / DOWN buttons to set the level of BLUE light displayed |
| A-U | FUNCTION - ADJUST LEVEL OF WHITE SATURATION |
| | Press MENU, Use UP / DOWN buttons to set the level of WHITE light displayed |
| A-D | FUNCTION - ADJUST BRIGHTNESS |
| | Press MENU, Use UP / DOWN buttons to set the brightness level (001-Low / 255-High) |
| A-5 | FUNCTION - STATIC COLOR FLASH-ON / FLASH-OFF |
| | Press MENU. Use UP / DOWN buttons to set speed of Static Color Flash Cycle (000-) |
| ADR | FUNCTION - DMX ADDRESS (SET FOR USE WITH DMX CONTROLLER) |
| | Press MENU, Use UP / DOWN buttons to set DMX ADDRESS (001-MASTER / SLAVE) |

***PREPROGRAMMED COLORS - RED, GREEN, BLUE, YELLOW, CYAN, PURPLE, WHITE**