

Stand-Aid Sling Washing Instructions

The sling should be inserted into a washing/laundry bag prior to being placed into the washer. This is to prevent any unusual wear and tear of the sling by the agitator and/or other parts of the washing machine. Please follow the following instructions for washing:

- Use mild detergent
- Set washing machine to Warm wash/cold rinse cycle
- Do not dry on steam pipes, conventional heaters, wood stoves, or other similar devices
- Tumble dry on air/fluff cycle only, or hang dry
- Do not use chlorine based bleach
- Do not dry clean