

Quick Start Guide: Aquafire Lite Series

Install Aquafire Lite Into Its Enclosure Remove the top plate. Connect the 24V power adapter (located on the back side of the unit). Install Aquafire Lite into its housing, as shown in example below. Reinstall the top plate of the fireplace and install is complete.

2. Fill Aquafire Lite With Tap Water

Option 1: with Automatic Pump

- Place the filter end of the fill tube in your water source.
- Connect the other end of the fill tube to the water inlet port.
- 3 Press and hold the "B1" button for 5 seconds to begin fill.
- 4 The pump will stop automatically when the tank is full.

Option 2: with Remote Control

- Place the filter end of the fill tube in your water source.
- Connect the other end of the fill tube to the water inlet port.
- 3 Press and hold the 'filling' button on the remote for 5 seconds to begin.
- 4 The pump will stop automatically when the tank is full.

ON/OFF B1 Only of the state of

3. How to Pair Remote

- Press and hold the Power button on the unit for 5 seconds or until the button will begins flashing.
- 2 Press any button on the remote, you will hear a beep.
- Beep confirms the control is paired to the fireplace unit.



4. How to Drain Fireplace

- Prepare a water buck under the bottom of the device.
- 2 Remove the drain plug located under the fireplace.

