



# Shoulder Rig for Sony a7R II, a7S II, & a7 II

---

FC-A7RS-RIG

INSTRUCTION MANUAL



All rights reserved

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## INTRODUCTION

Our Filmcity Shoulder Rig for Sony a7R II, a7S II, & a7 II (FC-A7RS-RIG) is a new definition of camera rigs and is a dynamic piece of equipment that moves with the camera operator. It's not static like a tripod and it gives the filmmaker flexibility of movement which can really help to increase efficiency during production. It is a complete modular, fully-adjustable, camera-specific shoulder rig.

## IN THE BOX



## ASSEMBLING the cage

- Attach the sliding base plate with the quick release plate of your tripod head.



- Slide-in the rod adapter into the sliding plate and lock it.



- Attach the camera with cage. Tighten it with the help of screw driver .



- Attach the Quick release plate of rod adapter with cage and tighten it.




- Insert 300mm female threaded rods into the rod adapter.



- Now slide the handle into the top of cage & tighten the knob.



**Note:** The direction of the handle can be adjusted .Loosen the screw with the help of screw driver to adjust the direction of handle or to mount it sideways.

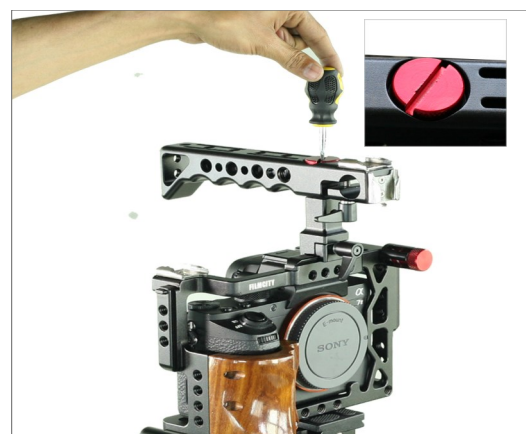



- Attach the front handle bracket clamps with the bracket, attach it with the rods and secure it properly with the help of allen key.



**Note:** The front handle bracket clamps are the ones with allen bolts.



- Now insert front handle rod into the front bracket and secure it properly with the help of allen key.



- Screw the handle into the handle clamp and insert the handle into the rod.



**Note:** The front handle bracket clamps are the ones without allen bolts



- Attach the Straight bracket to the end of the rods and secure it properly with the help of provided knob.




- Now insert the 300mm female threaded rods into the straight bracket and tighten the knob to secure properly.



- Attach the shoulder pad and counterweight into the rods and secure it properly with the help of provided knob.



**CABLE CLAMP**

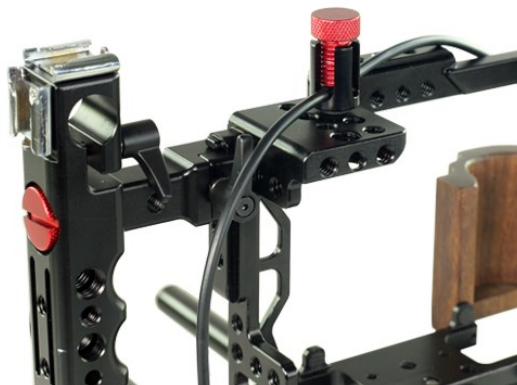

**Exclusive** of cable

**YOUR Filmcity Shoulder Rig for Sony a7R II, a7S II, & a7 II  
ALL DRESSED UP AND GOOD TO GO**



**(SHOWN WITH OPTIONAL ACCESSORIES)**

## **WARRANTY**

We offer a one year warranty for our products from the date of purchase.

We will repair or replace your product, free of charge, in the event of a defect in materials or craftsmanship obtained during normal use or handling based on the user manual. Please note that we will not cover any shipping costs for returning the product to us. If any VAT or import duties are applied to the return, we will also charge these costs to the customer.

The warranty does not include, by the way of example, damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product , or service by anyone other than our company.

We are not liable for incidental or consequential damages resulting from the use of the unit or occurring due to any breach of this warranty.

Replacement parts of the product will be provided at nominal cost (covering the cost price of the replacement parts only) to the customers after the Warranty Period has expired. We will cover the complete cost of sending replacement parts within the warranty period. After that, Nominal cost of the product & Actual shipping cost will be charged.

Do not send the unit to us without first getting a response and getting the approval to send back the item.

In case of any kind of dissatisfaction, we urge you to **Contact us** immediately and we shall do our Best to help you out. For any other assistance you can reach us via email.

For any other assistance you can reach us via email.