

# PR $\rightarrow$ AIM Wigo Portable Camera Slider (SL-WG-9)

## Assembly Manual



### ■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Wigo Slider 9"



Storage Pouch

---

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## Camera Slider 9" Setup

- Mount the Wigo slider onto the tripod and rotate it till it's tight. Attach your fluid head (**Not-Included**) onto the camera platform. Again, turn it till it's tight.



- Attach your camera to the fluid head and tighten the knob to secure it properly.

**NOTE:** You will see the marks on the width side of the slider. We recommend keeping the marks facing towards you for more effortless operation.



- There is a friction adjustment knob underneath the slider; rotate it towards (+) to increase the friction and get a more smooth speed without instant speed drops.

**NOTE:** You can adjust the friction to the positive and negative sides.



- The other side of the slider has a knob underneath to lock and unlock the slider.

**NOTE:** You can lock the slider by rotating it towards the lock icon and turn it to the other side to unlock it.

**CAUTION:** We strongly suggest keeping your slider locked when you are not using it.



- The slider has rubber feet to place it on a flat surface.

**SUGGESTION:** You may face alignment problems with some heads because of the center of gravity problem. In that case, we suggest using Z Desktop Stand head. In addition, with Z-tilt's flexible design, you can shoot extreme tilt-ups and downs without falling down the system front or back.



- Adjust the right amount of friction and operate the slider not by your hands but with the whole body. This will have a much better steady speed on your slider. The camera platform should not have any play in it. If you feel it has a little play, slightly loosen the four screws on top of the camera platform, hold the plate from the sides and re-tighten the screws.



**NOTE:** Do not put much pressure on the sides, and do not over tighten the screws.

## YOUR PROAIM WIGO PORTABLE CAMERA SLIDER ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.