PART NUMBER ACC-522


## OUTLAND LIVING.

# **FIRE TABLE**GLASS WIND BREAK

## OUTDOOR LIVING PERFECTED®

#### **COMPATIBLE WITH OUTLAND LIVING FIRE TABLE MODELS:**

тіск	SERIES NAME	MODEL NUMBERS	SERIES NUMBERS
	OUTLAND FIRE TABLE	FMPPC2E-420	420

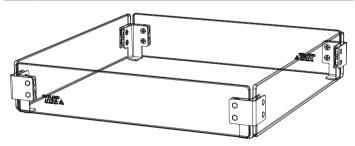

 ${\it \textcircled{@}}$  is a registered trademark of FMI Brands Inc. The OUTLAND flame is a registered trademark of FMI Brands Inc.

D.522.000.V2



#### FMI BRANDS INC.

101 – 3570 194 Street, Surrey, BC, Canada V3Z 1A5
Toll Free: 1-888-514-1663 | Email: info@outlandliving.com
Hours of Operation 8:30AM - 4:00PM (Pacific Time)



#### **SUPPLIED PARTS & HARDWARE LIST**

PART NUMBER	DESCRIPTION	PART
1	GLASS WALL WITH LOGO (x2)	0 0
2	GLASS WALL WITH NO LOGO (x2)	0 0
3	EXTERIOR BRACKET (x4)	
4	INTERIOR BRACKET (x4)	



PART NUMBER	DESCRIPTION	PART
5	SPACER (x16)	
6	M5 x 8 SCREW (x16)	
7	GLASS WIND BREAK MOUNTING BRACKET (x2)	
8	M6 x 16 SCREW (x4)	


## **REQUIRED TOOLS (Not Supplied):**

Philips (cross) screwdrivers (PH2 & PH3)

#### **ASSEMBLY INSTRUCTIONS**

#### STEP 1

ENSURE THE ORIENTATION OF THE GLASS PANELS WITH LOGO IS CORRECT.

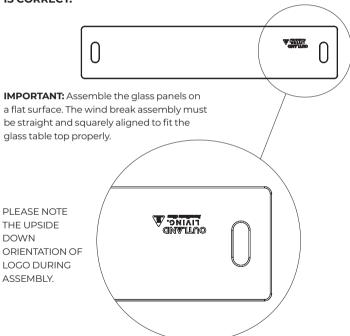




#### STEP 2

#### ASSEMBLE GLASS PANEL CONNECTING BRACKETS

For each bracket assembly:

- a. Press Spacers (Part 5) over studs on Exterior Brackets (Part 3).
- b. Repeat for each bracket (4 times).

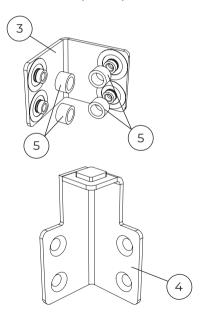


#### STEP 3

#### ASSEMBLE THE GLASS WIND BREAK

There are 4 sets of Glass Panel Connecting Brackets to install.

- a. Assemble the glass wind break on a flat and even surface.
- b. Insert Exterior Bracket (Part 3) studs through the spacer slots on the Glass Panels (Part 1 & 2).
- c. \*\*LOOSELY\*\* Assemble Interior Brackets (Part 4) to the Exterior Brackets (Part 3) using M5x8 Flat Head Screws (Part 6) - do not tighten screws.
- d. Once all 4 brackets are loosely assembled tighten the screws. Ensure the glass panels are straight and squarely aligned.



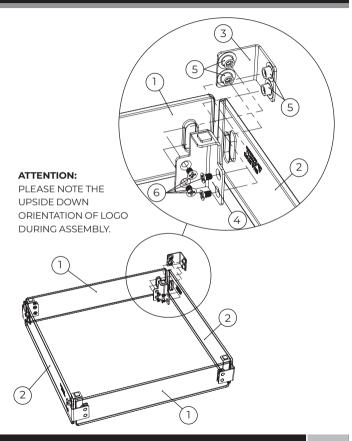




#### STEP 4

Turn glass wind break over so that the logos are right side up.

Your Glass Wind Break is now assembled.

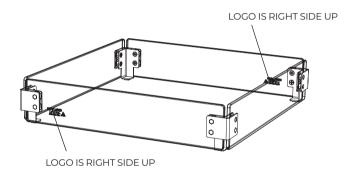




#### STEP 5

Place Glass Wind Break on OUTLAND Fire Table.

**ATTENTION:** If the wind break doesn't sit flat on the tabletop, please follow the following steps to adjust it:

- Place the wind break assembly on a flat work surface.
- Loosen (do not remove) all bracket fasteners.


Now, tighten all fasteners again, one at a time, ensuring the bottoms of the glass panels are all contacting the work surface.

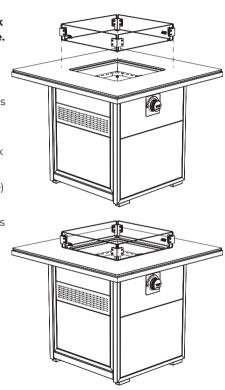

#### STEP 6

#### INSTALL GLASS WIND BREAK MOUNTING BRACKETS

a. Lift away the removable side panel on the left side of the gas knoh

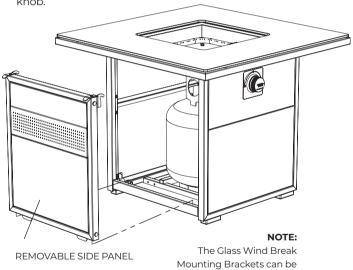


installed only on the left side.



b. Locate the screw holes at the bottom of the tabletop crossbeam.



- c. Align the screw clearance slots on the Glass Wind Break Mounting Brackets with the screw holes at the bottom of the tabletop crossbeam.
- d. Install the Glass Wind Break Mounting Brackets using M6x16 Screws.

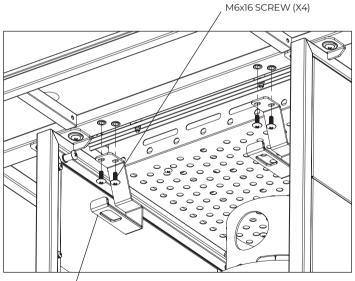


GLASS WIND BREAK MOUNTING BRACKET (X2)



## STEP 7 STOWING THE GLASS WIND BREAK

a. Place the Glass Wind Break on the Glass Wind Break Mounting Brackets.

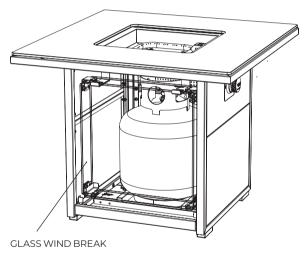

#### **MAINTENANCE**

Simply use warm soap water to wipe down your glass wind break to keep it clean.

Do not use abrasive cleaners.



#### DANGER:

Glass Wind Break will become extremely hot during operation! DO NOT TOUCH GLASS WIND BREAK while fire table is in operation!



WARNING! HOT SURFACE!



GLASS. FRAGILE!



HANDLE WITH CARE





## <sup>∕!</sup>\ WARNING:

This is NOT a toy.

Do not place ANY cover on the Glass Wind Break while the fire table is in operation.

Do not rest anything on or over the Glass Wind Break while the fire table is in operation.

The fire table is a decorative gas appliance only. NEVER cook food on the fire table. Do not use the Glass Wind Break, or any other type of accessory, as a means to cook or keep food warm on the fire table.

Wait at least 30 minutes after turning off the fire table to allow it to cool down before touching Glass Wind Break or putting ANY cover over the fire table.

Please ensure that all adults and children which use or are near a unit in use are aware of the hazard of high-surface temperatures present on the unit during use and should use caution and stay away to avoid burns or clothing ignition.

Children should be supervised at all times when using this unit without exception.



#### Do not return this product to the store.

If you need help or parts, call the OUTLAND Hotline: **1-888-514-1663**Get help for:

- Missing/damaged parts · Assembly · Troubleshooting
   Warranty Assistance · Product Information
- · warranty Assistance · Product Information

#### 1 YEAR LIMITED WARRANTY - Customers in Canada and USA

All components are warranted by the manufacturer for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At FMI Brands' sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to FMI Brands must be sent via prepaid freight and in the original retail packaging.

Please register your OUTLAND Living product for proof of purchase and warranty at https://outlandliving.com/register-products/

For more warranty information and details please contact FMI Brands Inc. at **info@outlandliving.com** 

FOR REPLACEMENT PARTS AND ACCESSORIES PLEASE VISIT

#### WWW.OUTLANDLIVING.COM

The owner's manual is available as a free download from www.outlandliving.com.

Should you have any questions or comments regarding this appliance, please do not hesitate to contact FMI Brands Inc. at (888) 514-1663 or E-Mail to info@outlandliving.com.