


# OUTLAND LIVING®

## FIRE TABLE LID AND MOUNTING BRACKET KIT

OUTDOOR LIVING PERFECTED®

### COMPATIBLE WITH OUTLAND LIVING FIRE TABLE MODELS:

TICK	SERIES NAME	MODEL NUMBERS	SERIES NUMBERS
<input type="checkbox"/>	OUTLAND FIRE TABLE	FMPPC2E-430, FMPPC2E-435	430, 435

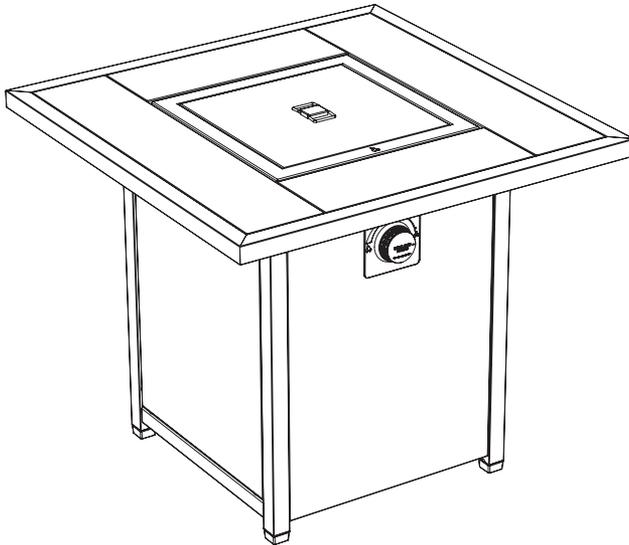

® is a registered trademark of FMI Brands Inc.

D.537.000.V0






#### FMI BRANDS INC.

101 – 3570 194 Street, Surrey, BC, Canada V3Z1A5

Toll Free: 1-888-514-1663 | Tel: (+1) 778-294-0988 | Email: [info@outlandliving.com](mailto:info@outlandliving.com)

Hours of Operation 8:30AM - 4:00PM (Pacific Time)

**SUPPLIED PARTS & HARDWARE LIST:**

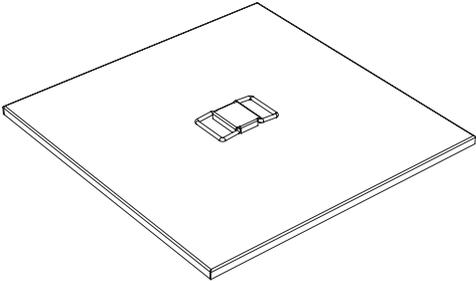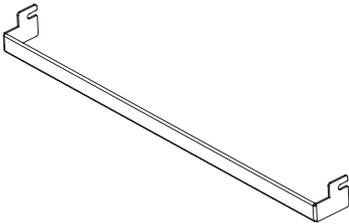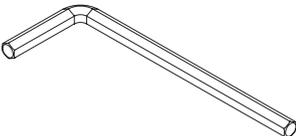PART NUMBER	DESCRIPTION	PART
1	LID (x1)	
2	MOUNTING BRACKET (x1)	
3	M4x6 SOCKET HEAD CAP SCREW (x4)	
4	HEX KEY TOOL (x1)	

**REQUIRED TOOLS (Not Supplied):**

Phillips (cross) screw driver (PH2)


## ASSEMBLY INSTRUCTIONS

### **WARNING:**

Make sure the fire table is off and has cooled down for at least 10 minutes before performing this installation. Never attempt this installation with the table in operation, or while it is still hot.

### STEP 1

Lift away removable panel and take out cylinder.

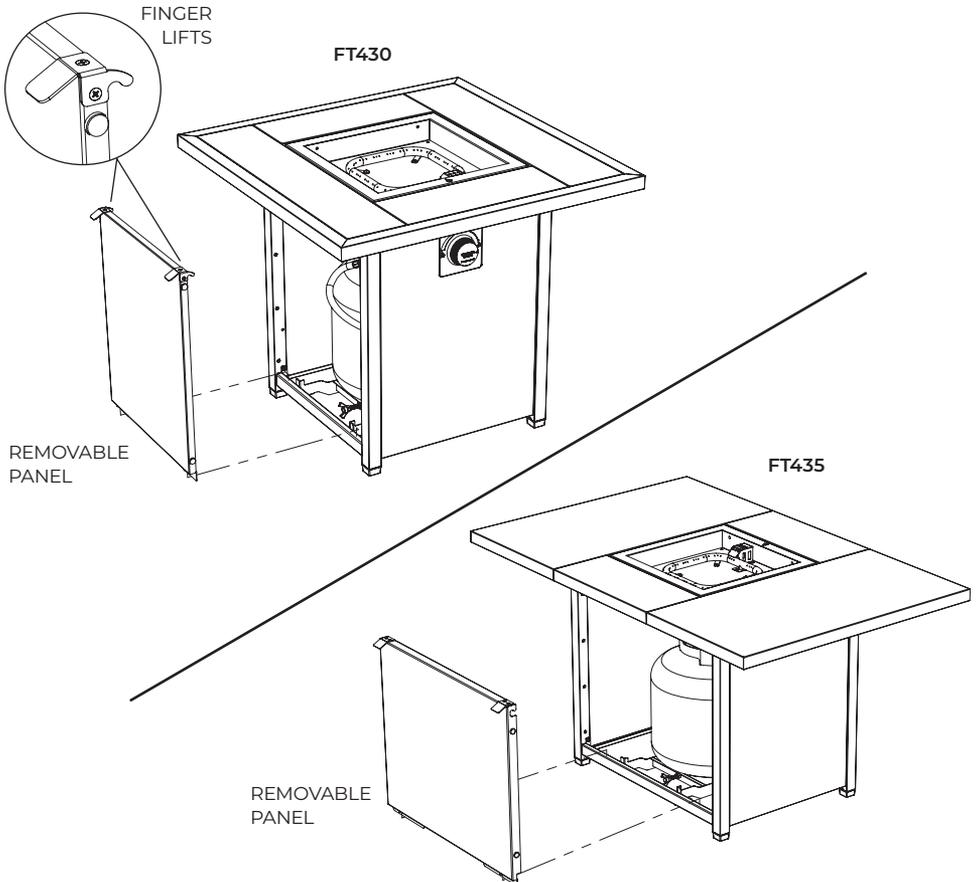


**ASSEMBLY INSTRUCTIONS (continued)**


**NOTE:** The following steps are applicable to both FT430 and FT435.

**STEP 2**

Locate mounting screws.

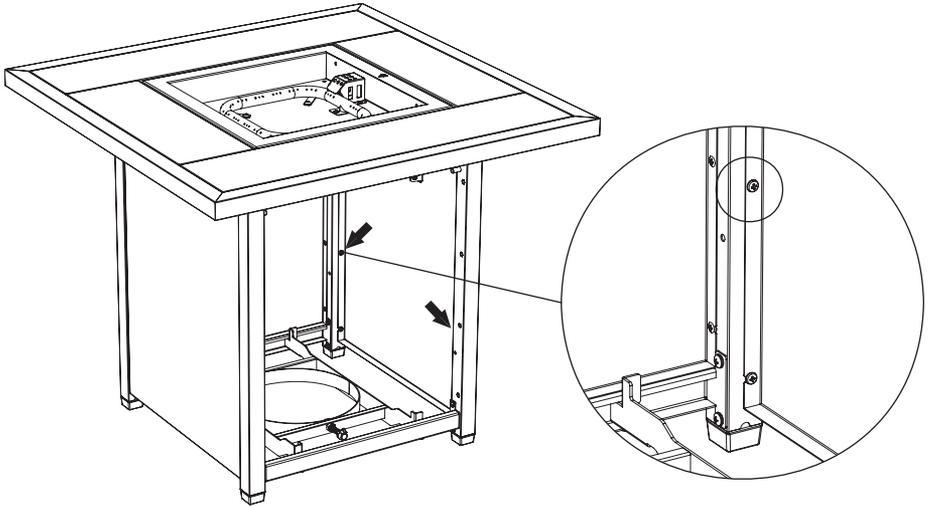


TIP: You can choose to install the mounting bracket on either side

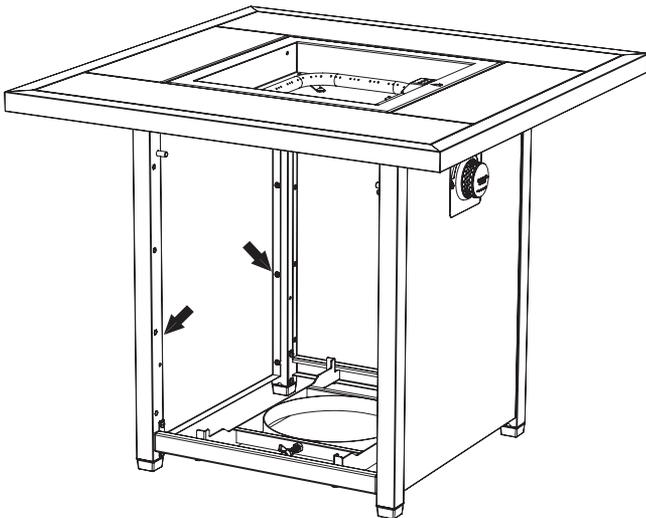

### STEP 3


Loosen mounting screws.

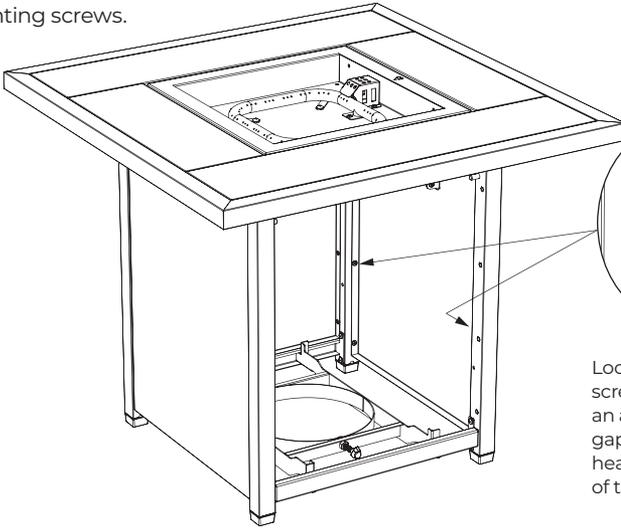

Loosen the screws with a screwdriver until there is an approximately 3 mm gap between the screw head and the side flange of the panel.

### STEP 4


Install mounting bracket.

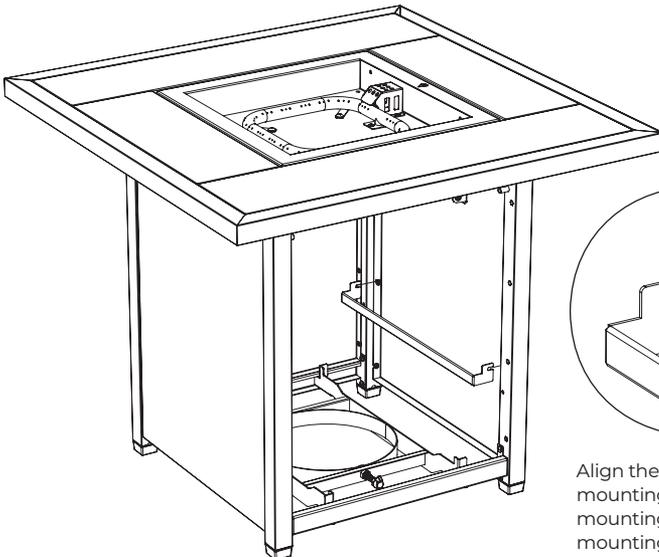

Align the open slots of the mounting brackets with the mounting screws. Push the mounting bracket forward until it can't move further in. Tighten both mounting screws.

**STEP 5**


Install M4x6 socket head cap screws on burn tray.

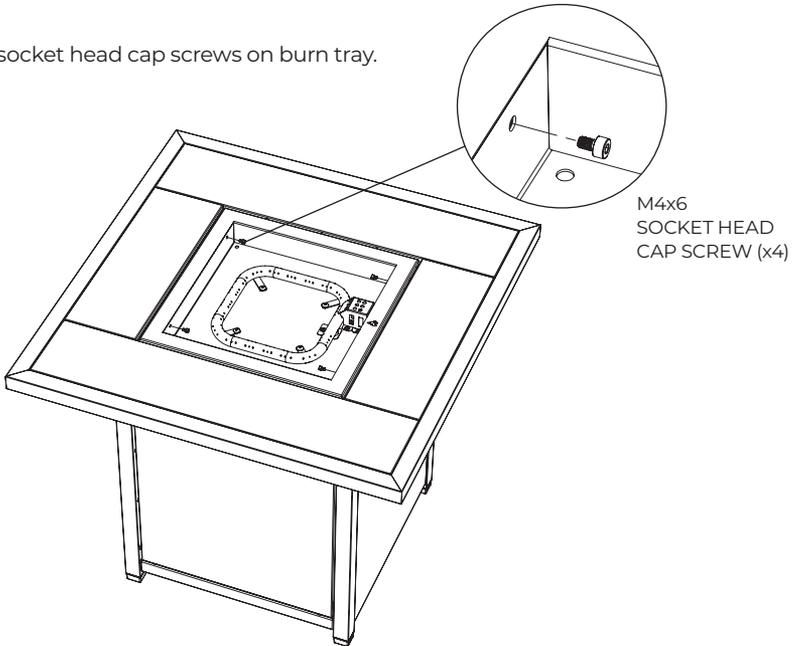

**STEP 6**

Place lid inside mounting bracket.

Finished!

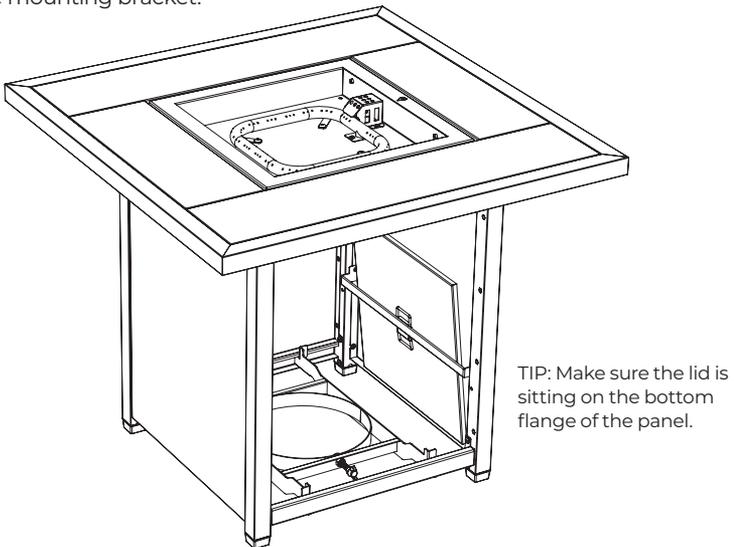


## DEPLOYMENT

Place lid on top of OUTLAND Fire Table.



### **DANGER:**

Only place lid on top of Fire Table when the Fire Table is not in use. See Warnings section below for further detail.

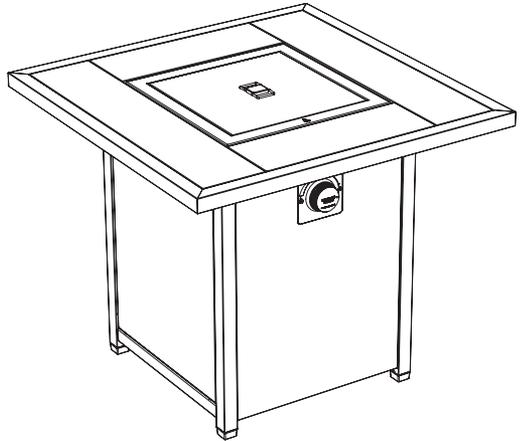

**Note:** It may be necessary to adjust the position of glass rocks to have the lid sit flush on the fire table.



### **WARNING:**

Glass rocks may have sharp edges and glass dust may leave slivers. Always use gloves, or a tool utensil, to adjust glass rocks.

## STORAGE

To store your lid while the Fire Table is in use:

1. Lift away the removable panel to access the compartment.
2. Locate the lid mounting bracket.
3. Slide the lid in the mounting bracket, make sure the lid is sitting on the bottom flange of the panel. Done.



### **CAUTION:**

Avoid hitting the gas valve in the process!

## REMOVAL

To remove the lid:

1. Lift the lid up and away from the mounting bracket.
2. Pull lid out.



### **CAUTION:**

Avoid hitting the gas valve in the process!

## MAINTENANCE

Simply use warm soap water to wipe down your lid to keep it clean.

Do not use abrasive cleaners.

**WARNING:**

This is NOT a toy.

**DANGER:** Remove the lid PRIOR to lighting the Fire Table.

Do not place the lid, or have ANY cover, on the fire table while the fire table is in operation!

The fire table is a decorative gas appliance only. NEVER cook food on the fire table. Do not use the lid, or any other type of accessory, as a means to cook or keep food warm on the fire table.

Wait at least 30 minutes after turning off the fire table to allow it to cool down before placing lid, or ANY other cover, over the fire table.

Please ensure that all adults and children which use or are near a unit in use are aware of the hazard of high-surface temperatures present on the unit during use and should use caution and stay away to avoid burns or clothing ignition.



**WARNING!  
HOT SURFACE!**

**Children should be supervised at all times when using this appliance, without exception.**

**1 YEAR LIMITED WARRANTY – Customers in Canada and USA**

All components are warranted by the manufacturer for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At FMI Brands' sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to FMI Brands must be sent via prepaid freight and in the original retail packaging.

Please register your OUTLAND Living product for proof of purchase and warranty at  
<https://outlandliving.com/register-products/>

For more warranty information and details please contact FMI Brands Inc. at  
[info@outlandliving.com](mailto:info@outlandliving.com)

**FOR REPLACEMENT PARTS AND ACCESSORIES PLEASE VISIT  
[WWW.OUTLANDLIVING.COM](http://WWW.OUTLANDLIVING.COM)**

The owner's manual is available as a free download from [www.outlandliving.com](http://www.outlandliving.com). Should you have any questions or comments regarding this appliance, please do not hesitate to contact FMI Brands Inc. at **(888) 514-1663** or E-Mail to [info@outlandliving.com](mailto:info@outlandliving.com).