

WHAT YOU WILL NEEDP

Phillips Screwdriver (Not Included) USB to Micro USB Cable (Not Included) Flashlight (Not Included)

Windows PC/Laptop (Not Included)

ARGADE Pinball Machine



DO NOT USE A DRILL

Unplug the power cable.





Locate the small hatch behind the lower portion of the pinball machine



Using a Phillips Screwdriver, unscrew the 4 screws to remove the hatch.





Step 3



Reach under the left side of the PCB box, you will feel a switch.

Flip the switch away from you, away from ON.



Using a flashlight, locate the Micro USB port on the PCB box, next to the HDMI cable.





Plug the Micro USB cable into the Micro USB port.







Plug the power cable back into the pinball machine.





Step 7

Download and install the PhoenixPro software from the link provided.



Download and unzip the build files from the link I provided.

Open the Phoenix Pro software





Click on Image at the top of the software.

PhoenixUSBPro_V_4.0.0		
Jaage Debu	ugView 🥳 Start 🟹 Help	board without battery
Taxes [C_Ulfsare).co. gi (Besktop)2	0201117_pinball_svp_relexse_1920x1000_16_56\2020	1117_pinball_svp_relesss_1920x1000_16_5b_ing
Devicel	Device2	Device3
Serial:	Sental	Serial:
Status.	Status:	Statua:
Progress:	Progress:	Progress:
Device4	Device5	Device6
Serial:	Senal	Senal:
Status:	Status :	Status:
Progress:	Progress:	Progress:
Device?	DeviceS	Statistics
Serial:	Senal	Souers 0
Status:	Status:	Failed 0
Progress:	Progress:	Total 0

Easy Wizard

1. Install the USB Mub before run the starg. And Could't Plugin any device and Mub!

2. Select the key file and image file. Then start

3. When the light turn green, please plugin a new device. Don't plugin a device when the light turn read

4. Don't Plug out any device when it in processing state. You can plug out any deivce Accord to the ID of device

Navigate to the folder where you unzipped the build file.



	PhoenixPro Manage — 🗆 🗙	
PhoenixUSBPro_V_4.0.0	Chara Minu Charlestan Taale Analysian Taale A	×
🐊 Inage	🕞 DebugView 🚀 Start 🟹 Help 📩 Update 🎉 Exit requi	t(Don't shesk for PCBA I without battery. Chesk red with battery)
Image [C:\Users\ser	gi\Desktop\20201117_pinball_svp_release_1920x1080_16_5b\20201117_pinball_svp_release_1920x1080_16_5b.ing	
工作台	G Open ← → ✓ ↑ ■ > This PC > Desktop >	✓ Č Search Desktop
Device1 Serial:	Organize - New folder	
Double		
Doubic	20201117_pinball NA PhoenixPro	
click th	swp_release_192 0x1080_16_5b	
build fol	dor	
	UEI	
Progréss:	File name	V Image Files (*.)
Easy Wizard 1. Install the USB H		Open
2. Select the key fi	le and image file. Then start	
3. When the light tu 4. Don't Plug out an	rn green, please plugin a new device. Don't plugin a device when the light turn read y device when it in processing state. You can plug out any deivce Accord to the ID of device	

Step 12









Click Start at the top of the Phoenix Pro screen

	🔚 🕑 📑 🛛 PhoenixPro Manage	×	
Click Start	anna USB'ng V 4.0.9 3 ange Stategy St	😵 Start 🙀 Halp 🛔 Nydate 1999 - 1999 - 1990 - 1995 - 19900 - 19900 - 19900 - 19	Ant - Debert Da't check for 724. issel withest battery. Cash required with statery. lease_1920;1200;15,5 kg
	Ifte		
	Invited	Derive?	Terice)
	Send:	Setal.	Sent:
	Status	Status:	Satu:
	Progress:	Program:	Progress.
	Deviced	Jerice5	Invited
	Serul	Setal	Senit
	Satur	Status	Status
	Pogess:	Propriet	Progress.
	Derice?	Derice8	Statistics
	Secial:	Senal	Seven 0
	Salar:	Satur	Fulled 0
	Progress		Total 0
	Every Viewel 1. Install the USE Mob before run the store	The red X ۱	will change
	3 When the light turn green, please plugin a	to a green	check mark
	4.Don't flug out may device when it in proce	to a green	check mark



	📑 🖸 🧧 🛛 PhoenixPro 🛛 Manage	- 🗆 ×	
lick Start	au USB va V 40.0	5 tep	Regional regions and the set state of the set of the se
Is	8		V
Der	icel	Derice2	Perice3
50	54.	Serial	Sent.
24			Satur
Pi I	gress.	Pogess:	Progress
Der	iceá	DericeS	Dericed
50	set.	Senal	Senit
.34	Arc	Sotus:	Satur
Pre	gess	Pogess.	Progress.
Inv	ies?	Dericul	Statistics
Se	96.	Senal	Sesses 0
34	A.E.	Status	Failed 0
	2005	-	Titul 0
Easy 1 2	Wourd Install the USD Mob before run the storp Salect the key file and image file. Then a	The red X v	vill change
3	When the light turn green, please plogin a Don't flug out any device when it in proce	to a green d	neck mark

Power ON the pinball machine



Step 16

Phoenix Pro will begin the flashing process.

hoenixUSBPro_V_4.0.0		
Touge Dabugfier	Step Kelp	Tylas Ref Lit Control of the set
L作台 Textical	Derior	Texteel
Senial: 8EA33D26-C067-417a-8A59-78748F24A684	Serial.	Serial:
Status: down download1	Status:	Status:
Progress: 331	Progress:	Progress:
Berice4	Device5	Terice6
Senal:	Senal	Senal:
Status:	Status:	Status:
Progress	Progress:	Progress:
Device?	DericeS	Statistics
Serial:	Serial:	Scuess 0
Satur.	Status:	Failed 0
Promotion .	Progress:	Iotal O

2 Select the key file and image file. Then start

3. When the light turn green, please plugin a new device. Don't plugin a device when the light turn read

4. Don't flug out any device when it in processing state. You can plug out any deivce Accord to the ID of device

Do not disconnect any cables or close any programs while running the update. Do not power off the machine

The process is complete when Status and Progress reach 100%

🖗 Step 🔌 Help 🛃 Update 1993–1944–1980–1000_16_55/20001117_pinball_svp_re	Lesse_1920st1000_16_5b.ing
	1
Device2	Device3
300	
Status:	Status:
Progress:	Progress:
Device5	Jevice6
Senal:	Serial:
Status:	Status:
Progress:	Progress:
DericeS	Statistics
Serial:	Scuess 1
Status:	Failed 0
	Total 1
	Free No.1 (6,1) (6,1) syngardness_19951093_10_05/0000117_picklway.re (6,1) (6,1) Secied (6,1) (6,1)

When the process is complete, click Stop at the top of the Phoenix Pro screen.

	I 🖸 🛄 🖛 PhoenixPro Manage	×	
inoenix USB	In sge and see gi Usesktop (202 112 min.h.1)	Step Welp 🛃 Welate 1990, 100_16_55/20201117_pinbell_svp_re	Esit Bebout(Bun't check for board without battery, required with battery)
L 作台			1
Device1		Device2	Device3
Serial:	8EA33D26-C067-417a-8A99-78748F24A684	Setal	Serial:
Status:	Crist (CAC= 131Ae)	Status:	Status:
Progress.	1925	Progress:	Progress:
Device4		Device5	Device6
Senal:		Senal	Serial:
Status:		Status:	Status:
Progress:		Progress:	Progress.
Device7		Device8	Statistics
Serial:		Serial:	Scuess 1
Status:		Status:	Failed 0
0		Percenser	Total 1

Easy Wizard

1. Install the USB Mub before run the starg. And Could't Plugin any device and Mub!

2. Select the key file and image file. Then start

3. When the light turn green, please plugin a new device. Don't plugin a device when the light turn read

4. Don't Flug out any device when it in processing state. You can plug out any deivce Accord to the ID of device

Unplug the USB cable from your Windows PC/Laptop





Power OFF the pinball machine





Reach through the hatch to flip the switch to the ON position



Flip the switch towards you, towards the ON position.



Power ON the pinball machine



The screen will display a spinning icon for about 1 minute, while the update installs.









You can leave the Micro USB cable plugged in for future updates.



Using a Phillips Screwdriver, screw the 4 screws to reattach the hatch.

