

## **NON-DUCTED RECIRCULATION CHARCOAL FILTER(not included)**

This filter not washable, can not be regenerated, and should be replaced approximately every 3 months of operation, or more frequently in the case of heavy usage.

1. To install the charcoal filter(not included),and lock it until the stop click is heard.
2. Install grease filter after charcoal filter(not included) is installed.
3. If choosing recirculation kit, for exhausting air smoothly, please make sure that there is a gap of 20mm at least between the cabinet or chimney cover and the ceiling.

