

INSTRUCTION MANUAL FOR TRIPLE CALENDAR MOONPHASE

CALIBER NO. 6P00 BATTERY: SR621SW


FEATURES : ANALOG MULTI-HAND QUARTZ
WATCH WITH DAY, DATE, MOON PHASE AND
MONTH

INSTRUCTION MANUAL

- A) DISPLAY AND BUTTON
- B) OPERATION PROCEDURE
- C) SETTING THE DAY AND TIME
(HOUR, MINUTE)
- D) SETTING AND READING THE AGE OF
THE MOON
- E) SETTING THE MONTH
(BY QUICK OPERATION)
- F) SETTING THE DATE
(BY QUICK OPERATION)

1

A) DISPLAY AND BUTTON

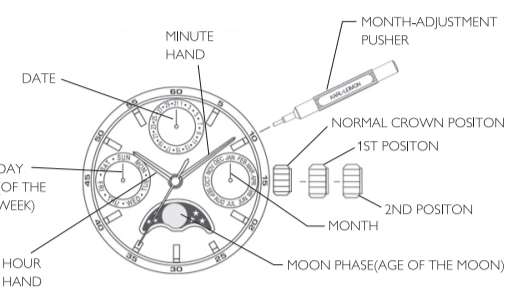

NORMAL CROWN POSITION

- 1ST POSITION** QUICK OPERATION - DATE
(COUNTERCLOCKWISE), MOONPHASE(CLOCKWISE)
- 2ND POSITION** TIME/DAY SETTING (CLOCKWISE)

2

C-1) SETTING THE DAY

Pull the crown out to the 2nd position.
Turn the hour/minute hands in a clockwise direction to
set a day
In order to set the day, you must advance the hour hand
by 24 hours per day.

- Note:**
* **If the day is set by turning the crown counterclockwise, there is the possibility the date will not change over. Do not set the day by turning the crown in counterclockwise direction.**
* **The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.**

C-2) SETTING THE TIME

After setting the day, set the hour (and 24hour) and
minute hands.
Turn the hour/minute hands in a clockwise direction to

4

D) SETTING AND READING THE AGE OF THE MOON

* The moon phase represents the age of the moon, the
actual shape of the moon during each phase is not
represented.

* Use the moon phase only as a guide to the age and
phase of the moon when reading and setting watch.

D-1) SETTING THE AGE OF THE MOON

Pull the crown out to the 1st position.
Turn the crown clockwise to advance the moon phase.

D-2) SETTING THE AGE OF THE MOON WITH AGE SCALE

* Check on the age of the moon for the day. Check the
newspaper or other source for the age or phase of the
moon for today or tomorrow. Subtract one day before a

6

average period from a new moon to the next new moon
is equivalent to about 29.5 days.

D-4) READING THE AGE OF THE MOON

New moon Moon's age : 0 Spring tide	First quarter moon Moon's age : 7 Neap tide	Full moon Moon's age : 15 Spring tide	Last quarter moon Moon's age : 22 Neap tide

- * From the phase of the moon in the display, you can tell
the size of the tide.
- * If you want to set more accurately the phases of the
moon, we recommend to set it at the time of a New
Moon (The Moon is hidden in the display...New Moon)
or a Full Moon (The Moon appears fully in the
display...Full Moon).

8

The month hand begins changing to the next month
around midnight of the 30th day. It completes the change
around midnight of the 31st. (On the 31st, the position
of the month between the current and next month.)

F) SETTING THE DATE (BY QUICK OPERATION)

Pull the crown out to the 1st position. Turn the crown
counterclockwise to set the date quickly.

- Note:**
Do not set the date between the hours 9:00p.m. and 0:30a.m.. The date may not change correctly the next day.

10

B) OPERATION PROCEDURE

- 1 SETTING THE DAY
SETTING THE TIME (HOUR, MINUTE)
- 2 SETTING THE MOON PHASE
- 3 SETTING THE MONTH
- 4 SETTING THE DATE

C) SETTING THE DAY AND TIME (HOUR, MINUTE)

The hour, minute and day are set by the same operation.

SETTING PROCEDURE



3

set the time.

To ensure time is set accurately, first turn the minute
hand 5 minutes ahead of desired time and then turn back
(in a counterclockwise) to the desired time.

After setting the time, use a time signal to synchronize
the watch by pushing crown to the normal position.

- Note:**
Make sure you have correctly set AM/PM before setting the time.

When the day changes over, it is a.m..
(Day changes over between 0:00a.m. and 5:30a.m. or little later)

5

setting is made if the listings for tomorrow are used.

* Setting procedure(Example: age of the moon:4.4)

Pull the crown out to the 1st position.

Turn the moon disc clockwise
until the center of the moon is in
line with 4.4 on the scale.



D-3) SETTING THE AGE OF THE MOON WITHOUT THE AGE SCALE

- * Check the newspaper or other source that lists current
age or phase of the moon. Referring to section D)
Reading the age of the moon, set the moon phase to the
age (0,7,15 or 22) closest to the listed.
More accurate setting can be made at the same time of
the new moon (0) or full moon(15).

THE AGE OF THE MOON

The age of the moon is indicated in units of days. The

7

E) SETTING THE MONTH (BY QUICK OPERATION)

Each time the month-adjustment button is pushed, the
month advances one month at a time.

Be sure to press firmly on the button when making
month changes.

- Note:**
* **Do not set the month when the date hand is between the 26th and 31st. Move the date hand out of this period. After this operation, return the date hand to the proper setting. (When the date hand is between the 26th and 31st, month quick setting can not be made or if a quick setting is attempted, the month may not advance to the next month as normal.)**
* **The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct month.**

9

please refer to the following QR code for user's manual



WEB SITE :
karlleimonwatches.com

11