




# CPW (COMPACT PERSONAL WEAPON)

## OWNERS MANUAL

375 FPS

.20gr BB

MADE IN TAIWAN

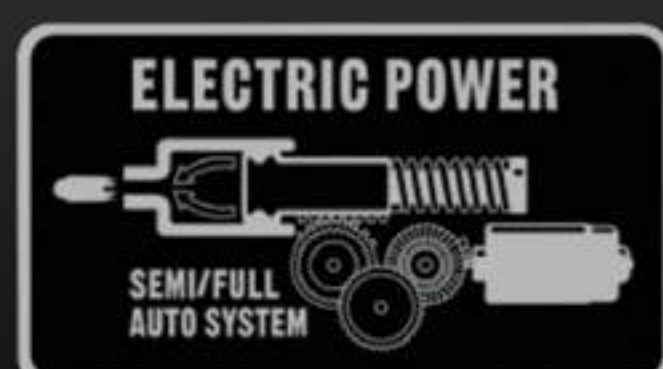

**WARNING:** FOR AGES 18 AND UP. KEEP OUT OF REACH OF CHILDREN. GOGGLES MUST BE WORN AT ALL TIMES. DO NOT REUSE BB'S- DOING SO WILL DAMAGE YOUR GUN. PLEASE READ YOUR AIRSOFT GUN SAFETY MANUAL BEFORE USE. OBSERVE ALL LAWS REGARDING THE USAGE AND OWNERSHIP OF AIRSOFT ELECTRIC GUNS

## 1 Outlook of the C.P.W.




## 2 Specification

### Data of Automatic Electric Gun

Name	Contractor Personal Weapon C.P.W.	
Weight	3.5 kg	
Barrel Length	455 mm	
Barrel Caliber	6.08 mm	
Pellet Capacity	500 Rd	
Pellet	6mm BB	
Feet Per Second	360-375 FPS	
Battery Type	8.4V Stick	



- 1 Press the receiver button and lift up the receiver top

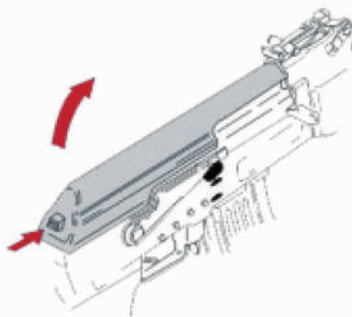


- 2 Install the battery on the space provided. Gently push the wires into the area under the rear sight. The back of the battery will rest against the highlighted wall.


● Battery Sectional View

Make sure the battery is as shown, with the wire facing the left side of the gun.

The protrusion must be on the left side.

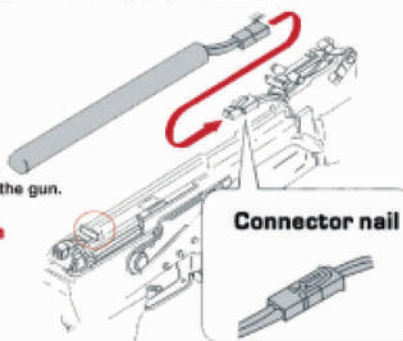


- Press the cord connector being connected in step(2) to the rear, with its nail facing down.

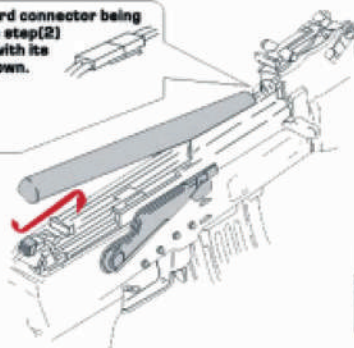

3

Store the battery in the receiver as shown. (Set the battery so that it does not protrude.)

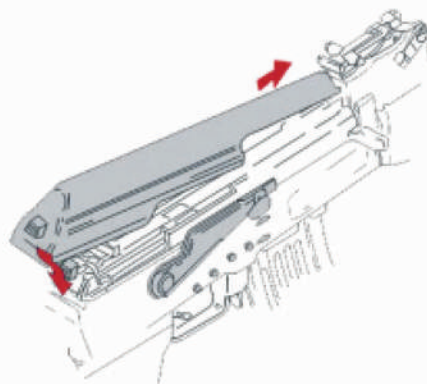

- 4 Reinstall the receiver top in the reverse order of removal procedure in step(1). Align the lead edge of receiver top to the groove under the rear of receiver top, aligning to the groove shown below.

**CAUTION**

When receiver top is set correctly, the catch button ejects out.

**CAUTION** If the cord protrudes, the receiver gunbody cover be closed.



- Store the battery and connector as shown.




**Connector nail**  
For easy positioning, locate the battery cord under the connector.

**CAUTION**

Pay attention so that the cord does not protrude out of the receiver. Forcing in the receiver top may damage the cord and, if the cord is protruding, the receiver top cannot be closed.

### 3 Operation

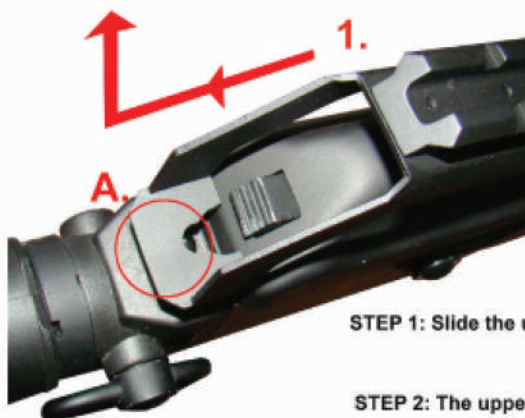

STEP 1: Slide the upper rail backwards and up.

STEP 2: The upper rail will pivot behind the rear sight, once opened you are able to access the dust cover and install the stick battery.



- A. Make sure the locking peg is secure before use.
- B. Do not remove the pivot blot
- C. For easy operation make sure the screws are secure but not loose.




### 2 Magazine Attachment / Detachment Procedure



There are BB pellets remain in the magazine hip and chamber. Please pay attention as BB pellets can't be discharged.



- ① Press the magazine release lever to remove the magazine.

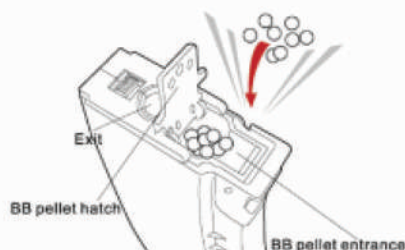

- ② Open the top hatch and insert BB pellets. About 500 pellets may be loaded. (Avoid forcing BB pellets into the magazine.)




- ③ Close the hatch.



- ④ Hold the BB pellets entrance facing up and turn the gear at the bottom all the way until the click-click sounds change. (If only a small number of BB pellets are inserted, the gear merely makes blank turning.)



- ⑤ Check the BB pellets are lifted up to the exit, and then connect the magazine to the gun.

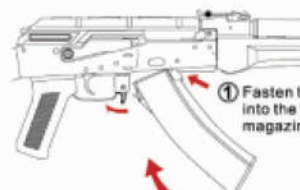


- ⑥ Always set the magazine upward. Align the groove shown by an arrow and press the rear of the magazine.


### ③ How to use the Selector Lever



① Safety Lock

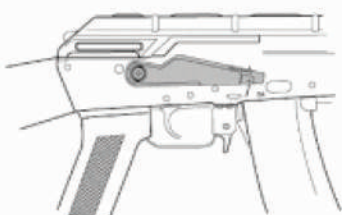


② Full Auto

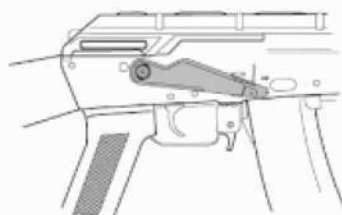

③ Semi Auto

### ④ Hop up system adjustment

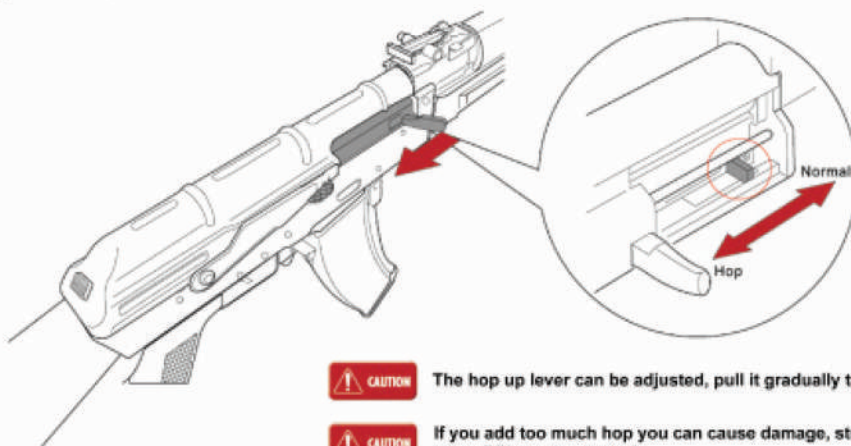


The hop up lever can be adjusted, pull it gradually towards the hop





If you add too much hop you can cause damage, stop adjusting when BB's curve upwards

### ⑤ Sight adjustment

Front Sight :

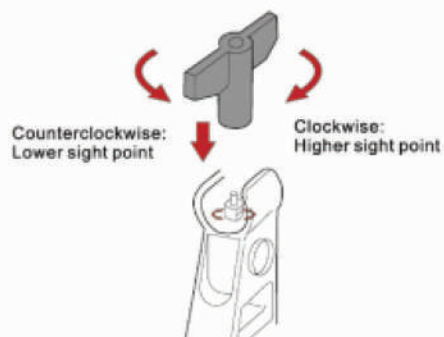



Insert the front sight adjustment tool in the front sight and turn it for adjustment.

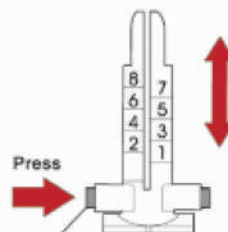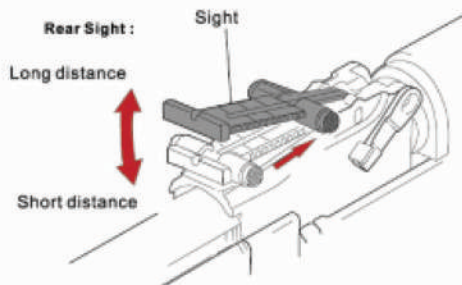

Elevation ( Up/Down )  
adjustment button



## ⑥ How to use a cleaning rod

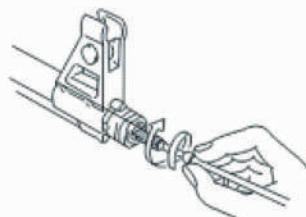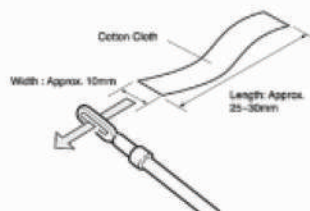

Cut a cotton cloth to the size as shown above and insert one end into the hole in the rod.  
(Adjust the length of cloth for smooth entry into the barrel.)

Hold the tip of the rod and insert it with turning motion.



CAUTION: Always begin the maintenance by returning the hop up adjustment lever to NORMAL.




CAUTION: The chamber is a precision component.  
Never use any used BB pellets.

\* The hop-up performance may become unstable for 60 to 70 pellets after maintenance.



Inserting the rod will be difficult if you hold the rod at the end.

- Spray silicone oil for 0.5 to 1 sec in the pellet entrance, then fire 40 to 50 pellets to make the magazine stable.
- Clean the oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

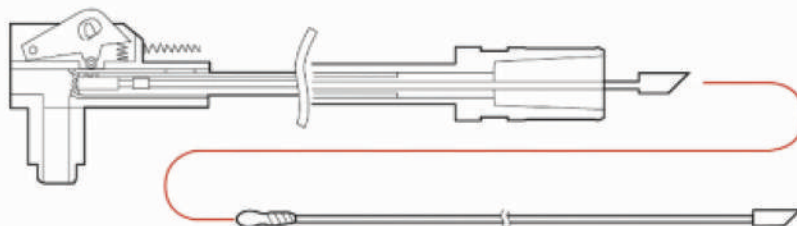

CAUTION: Always begin the maintenance by returning the hop up adjustment lever to Normal.

It is your **RESPONSIBILITY** to know your local and state laws regarding the **OWNERSHIP, USE and TRANSPORT** of your airsoft gun. If you are unsure of the laws, contact your local law enforcement agency or state government.

- Wear full eye and face protection at all times when handling or using an airsoft gun.
- Always keep your airsoft gun pointed in a safe direction.
- Always keep your airsoft gun unloaded until ready for use.
- Always keep your finger off the trigger until you are ready to shoot.
- Know your target and what is beyond it.
- Know how to operate your airsoft gun (Refer to your user manual)
- Use only the recommended BB's in your airsoft gun.
- Never use alcohol, over the counter perscription, or illicit drugs before or while shooting your airsoft gun.
- Always store airsoft guns so they are not accessible to unauthorized persons.
- Make sure your airsoft gun is unloaded and the battery has been removed prior to cleaning and storage.

**Please visit us at:  
ECHO1USA.COM**



**Read carefully before use. For ages 18 and above.**