

Installation Instructions

3-Way (Multi-location) **SWITCH** 15A-120/277V AC/CA

DI-000-E5603-02B

Cat. No. E5603

If you need help...



www.leviton.com/support



www.leviton.com/contact



1-800-824-3005 (USA)

 
1-800-405-5320 (Canada)

Leviton Manufacturing Co., Inc. 201 North Service Road, Melville, NY 11747

© 2023 Leviton Manufacturing Co., Inc. All rights reserved.

Specifications subject to change at any time without notice.





Leviton's Decora Edge Switch makes it safer, faster, and easier to install a new switch.

Colored levers easily identify where to connect each wire.

There are no exposed wires or metal parts after installation.

Built-in strip gauge.

An extra large plastic strap facilitates installation in large wall openings.


Designed for midway wallplates for extra coverage. or you can easily convert it to use with standard wallplates by removing the break-off tabs.

Built-in alignment feature to align other Decora Edge products in a multi-gang installation. (See page 11.)




Terminates wire with a snap

The colored levers snap shut to terminate the wires.

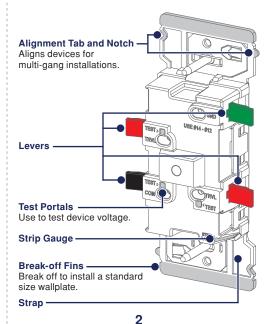



The color-coded levers easily identify where to connect the wallbox wires to the switch.

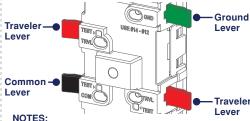

- · Wire colors in your wallbox may be different from the lever colors. See "Preparing Wires," on page 5 to make sure you insert the wires properly.
- Both Traveler 1 or 2 can be connected to either Traveler lever.



Recommended Tools


Slotted/Phillips Screwdriver **Needle Nose Pliers**

Wire Stripper





Identify Your Wires

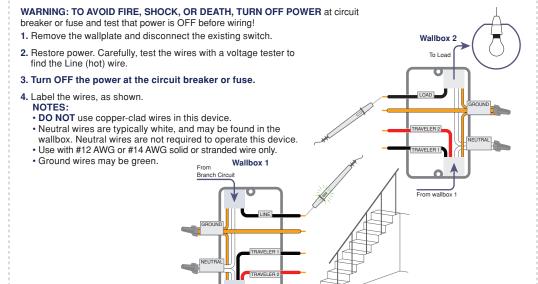

If your wallbox looks different, contact an electrician.




Preparing Wires

1. Make sure that the ends of the wires from the wallbox are straight (cut if necessary).



2. Strip each wire in the wallbox, as shown below.

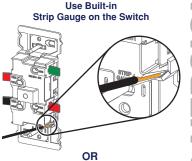


Use Strip Gauge as shown below (measure bare wire here)

> 9/16 in. (1.4 cm)




NOTE: Work on only one connection at a time.

 
1. Fully open lever.



 2. Insert the proper wire into the wire hole per the wiring diagram on page 7. Make sure the wire is fully inserted and no bare wire is exposed. NOTE: If using stranded wire twist wire before insertion.



 3. Fully close lever.






Wallplate Installation


Preparation The switch strap is designed for midway wallplates. If you want to use a standard size wallplate, carefully

remove both break-off fins, as shown below.

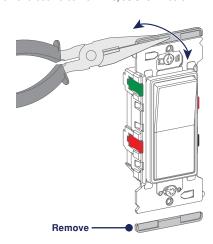



4. Connect the remaining wires as shown.

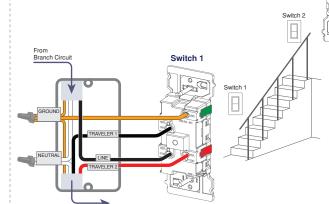

Single-Gang Box Installation

WARNING: Turn the power OFF at the circuit breaker

or fuse before you tighten the screws.

2. Install wallplate, and restore power.

1. Tighten the mounting screws into wallbox.

If you are unsure about these instructions, contact an electrician.

Multi-Gang Box Installation


WARNING: Turn the power OFF at the circuit breaker or fuse before you tighten the screws.

Switch 2

1. To install the switch next to other Decora Edge devices, use the alignment feature to easily place each device next to each other in the multi-gang box.



 2. Tighten the mounting screws into wallbox.




3. Install wallplate, and restore power.



1. Position all wires so that there is room in the wallbox for the device.

2. Partially screw the mounting screws into the wallbox's mounting holes.

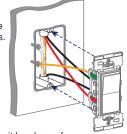

3. Restore power at the circuit breaker or fuse.

4. Press the switch. If the Load turns ON, wiring is complete.



WARNING: Turn the power OFF at the breaker or fuse before you complete the installation.

5. To complete the installation, proceed to the next page.

If you are unsure about the installation process, contact Leviton Technical Support, or contact an electrician.

8

Safety First

WARNINGS:

• TO AVOID FIRE SHOCK OR DEATH; TURN OFF POWER at circuit breaker or fuse when servicing, installing or removing device.

- This product is to be installed and/or used in accordance with electrical codes and regulations
- · If you are unsure about any part of these instructions, consult an electrician

CAUTIONS:

Use this device with solid or stranded copper wire only.

• DO NOT use this device with copper clad wire.

 To avoid damage to the product, DO NOT use disinfecting products. including foggers, sprays or other types of atomized cleaning agents

• DO NOT spray liquid onto the product.

. To clean, use a damp cloth with mild soap

PATENT STATEMENT

Patents covering this product, if any, can be found on

Leviton.com/patents

Limited 2 Year Warranty & Exclusions

For Leviton's limited product warranty, go to www.leviton.com. For a printed copy of the warranty, call 1-800-824-3005.

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada ULC to the attention of the Quality Assurance Department. 165 Hymus Blvd. Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

Scan this QR code for additional Decora Edge product information and to view the install video.



Visit leviton.com/support or contact Technical 10 11 Services at 1-800-824-3005 for additional help.