



1. Adding Master Password (when Factory Reset Mode)

Step 1	Step 2	Step 3
Press " and " to enter the setting mode.	Enter a "123456" (default password) and tap on " # " to confirm	Press Number 1 (User Manage)
Step 4	Step 5	Step 6
Press Number 1 to Add frin/psw/tag	Press Number 1 to enroll Fingerprint/Passwords and press " "	Type your new admin password and press " and repeat again. After registered successful, press " all the way to exit the setting

2. User Manage (Adding Admin or Users)

Step 1	Step 2	Step 3	Step 4
Press " and " to enter the setting mode.	Enter your admin password to verify and tap on " to confirm	(001 – 009) Admin Set	Select the unlocking methods that you want to register 1. Enroll Fingerprint or Password 2. Enroll Face ID 3. Enroll Palm After select, press "——" - If Fingerprint, scan 5 times - If Password, type your password and press "——", After that repeat again - If Face ID, looks the door lock's camera a few seconds - If Palm, put your palm in front of the door lock's camera a few seconds

3. System Setting (Time Setting)

Step1	Step 2	Step 3	Step 4
Press " > " and " to enter the setting mode.	Enter your admin password to verify and tap on " " to confirm	Press "3" System Setting and press "1" set date time enter the details in the following format: YY: MM: DD HH: MM	Press " — " to confirm and press " — " exit setting

4. System Setting (Language and Voice Volume Setting)

Step1	Step 2	Step 3	Step 4
Press " > " and " to enter the setting mode.	Enter your admin password to verify and tap on "	Press "3" System Setting and Press "3" again Language Setting or Volume Setting. You will see the following options: Press 1 to change Chinese or English Press 2 to change Low or High volume	Press "all the way to to exit the setting

5. System Setting (Auto Double Lock)

Step1	Step 2	Step 3	Step 4
Press " > " and " _ " to enter the setting mode.	Enter your admin password to verify and tap on " " to confirm	Press "3" System Setting and Press " 2 " Unlock Setting. You will see the following options: Press 1 to change Single mode or Double mode (Double mode means need 2 unlocking mthods just can unlock the door) Press 2 to on/off the auto Double Lock Press 3 to activate/deactive pick alam Press 4 to change Press "3" activate/deactive Body Detect	Press ">" all the way to to exit the setting

6. System Setting (Restore Factory Setting/ Factory Reset)

Step1	Step 2	Step 3	Step 4
Press "" and " " to enter the setting mode.	Enter your admin password to verify and tap on "	Press Number 1 (User Manage) and Press " 3" Factory reset Press 3 Factory Reset and press " to confirm	Press " all the way to to exit the setting

7. Connect to Wi-Fi (Please download **USmart Go**)

Step 1	Step 2	Step 3	Step 4
Download USmart Go App into your phone and register foran account first.	Go to the lock setting Press " and " " to enter the setting mode.	Enter your admin password to verify and tap on "——" to confirm	Press Number " 2 " Remote Manage
Step 5	Step 6	Step 7	Step 8
Press Number " 1 " to add phone user	Press Number " 1 " Wi-Fi and counting down	Go to your mobile phone : Usmart Go App and click Add Device	Select Connect via Wi-Fi hotspot After that go into your phone's WiFi Setting and select CloudHome-XXXXXXXX to connect
Step 5	Step 6	Step 7	Step 8
After connected the CloudHome-XXXXXXXX WiFi, go back to the Usmart Go App, and it isloading a few seconds	Select your home Wi-Fi to connect and type the password of home Wi-Fi	Press Start Connect andshow checking network and wait a few minutes	Once successful, your phone screen will show "Connected to server" and the system will say success. After that click " OK "