



1. Adding Master Password (when Factory Reset Mode)

Step 1	Step 2	Step 3
Press " * " and " # " to enter the setting mode.	Enter a " 123456" (default password) and tap on " # " to confirm	Press Number 1 (User Manage)
Step 4	Step 5	Step 6
Press Number 1 to Add Admin	Press Number 1 to enroll Fingerprint/Passwords and press " # "	Type your new admin password and press " # " and repeat again. After registered successful, press " * " all the way to exit the setting

2. User Manage (Adding Admin or Users)

Step 1	Step 2	Step 3	Step 4
Press " * " and " # " to enter the setting mode.	Enter your admin password to verify and tap on " # " to confirm	 Press Number 1 (User Manage) 1. If want to add Admin, please press " 1 " Admin Set 2. If want to add User, please press " 2 " User Set 	Select the unlocking methods that you want to register 1. Enroll Fingerprint or Password 2. Enroll Face ID 3. Enroll Palm After select, press " # " - If Fingerprint, scan 5 times - If Password, type your password and press " # ", After that repeat again - If Face ID, looks the door lock's camera a few seconds - If Palm, put your palm in front of the door lock's camara a few seconds

3. System Setting (Time Setting)

Step1	Step 2	Step 3	Step 4
Press " * " and " # " to enter the setting mode.	Enter your admin password to verify and tap on " # " to confirm	Press "1" Time Setting and enter the details in the following format: YY : MM : DD HH : MM	Press " # " to confirm and press " * " a

4. System Setting (Language and Voice Volume Setting)

Step1	Step 2	Step 3	Step 4
Press " * " and " # " to enter the setting mode.	Enter your admin password to verify and tap on " # " to confirm	Press " 2 " Language Setting or Volume Setting. You will see the following options: Press 1 to change Chinese or English Press 2 to change Low or High volume	Press " * " all the way to to exit the setting

5. System Setting (Auto Double Lock)

Step1	Step 2	Step 3	Step 4
Press " * " and " # " to enter the setting mode.	Enter your admin password to verify and tap on " # " to confirm	Press " 3 " Unlock Setting. You will see the following options: Press 1 to change the lockback timer after unlocking Press 2 to on/off the auto Double Lock Press 3 to activate/deactive Anti Pry Press 4 to change Single mode or Double mode (Double mode means need 2 unlocking mthods just can unlock the door)	Press " * " all the way to to exit the setting

6. System Setting (Body Detect)

Step1	Step 2	Step 3	Step 4
Press " * " and " # " to enter the setting mode.	Enter your admin password to verify and tap on " # " to confirm	Press " 4 " Lockbody Mode Press 1 to change the gap distance between body and lock.	Press " * " all the way to to exit the setting

7. System Setting (Restore Factory Setting/ Factory Reset)

Step1	Step 2	Step 3	Step 4
Press " * " and " # " to enter the setting mode.	Enter your admin password to verify and tap on " # " to confirm	Press " 4 " System Query Press 3 Factory Reset and press " # " to confirm	Press " * " all the way to to exit the setting

8. Connect to Wi-Fi (Please download USmart Go)

Step 1	Step 2	Step 3	Step 4
Download USmart Go App into your phone and register foran account first.	Go to the lock setting Press " * " and " # " to enter the setting mode.	Enter your admin password to verify and tap on " # " to confirm	Press Number " 2 " Remote Manage
Step 5	Step 6	Step 7	Step 8
Press Number " 1 " to add phone user	Press Number " 1 " Wi-Fi and counting down	Go to your mobile phone : Usmart Go App and click Add Device	Select Connect via Wi-Fi hotspot After that go into your phone's WiFi Setting and select CloudHome- XXXXXXXX to connect
Step 5	Step 6	Step 7	Step 8
After connected the CloudHome-XXXXXXXX WiFi, go back to the Usmart Go App, and it isloading a few seconds	Select your home Wi-Fi to connect and type the password of home Wi-Fi	Press Start Connect andshow checking network and wait a few minutes	Once successful, your phone screen will show "Connected to server" and the system will say success. After that click " OK "