



KitchenAid

 
5KEK1835A





PARTS AND FEATURES

PARTS AND ACCESSORIES

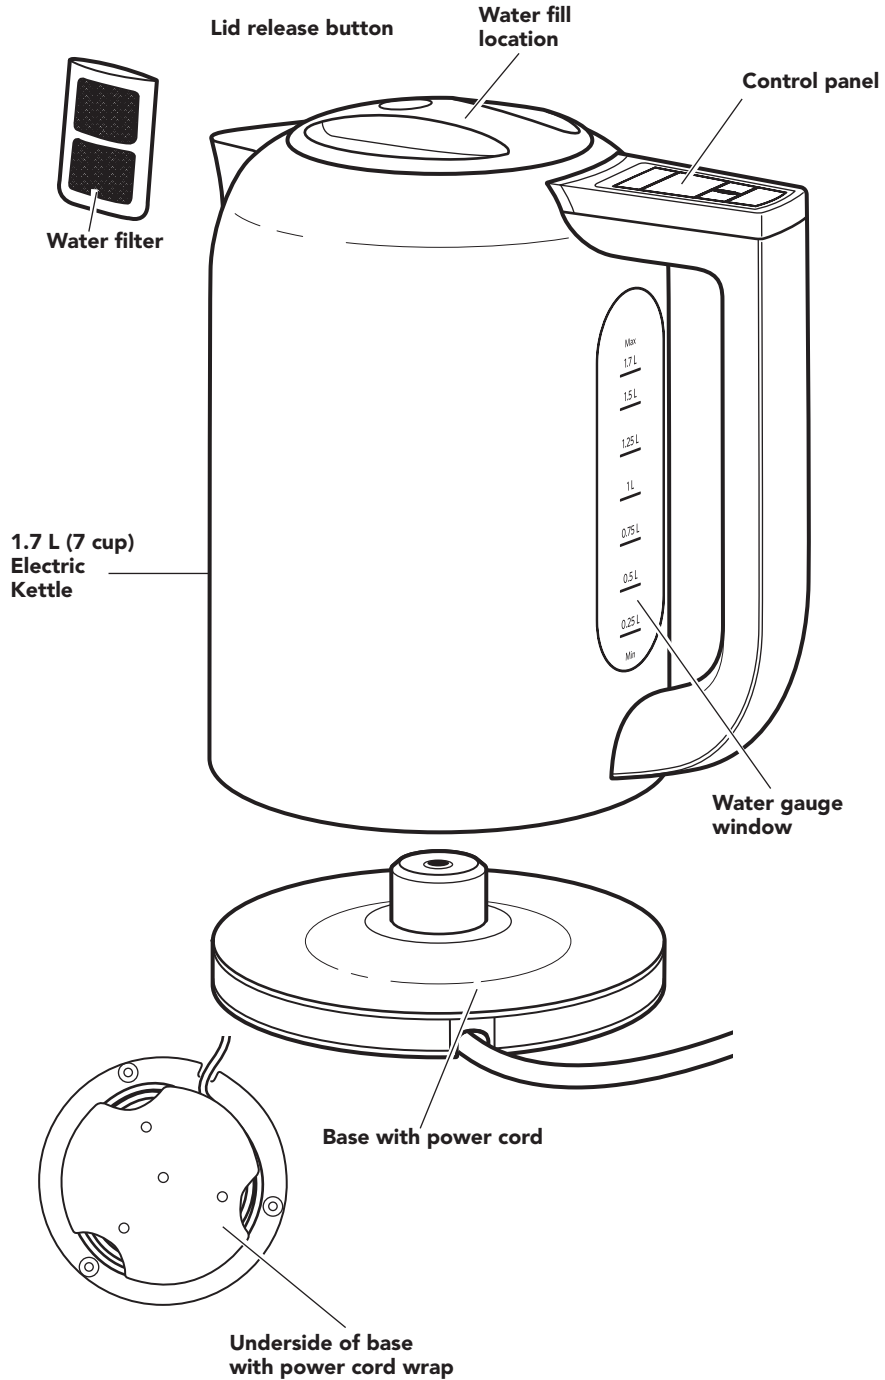



ELECTRIC KETTLE SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid. Avoid spillage on the connector.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Close supervision is necessary when any appliance is used by or near children.



ELECTRIC KETTLE SAFETY

7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Unplug Electric Kettle from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest Authorised Service Centre for examination, repair, or adjustment.
10. Use of replacement parts not recommended by manufacturer may result in fire, shock, or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces.
13. To disconnect, turn any control to “OFF”, then remove plug from wall outlet.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.
15. The Electric Kettle should only be used to heat water.
16. Do not use Electric Kettle with loose or weakened handle.
17. Do not use the appliance for other than intended use.
18. Do not clean Electric Kettle with abrasive cleaners, steel wool, or other abrasive materials.
19. The Electric Kettle is only to be used with the stand provided.
20. Do not overfill kettle. If the kettle is overfilled, boiling water may be ejected.
21. The heating element surface is subject to residual heat after use. Do not touch hot surface. Use handles.
22. Scalding may occur if the lid is removed during the brewing cycles.





ELECTRIC KETTLE SAFETY

23. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
24. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices or other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
25. The temperature of accessible surfaces may be high when the appliance is operating.
26. **CAUTION:** Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
27. Visit www.KitchenAid.com.au or www.KitchenAid.co.nz website to download this instruction manual.


SAVE THESE INSTRUCTIONS



ELECTRIC KETTLE SAFETY

ELECTRICAL REQUIREMENTS

! WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Volts: 220-240 V

Hertz: 50-60 Hz

Wattage: 2400 W

 
NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

A short power supply cord (or detachable power supply cord) should be used to reduce the risk resulting from becoming entangled in or tripped over a longer cord.

BATTERY ACTIVATION (OPTIONAL)

NOTE: If batteries have been added and the Electric Kettle is off the base, the display will show the current temperature of the water. Placing the Electric Kettle back on the base will allow full functionality of the kettle to change the temperature, heat, and hold temperature.

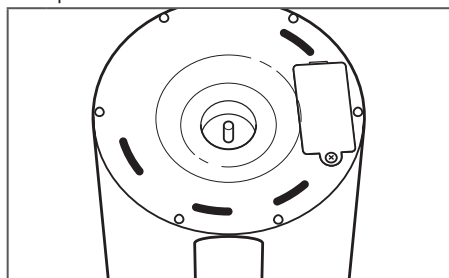

1

To provide power to the display when the Electric Kettle is not on the base, insert 2 AA batteries (not included) in the battery housing on the underside of the kettle.





OPERATING THE ELECTRIC KETTLE

BEFORE FIRST USE

Before first use, fill the Electric Kettle to the maximum level, then boil and discard the water. The temperature can be displayed in Celsius (C) or Fahrenheit (F). To change setting, hold the “-” and “+” buttons down at the same time.

 
NOTE: The Electric Kettle is designed for water only. Do not put any other liquids or substances in the Electric Kettle.

FILLING THE ELECTRIC KETTLE WITH WATER



1

Open the lid of the Electric Kettle by pressing the Lid Release Button.

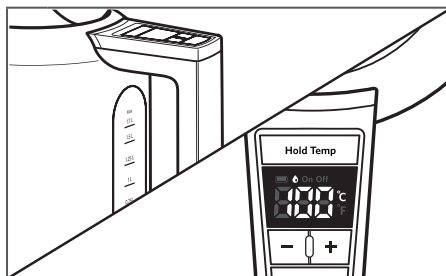


2

Fill Electric Kettle. The water level is displayed in .25 L increments. If there is no water in the kettle, the water drop icon will display and the alert tone will sound for 6 seconds. Remove water if it exceeds the “Max” line.



3

 Push the lid down so it locks into the closed position. You will hear a clicking sound which indicates the lid is locked.

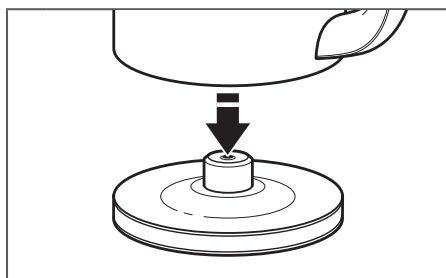

4

 
Place the Electric Kettle on the base.

NOTE: There must be a minimum of .25 L of water for Electric Kettle to operate. Do not exceed the “Max” fill line.



OPERATING THE ELECTRIC KETTLE

HEATING WATER

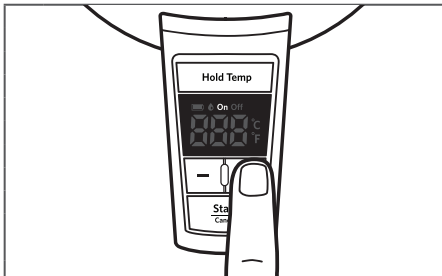


1

Place the Electric Kettle on the base. The display will show the default temperature (100° C). Press the "+" or "-" buttons to select your desired water temperature. See the "Temperature guide" for more information.


°C	°F
50	122
55	131
60	140
65	149
70	158
75	167
80	176
85	185
90	194
95	203
100	212

 The Electric Kettle has eleven programmed temperature settings.

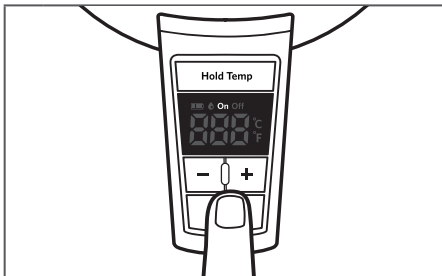


2

 Press the start/cancel button to save temperature and to begin heating the water. "On" will be displayed on the screen to indicate the Electric Kettle is heating. The "Start/Cancel" button does not function when the Electric Kettle is off the base.

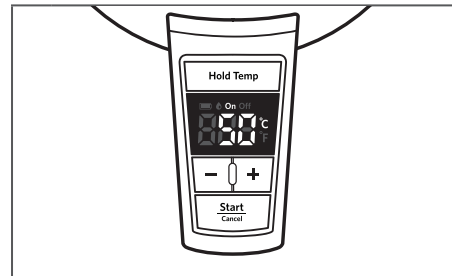


3

 Once the water reaches 50° C, the current temperature will show on the main display, and continue heating until the desired temperature is reached.

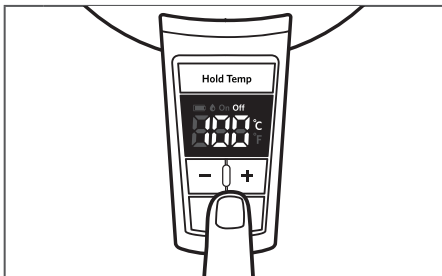

4

 Once the desired temperature has been reached, three beeps will sound and the word "Off" will show in the top corner of the display.

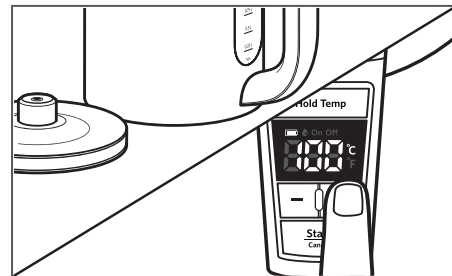

If batteries have been added and the Electric Kettle is off the base, push any button to display the current temperature, and the battery icon will display the battery charge level.

NOTE: The temperature will blink 5 times and return to standby after 5 seconds. This will continue until after the water temperature reduces below the desired temperature.




OPERATING THE ELECTRIC KETTLE

TEMPERATURE GUIDE

Use this guide for outstanding results from your KitchenAid Electric Kettle.


60° C	70° C	80° C	90° C	100° C
Delicate Tea	Green Tea Gyokuro Sencha	Blooming Tea	Black Tea Earl Grey English Breakfast	Boil Water
	White Tea Silver Needle	Chai Green White	Hot Chocolate	Chai Red
		Green Tea Bencha Genmaicha	Oolong Tea	Herbal Tea Tisanes
				Instant Soup
			Oatmeal	
			Rooibos Tea	
			Yerba Maté	

 USING THE HOLD TEMP MODE

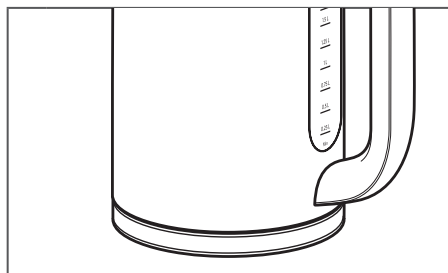

1

 To activate the Hold Temp mode, leave the Electric Kettle on the base after reaching the selected temperature and press the "Hold Temp" button. The Electric Kettle will maintain the desired temperature for up to 30 minutes.

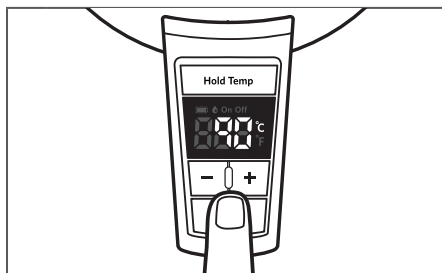

2

The Hold Temp mode may be canceled by pressing the Start/Cancel button.

NOTE: Hold Temp mode works for all temperatures. When using Hold Temp mode at 100° C, mode will activate at 92° C and 100° C depending on altitude.

 





OPERATING THE ELECTRIC KETTLE

TURNING OFF THE ELECTRIC KETTLE

The Electric Kettle can be turned off in several ways:

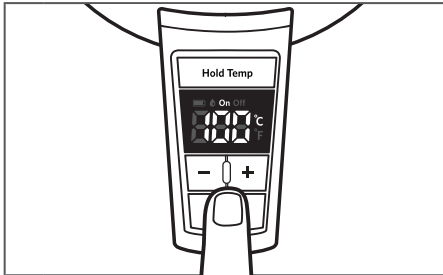

 - 1 Press Start/Cancel while in heating mode. Unplug cord when Electric Kettle is not in use.

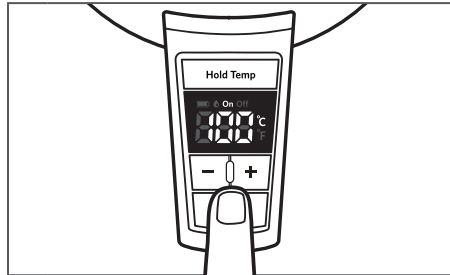


- 2 Press Start/Cancel while in Keep Warm mode. Unplug cord when Electric Kettle is not in use.

CARE AND CLEANING

CLEANING THE EXTERIOR

 IMPORTANT: Before cleaning, always disconnect the Electric Kettle from the electrical outlet. Make sure the Electric Kettle has cooled completely.

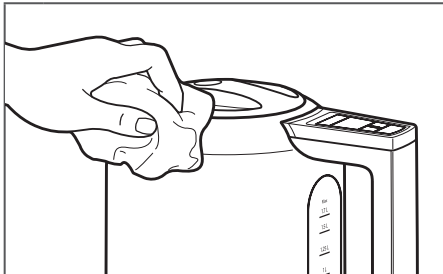

- 1 The exterior of the Electric Kettle may be cleaned with a damp cloth. Dry and polish the Electric Kettle with a soft cloth. Abrasives and scouring agents of any kind are not recommended.





 
CARE AND CLEANING

CLEANING THE FILTER

The Electric Kettle features a removable mesh filter that traps scale deposits for cleaner water. The filter will need to be cleaned periodically—more often if you have hard water.



- 1** To access filter: Open the lid; the filter is located behind spout inside Electric Kettle. Grasp the top of the filter to remove.

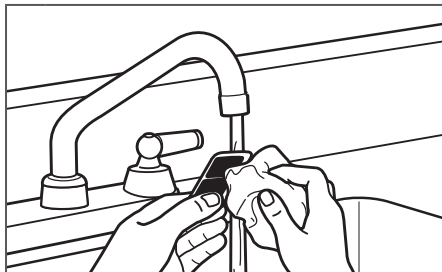


- 2** Clean under hot water with a soft brush or cloth to remove deposits, and replace filter by sliding the filter into the slot behind the spout.


NOTE: If calcium deposits remain on the filter, let it stand overnight in a solution of water and white vinegar. Rinse the filter thoroughly and replace in the Electric Kettle.

REMOVING MINERAL DEPOSITS FROM THE INTERIOR

 To get the best performance from your Electric Kettle, decalcification will be necessary. Calcium deposits may form on the interior metal parts of the Electric Kettle. The cleaning interval will depend on the hardness of the water you put in the Electric Kettle.

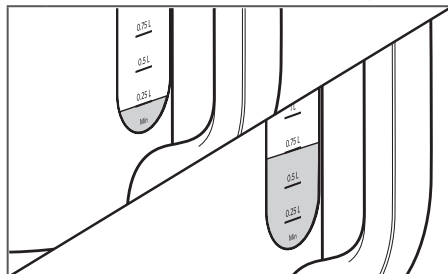

 - 1** Fill the Electric Kettle with white vinegar to the .25 L mark. Add water to the .75 L mark. Boil (100° C) and allow to stand overnight.

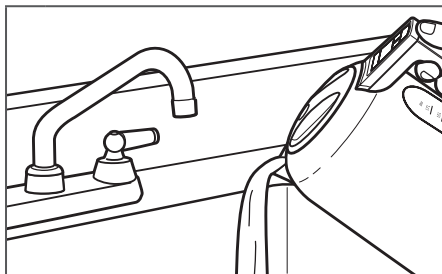


- 2** Empty the solution from the Electric Kettle.





 CARE AND CLEANING

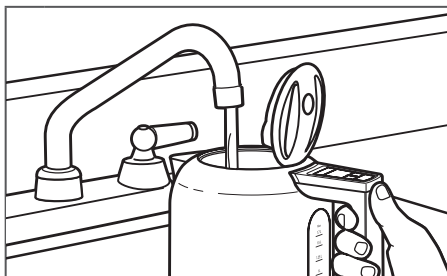

3

Fill the Electric Kettle with water, bring to a boil and drain out the water. Repeat this step twice. The Electric Kettle is now ready to use.

SERVICE

CUSTOMER SERVICE

In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Toll free number: 1-800-990-990

Phone number: 02 49026500

Address Australia:

KitchenAid Australia Pty Ltd
6-8 Billbrooke Close
Cameron Park NSW 2285, Australia
Phone: 1-800-990-990
Mobile: 0249026500
Email: enquiries@KitchenAid.com.au

In New Zealand:

Website: www.KitchenAid.co.nz
Email: enquiries@KitchenAid.co.nz
Phone: 0800 881 200

In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For more information, visit our website at:

www.KitchenAid.com.au











KitchenAid

©2018 All rights reserved.
Specifications subject to change without notice.

W10597348C

12/18

