


# PR<sup>→</sup>AIM Speechify Presidential Teleprompter (TP-SPHF-01)

## Assembly Manual




### ■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

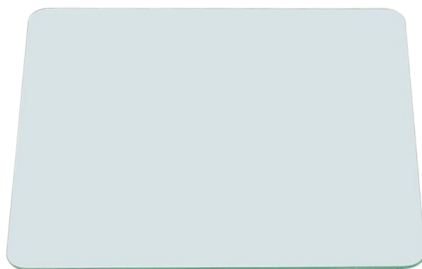

Beam Splitter Glass

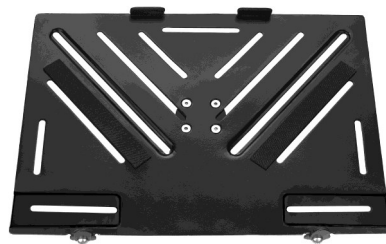

Laptop/Tablet Tray with  
C-Stand Adapter



Tray Holding Arm with Baby Pin



Extendable Adapters



 
Adjustable Glass  
Holder with Handle



10 x Binder Clip



Hand Gloves



2 x Cleaning Clothes



Allen Key L-Type  
(Size: -4mm)

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



Bag Packing



Cloth Hood




Glass Protective Case

## Speechify Presidential Teleprompter Setup

### Tray Holding Arm with Baby Pin

- Loosen the knob to unlock the clamp of the tray holding.
- Now place the clamp of the tray holding on a tripod stand and lock it with the knob.
- Loosen the knob of the baby pin and move the pin accordingly.

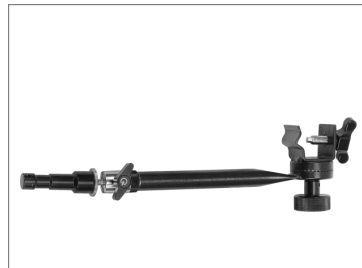


- Now lock the baby pin by the knob.



### Laptop/Tablet Tray with C-Stand Adapter

- Loosen the knob of the C-Stand adapter and mount it on the baby pin.

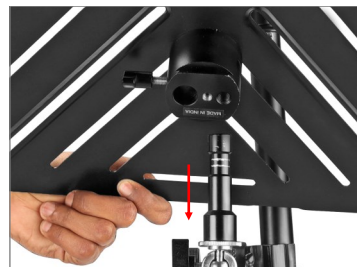

- Now secure the C-Stand Adapter by tightening its knob.



- The stand would look like this after attaching the C-Stand adapter.




### Extendable Adapters


- Loosen the knob of the extendable adapter, and then remove the adapter.




- Position and place it on the C-stand adapter.

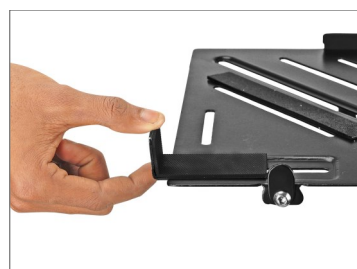

- Now secure the extendable adapter by closing its knob from the bottom of the adapter.

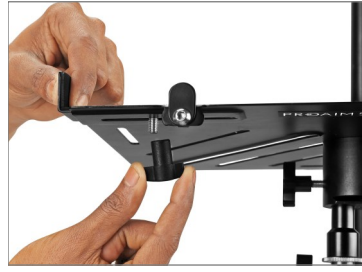

- Loosen the circular knob to change the angle of the adapter.

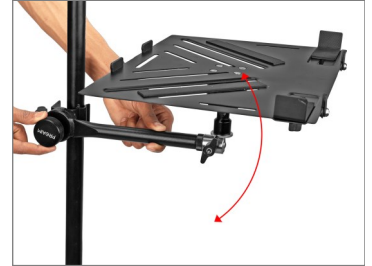

- Tighten the circular knob to secure the angle of the C-stand adapter.



### Adjustable Glass Holder with Handle


- Loosen the bigger knob to open the adjustable glass holder, and then mount it on the top of the tripod stand.



- Tighten the knob to secure the glass holder on the tripod stand.



- Now loosen the circular knob on the top of the glass holder.

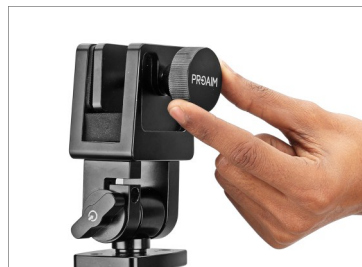

- Insert the mirror into adjustable glass holder and secure it with the circular knob.



- Add the provided handle into the holder, and tighten it properly.



- Now loosen the middle knob to adjust the glass holder with the help of the handle, and then tighten the knob again.



- Cover the glass with the provided hood and secure it using binder clips from three sides.



- Leave one side of the glass unclipped, as shown in image.



- Raise the hood from the unclipped side and put it over your camera (Not Included), as shown in the image.





- Once the camera (**Not Included**) is covered, properly clip the hood.



**YOUR PROAIM SPEECHIFY PRESIDENTIAL TELEPROMPTER  
ALL DRESSED UP AND READY TO GO!**



**(SHOWN WITH OPTIONAL ACCESSORIES)**

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.