

## Victor Pro Video Production Camera Cart (CT-VCTR-PRO-32)



Assembly Manual

### What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

- Image: Second second
  - 4 x (31" Length) Rods With Packing

# Victor Pro Camera Cart Setup

**NOTE**: Two peoples are needed to assemble the cart.

 
• Firstly, open all 4 locks present on each side of the cart.

• Pull and flip the locking pin from downward to upward direction to open locks.

• After unlocking, separate the top and lower shelf apart.

#### Pneumatic Tires With break

• Unlock the tier (With break) by flipping the given knob.















- Attach the unlocked tire (with break) with lower shelf's dovetail bracket by sliding it, as shown in the image.
- Secure the tire using the knob.

• The cart would look like this after attaching both the tires (With break).

**NOTE**: To keep the cart in static position, lock the wheels by pushing down the lever.

Attach the unlocked tires (non break) on

lower shelf's dovetail bracket by sliding as

• Unlock the tier (non break) by flipping the

**Pneumatic Tires Without Break** 

knob.

shown in image.

**NOTE**: To keep the cart in static position, lock



Released



















• The cart would look like this after attaching both the tires (non break).



#### **Rod Assembly**

• Loose all the 4 knobs of lower shelf's corner hole and insert rod into it, as shown in image.

• Now, tighten all the knobs to ensure proper attachment of all the rods.









### **Carrying Handle**

• Loosen al the screw of the carrying handle using the Allen key (L-type), as shown in the image.

- Follow the same step for removing all the screws before attaching the carrying handle.
- Now place the carrying handle at the back of the bottom shelf.









• Now, properly screw the carrying handle using the Allen key.

• Follow same steps for all screws.

Top Shelf setup

of the rods.

**Crossbar Assembly** 

bar.

• Tighten all the knobs of the upper shelf to properly secure it.

- Now, place the clamps of the crossbar on the rods, as shown in the image.

• Loosen the knob to open the clamp of cross-


- Now, align and mount the upper shelf on top









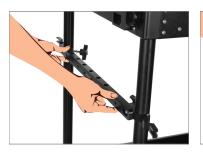









• Tighten the knobs of the crossbar to securely position it.

• The crossbar would look like this after securing with clamps.

#### Hinge Handle

• Loosen the handle of the hinge handle to open its clamp.


• Place the handle clamp on the rod and adjust the hinge handle accordingly.

• Follow the same step to attach the second hinge handle.

**NOTE:** It creates leverage of lifting the cart over obstacles, stairs or other incline surfaces.

• Press Both the buttons to open flap.



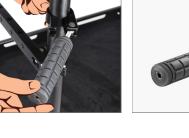















#### YOUR PROAIM VICTOR PRO VIDEO PRODUCTION CAMERA CART ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.