


Quick Start for Envelope Sweep Modes

1 RESET

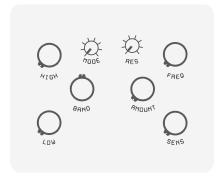

Start with all knobs down at position "0".


2

MIX



Turn up one or more of the LOW, HIGH and BAND mixer knobs to noon (as a starting point). 3

ENV MODE

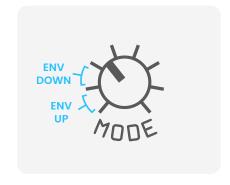

Turn the MODE knob between markers to select a sweep direction.

DEPTH




AMOUNT controls the envelope depth of sweep.

Turn all the way up to start at its maximum range.

5

SWEEP

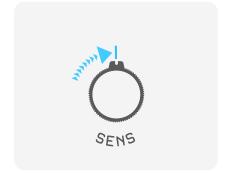

Turn up SENS until you begin to hear the filter sweep.

6

ADJUST



For Up Sweep, FREQ is starting point of sweep. For Down Sweep, FREQ is ending point of sweep.


Fine tune with AMOUNT & RES.





Quick Start for LFO Sweep Modes


1 RESET

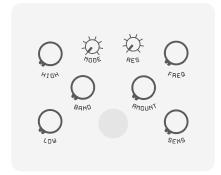

Start with all knobs down at position "0".


2

MIX

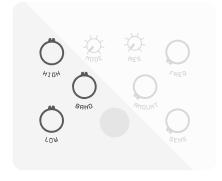


Turn up one or more of the LOW, HIGH and BAND mixer knobs to noon (as a starting point). 3

LFO MODE

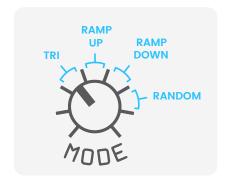

Turn the MODE knob between markers to select an LFO shape.

4 LFO SPEED

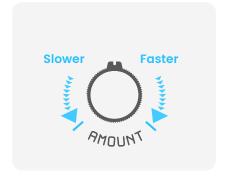

Turn the AMOUNT knob to control the speed of the LFO.

5 DYNAMICS



SENS allows you to speed up the LFO based on picking dynamics.

6

ADJUST



Make fine adjustments with the FREQ and RES knobs. Note: The lower settings of FREQ provide more range.

