

BMW_V01.30 ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Model Series	ETC
1 Series	E81/E82/E87/E88	●
1 Series	F20_F21	●
2 Series	F22_F23	●
2 Series	F45_F46	●
3 Series	E36	●
3 Series	E46	●
3 Series	E90/E91/E92/E93	●
3 Series	F30_F31_F34_F35	●
3 Series	F80	●
4 Series	F32_F33_F36	●
4 Series	F82_F83	●
5 Series	E60_E61	●
5 Series	F07	●
5 Series	F10_F11_F18	●
6 Series	E63_E64	●
6 Series	F06_F12_F13	●
7 Series	E65_E66_E68	●
7 Series	F01_F02_F03_F04	●
I Series	I01_I12	●
X1 Series	E84	●
X3 Series	F25	●
X4 Series	F26	●
X5 Series	E70	●
X5 Series	F15_F85	●
X6 Series	E71	●
X6 Series	E72	●
X6 Series	F16_F86	●
Z4 Series	E89	●