## INFINITI\_V01.15 Diag Function List (Note:For reference only)

## NOTES:

• This function is supported.

Auto Drive Position

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

O This function is not supported.						
▲ This function is the new feature in this						
Vehicle	Model Yea	r				
EX25	ALL	ALL				
EX35	ALL	ALL				
EX37	ALL	ALL				
FX30d	ALL	ALL				
FX45	ALL	ALL				
FX50	ALL	ALL				
G20	ALL	ALL				
G35	ALL	ALL				
G37	ALL	ALL				
130	ALL					
I35	ALL					
M25/M37	ALL					
M35/M45	ALL					
M37/M56	ALL					
M37/M56/M30d	ALL					
M45	ALL					
Q45		ALL				
QX4	ALL					
QX56	ALL					
Systemlist	EcuInfo.	ReadCodes	EraseCodes	LiveData		
Engine	•	•	•	•		
Transmission	•	•	•	•		
ABS	•	•	•	•		
Air Bag	•	•	•	•		
Meter/M&A	•	•	•	•		
SUB Meter		•	•	•		
EPS/DAST 3	•	_	+-	+-		
Air Pressure Monitor	•	•	•	•		
HVAC	•	•	•	•		
BCM	•	•	•	•		
Motor Control	•	•	•	•		
ICC/ADAS	•	•	•	•		
All Mode AWD/4WD	•	•	•	•		
	•	•	•	•		
E-4WD	•	•	•	•		
4WAS (MAIN) /RAS/HICAS	•	•	•	•		
4WAS (Front)	•	•	•	•		
Difference Lock	•	•	•	•		
CAN Gateway	•	•	•	•		
Accele Pedal ACT	•	•	•	•		
Brake	•	•	•	•		
Chassis Control	•	•	•	•		
Adaptive Light	•	•	•	•		
Head Lamp Levelizer	•	•	•	•		
4	1 _	I -	1 =			

Intelligent Key	•	•	•	•
Smart Entrance	•	•	•	•
Auto Slide Door	•	•	•	•
Auto Slide Door Right	•	•	•	•
Auto Back Door	•	•	•	•
Precrash Seatbelt	•	•	•	•
Convertible Roof	•	•	•	•
EV/HEV	•	•	•	•
HV Battery	•	•	•	•
Charger/PD Module	•	•	•	•
PTC Heater	•	•	•	•
Laser/Radar	•	•	•	•
Side Radar Left	•	•	•	•
Side Radar Right	•	•	•	•
Lane Camera	•	•	•	•
Rearview Camera	•	•	•	•
S/Blind Camera	•	•	•	•
Multi Display	•	•	•	•
Multi AV	•	•	•	•
Sonar	•	•	•	•
BSW/Buzzer	•	•	•	•
EHS/PKB	•	•	•	•
IPDM E/R	•	•	•	•
BAC	•	•	•	•
DIU	•	•	•	•
Shift	•	•	•	•
E-SUS	•	•	•	•
ANC		•		
Telematics		•		•
HAS	•	•	•	•
AVM				•
DAST 1				
DAST 2				
Cluster	•	•	•	•
PMAS	•	•	•	•
Radio	•	•	•	•
VSP	•	•	•	•
Nats Immu	•	•	•	•
Air Levelizer	•	•	•	•
Motor Assist	•	•	•	_
MOTOT V99191	<u> </u>		_	•