

LandRover SPS Fuction List(Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

VehicleType	ModelYear	Engine	SPS
Discovery	2005-2009 (Dis 3)	Normally aspirated V6	●
Discovery	2005-2009 (Dis 3)	Normally aspirated V8	●
Discovery	2005-2009 (Dis 3)	Diesel V6	●
Discovery	2010-2011	Normally aspirated V6 4.0L	●
Discovery	2010-2011	Normally aspirated V8 5.0L	●
Discovery	2010-2011	Diesel V6 2.7L	●
Discovery	2010-2011	Diesel V6 3.0L	●
Discovery	2012-2013	Diesel V6 2.7L	●
Discovery	2012-2013	Diesel V6 3.0L	●
Discovery	2012-2013	Normally aspirated V8 5.0L	●
Discovery	2014-2015	Diesel V6	●
Discovery	2014-2015	Supercharged V6	●
Discovery	2017-	V8 5.0L Petrol	●
Discovery	2017-	V6 3.0L Diesel	●
Discovery	2017-	AJ200D 2.0L Diesel	●
Discovery	2017-	V6 3.0L Petrol	●
Discovery	2017-	PT204 2.0L Petrol	●
Range Rover	2006	Normally aspirated V8	●
Range Rover	2006	Supercharged V8	●
Range Rover	2006	Diesel straight six	●
Range Rover	2007-2009	Diesel V8	●
Range Rover	2007-2009	Normally aspirated V8	●
Range Rover	2007-2009	Supercharged V8	●
Range Rover	2010-2012	Diesel V8	●
Range Rover	2010-2012	Normally aspirated V8	●
Range Rover	2010-2012	Supercharged V8	●
Range Rover	2013	Diesel V8 4.4L	●
Range Rover	2013	Diesel V6 3.0L	●
Range Rover	2013	Supercharged V8	●
Range Rover	2013	Normally aspirated V8	●
Range Rover	2014-2015	Hybrid 3.0L	●
Range Rover	2014-2015	Supercharged V6	●
Range Rover	2014-2015	Normally aspirated V8	●
Range Rover	2014-2015	Supercharged V8	●
Range Rover	2014-2015	Diesel V6 3.0L	●
Range Rover	2014-2015	Diesel V8 4.4L	●
Range Rover	2014-2015	GTDI 2.0L	●
Range Rover	2016	Diesel V8 4.4L	●
Range Rover	2016	Hybrid 3.0L	●
Range Rover	2016	GTDI 2.0L	●
Range Rover	2016	Diesel V6 3.0L	●
Range Rover	2016	Normally aspirated V8 5.0L	●
Range Rover	2016	Supercharged V8 5.0L	●
Range Rover	2016	Supercharged V6 3.0L	●

Range Rover	2017-	V8 5.0L Petrol	●
Range Rover	2017-	V8 4.4L Diesel	●
Range Rover	2017-	V6 3.0L Diesel	●
Range Rover	2017-	V6 3.0L Diesel Hybrid	●
Range Rover	2017-	V6 3.0L Petrol	●
Range Rover	2017-	AJ200P 2.0L Petrol	●
Range Rover	2017-	PT204 2.0L Petrol Plug-in Hybrid	●
Range Rover Sport	2005(2006US)-2009	Normally aspirated V8	●
Range Rover Sport	2005(2006US)-2009	Supercharged V8	●
Range Rover Sport	2005(2006US)-2009	Diesel V6	●
Range Rover Sport	2005(2006US)-2009	Diesel V8	●
Range Rover Sport	2010-2011	Normally aspirated V8 5.0L	●
Range Rover Sport	2010-2011	Supercharged V8 5.0L	●
Range Rover Sport	2010-2011	Diesel V6 3.0L	●
Range Rover Sport	2010-2011	Diesel V8 3.6L	●
Range Rover Sport	2012-2013	Diesel V6 3.0L	●
Range Rover Sport	2012-2013	Normally aspirated V8 5.0L	●
Range Rover Sport	2012-2013	Supercharged V8 5.0L	●
Range Rover Sport	2014-2015	Hybrid 3.0L	●
Range Rover Sport	2014-2015	Supercharged V6	●
Range Rover Sport	2014-2015	Normally aspirated V8	●
Range Rover Sport	2014-2015	Supercharged V8	●
Range Rover Sport	2014-2015	Diesel V6 3.0L	●
Range Rover Sport	2014-2015	Diesel V8 4.4L	●
Range Rover Sport	2014-2015	GTDI 2.0L	●
Range Rover Sport	2016	Diesel V8 4.4L	●
Range Rover Sport	2016	Hybrid 3.0L	●
Range Rover Sport	2016	GTDI 2.0L	●
Range Rover Sport	2016	Diesel V6 3.0L	●
Range Rover Sport	2016	Supercharged V8 5.0L	●
Range Rover Sport	2016	Supercharged V6 3.0L	●
Range Rover Sport	2017-	V8 5.0L Petrol	●
Range Rover Sport	2017-	V8 4.4L Diesel	●
Range Rover Sport	2017-	V6 3.0L Diesel	●
Range Rover Sport	2017-	V6 3.0L Diesel Hybrid	●
Range Rover Sport	2017-	AJ200D 2.0L Diesel	●
Range Rover Sport	2017-	V6 3.0L Petrol	●
Range Rover Sport	2017-	PT204 2.0L Petrol	●
Range Rover Sport	2017-	PT204 2.0L Petrol Plug-in Hybrid	●
Range Rover Sport	2017-	AJ20 P6 3.0L Petrol Mid Hybrid MHEV	●
Range Rover Velar	2018-	V8 5.0L Petrol	●
Range Rover Velar	2018-	V6 3.0L Diesel	●
Range Rover Velar	2018-	204DT 2.0L Diesel	●
Range Rover Velar	2018-	V6 3.0L Petrol	●
Range Rover Velar	2018-	AJ200P 2.0L Petrol	●

### SPS Function List

Ride Level Control Module Diagnostic Interface

Ride Level Control Module Inflation (Showroom)

Air Suspension Deflation

Air Suspension Inflation

Air Suspension Enable

Set/un-set Air Suspension Geometry Set-up
Set/un-set Air Suspension Manufacturing/freeze Mode
Set/un-set Air Suspension Tight Tolerance Mode (Headlamp Setting)
Suspension Tight Tolerance Control
Height Calibration