## Mazda\_V01.15 Diag Function List(Note:For reference only)

## NOTES:

- This function is supported.
- ${\ensuremath{ ext{O}}}$  This function is not supported.

EATC (Electronic Automatic Temperature Control)

▲ This function is the new feature in this version.

This function is the new reature in this versi	.011.					
Model		Mode	el Year			
Atenza		2002	2 - 2013			
Axela		2003	3 - 2013			
BT-50		:	2007			
B-Series		2004	1 - 2015			
Bongo		1999	9 - 2007			
Bravo		1999	9 - 2005			
CX-3			2015			
CX-4		2012	2 - 2017			
CX-5		:	2012			
CX-7		2006	6 - 2017			
CX-8		2006	5 - 2017			
CX-9		2007	7 - 2011			
Carol		2000	0 - 2013			
Demio		2002	2 - 2014			
E-Series		1999	9 - 2002			
Familia		2002 - 2017				
Fighter		2005				
Flair		2006 2013				
MPV		1999 - 2006				
MX-5		2005 - 2017				
Mazda 2		2002 - 2017				
Mazda 3		2003 - 2017				
Mazda 5		2005 - 2017				
Mazda 6		2002 - 2017				
Mazda 8		2006 - 2013				
Premacy		2001 - 2011				
RX-8		2003 - 2010				
RoadSter		2005 - 2015				
Scrum		2001 - 2013				
Titan	2001 - 2014					
Tribute		2001 - 2012				
Verisa		2002 - 2005				
Systemlist	EcuInfo.	Read Codes	Erase Codes	LiveData		
PCM (Powertrain Control Module)	0	•	•	•		
TCM (Transmission Control Module)	0	•	•	•		
CCMII (Cruise Control Module)	0	•	•	•		
ABS/TCS (Anti-Lock Brake/Traction Control Module)	0	•	•	•		
IC (Instrument Cluster)	0	•	•	•		
PATC (F1 A	0					

SM (Rectraint Control Module)					
### PATS (Passive Anti-Theft System)	RCM (Restraint Control Module)	0	•	•	•
Communication   Communicatio	TPMS (Tire Pressure Monitor)	0	•	•	•
BPB (Electric Parking Brake)	PATS (Passive Anti-Theft System)	0	•	•	•
CRM (Generic Electronic Module)	HCM (Headlamp Control Module)	0	•	•	•
DEM   Chriver's Door Module	EPB (Electric Parking Brake)	0	•	•	•
FFS   (Electronic-Control   Independent	GEM (Generic Electronic Module)	0	•	•	•
MCM (Audio Control Module)	DDM (Driver's Door Module)	0	•	•	•
Game   Gateway Module   A	EPS (Electronic-Controlled Power Steering)	0	•	•	•
ALM#1 (Auto Leveling Module)  CCM (Cruise Control Module)  IPC (Instrument Panel Module)  IPC (Ins	ACM (Audio Control Module)	0	•	•	•
CCM (Cruise Control Module)	GWM (Gateway Module A)	0	•	•	•
IPC (Instrument Panel Control Module)	ALM#1 (Auto Leveling Module)	0	•	•	•
HVAC (Heating Ventilation Air Conditioning)  IAB (Integrated Air Bag Module)  EKE (Remote Keyless Entry)  AFS (Adaptive Front Lighting System)  GPSM (Global Positioning System Module)  PAM (Parking Aid Module)  BCMII (Body Control Module)  DSM (Driver Front Seat Module)  PSCM (Power Steering Control Module)  FCDIM (Front Control/Display Interface Module)  FACM (Fuel Additive Control Module)  FACM (Fuel Additive Control Module)  BCM (Hybrid Electronic Cluster)  BCM (Battery Control Module)  CCS (Electronic Crash Sensor)  BCM (Battery Control Module)  CLUET (Telematic Control Module)  CLUET (Telematic Control Module)  CLUET (Telematic Control Module)  CLUET (Front Body Control Module)  CLUET (Front Body Control Module)  CLUET (Front Body Control Module)  CLUET (Front Control Interface Module)  CMU (Connectivity Master Unit)  CMU (Connectivity Master Unit)  CMU (Connectivity Master Unit)	CCM (Cruise Control Module)	0	•	•	•
LAB (Integrated Air Bag Module)  RKE (Remote Keyless Entry)  AFS (Adaptive Front Lighting System)  OFSM (Global Positioning System Module)  PAM (Parking Aid Module)  OFSM (Global Positioning System Module)  OFSM (Parking Aid Module)  OFSM (Porter Front Seat Module)  OFSM (Power Steering Control Module)  OFSM (Power Steering Control Module)  OFSM (Power Steering Control Module)  OFCDIM (Front Control/Display Interface Module)  OFACM (Fuel Additive Control Module)  OFACM (Forth Body Control Module)  OFACM (Front Body Control Module)  OFACM (Front Control Module)  OFACM (Front Control Sinterface Module)  OFACM (Fight Power Sliding Door Module)  OFACM (Fight Control Sinterface Module)  OFACM (Fight Control Sinterface Module)  OFACM (Fight Control Sinterface Module)  OFACM (Fight Control Shift On The Fly)  OMD (Connectivity Master Unit)	IPC (Instrument Panel Control Module)	0	•	•	•
RKE (Remote Keyless Entry)  AFS (Adaptive Front Lighting System)  GPSM (Global Positioning System Module)  PAM (Parking Aid Module)  DSM (Driver Front Seat Module)  DSM (Driver Front Seat Module)  PSCM (Power Steering Control Module)  FCDIM (Front Control/Display Interface Module)  FACM (Fuel Additive Control Module)  APIM (Accessory Protocol Interface Module)  DEC (Hybrid Electronic Cluster)  ECS (Electronic Crash Sensor)  DEM (Battery Control Module)  TCUFH (Telematic Control Module)  TCUFH (Telematic Control Module)  TCUFH (Telematic Control Module)  TCUFH (Power Sliding Door Module)  FDM (Passenger Front Door Module)  TPDM (Passenger Front Door Module)  TPDM (Right Power Sliding Door Module)  TPDM (Right Power Sliding Door Module)  TFFH (Front Controls Interface Module)  TFFH (Front Controls Interface Module)  TFFH (Fuel Fired Coolant Heating Module)  TFFH (Fuel Fired Coolant Heating Module)  TCMI (Connectivity Master Unit)  TMPM (Motor Pretensioner Module)	HVAC (Heating Ventilation Air Conditioning)	0	•	•	•
AFS (Adaptive Front Lighting System Module)  GPSM (Global Positioning System Module)  PAM (Parking Aid Module)  DSM (Driver Front Seat Module)  DSM (Driver Front Seat Module)  PECM (Power Steering Control Module)  FCDIM (Front Control/Display Interface Module)  FACM (Fuel Additive Control Module)  PAPIM (Accessory Protocol Interface Module)  APIM (Accessory Protocol Interface Module)  DEC (Hybrid Electronic Cluster)  DEC (Electronic Crash Sensor)  DEM (Battery Control Module)  TCU#1 (Telematic Control Module)  TCU#1 (Telematic Control Module)  PDM (Passenger Front Door Module)  PDM (Passenger Front Door Module)  PDM (Passenger Front Door Module)  RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FECIM (Front Controls Interface Module)  FFI (Fuel Fired Coolant Heating Module)  SOSF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)	IAB (Integrated Air Bag Module)	0	•	•	•
GPSM (Global Positioning System Module)	RKE (Remote Keyless Entry)	0	•	•	•
PAM (Parking Aid Module)         • <td>AFS (Adaptive Front Lighting System)</td> <td>0</td> <td>•</td> <td>•</td> <td>•</td>	AFS (Adaptive Front Lighting System)	0	•	•	•
BCMII (Body Control Module)  DSM (Driver Front Seat Module)  PSCM (Power Steering Control Module)  FCDIM (Front Control/Display Interface Module)  PACM (Fuel Additive Control Module)  APIM (Accessory Protocol Interface Module)  HEC (Hybrid Electronic Cluster)  ECS (Electronic Crash Sensor)  BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  TCU#1 (Telematic Control Module)  PDM (Passenger Front Door Module)  LPSDM (Left Power Sliding Door Module)  RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FFIH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  MPD (Motor Pretensioner Module)	GPSM (Global Positioning System Module)	0	•	•	•
DSM (Driver Front Seat Module)  PSCM (Power Steering Control Module)  FCDIM (Front Control/Display Interface Module)  FACM (Fuel Additive Control Module)  APIM (Accessory Protocol Interface Module)  HEC (Hybrid Electronic Cluster)  ECS (Electronic Crash Sensor)  BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  TCU#1 (Telematic Control Unit Module)  PDM (Passenger Front Door Module)  CPDM (Passenger Front Door Module)  CPSDM (Right Power Sliding Door Module)  ASSM (Steering Angle Sensor Module)  FFIGM (Front Controls Interface Module)  FFIGM (Front Controls Interface Module)  FFIH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)   MPM (Motor Pretensioner Module)	PAM (Parking Aid Module)	0	•	•	•
PSCM (Power Steering Control Module)  FCDIM (Front Control/Display Interface Module)  FACM (Fuel Additive Control Module)  O  APIM (Accessory Protocol Interface Module)  HEC (Hybrid Electronic Cluster)  ECS (Electronic Crash Sensor)  BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  F_BCM (Front Body Control Module)  O  D  D  D  D  D  D  D  D  D  D  D  D	BCMII (Body Control Module)	0	•	•	•
FCDIM (Front Control/Display Interface Module)  FACM (Fuel Additive Control Module)  APIM (Accessory Protocol Interface Module)  HEC (Hybrid Electronic Cluster)  ECS (Electronic Crash Sensor)  BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  F_BCM (Front Body Control Module)  CPDM (Fassenger Front Door Module)  CPDM (Left Power Sliding Door Module)  CPSASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  CFFH (Fuel Fired Coolant Heating Module)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  MPSIM (Modor Pretensioner Module)  MPM (Motor Pretensioner Module)	DSM (Driver Front Seat Module)	0	•	•	•
FACM (Fuel Additive Control Module)         ○         ●         ●           APIM (Accessory Protocol Interface Module)         ○         ●         ●           HEC (Hybrid Electronic Cluster)         ○         ●         ●           ECS (Electronic Crash Sensor)         ○         ●         ●           BCM (Battery Control Module)         ○         ●         ●           TCU#1 (Telematic Control Unit Module)         ○         ●         ●           F_BCM (Front Body Control Module)         ○         ●         ●           PDM (Passenger Front Door Module)         ○         ●         ●           LPSDM (Left Power Sliding Door Module)         ○         ●         ●           RPSDM (Right Power Sliding Door Module)         ○         ●         ●           SASM (Steering Angle Sensor Module)         ○         ●         ●           FFI (Fuel Fired Coolant Heating Module)         ○         ●         ●           FFFI (Fuel Fired Coolant Heating Module)         ○         ●         ●           CMU (Connectivity Master Unit)         ○         ●         ●           MPM (Motor Pretensioner Module)         ○         ●         ●	PSCM (Power Steering Control Module)	0	•	•	•
APIM (Accessory Protocol Interface Module)  HEC (Hybrid Electronic Cluster)  ECS (Electronic Crash Sensor)  BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  F_BCM (Front Body Control Module)  PDM (Passenger Front Door Module)  CPSDM (Left Power Sliding Door Module)  APSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFI (Fuel Fired Coolant Heating Module)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  MPM (Motor Pretensioner Module)	FCDIM (Front Control/Display Interface Module)	0	•	•	•
HEC (Hybrid Electronic Cluster)  ECS (Electronic Crash Sensor)  BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  F_BCM (Front Body Control Module)  PDM (Passenger Front Door Module)  LPSDM (Left Power Sliding Door Module)  CRPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FCIM (Front Controls Interface Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)   • • • • • • • • • • • • • • • • • •	FACM (Fuel Additive Control Module)	0	•	•	•
ECS (Electronic Crash Sensor)  BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  F_BCM (Front Body Control Module)  PDM (Passenger Front Door Module)  CPSDM (Left Power Sliding Door Module)  CRPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  • • • • • • • • • • • • • • • • • • •	APIM (Accessory Protocol Interface Module)	0	•	•	•
BCM (Battery Control Module)  TCU#1 (Telematic Control Unit Module)  F_BCM (Front Body Control Module)  O  PDM (Passenger Front Door Module)  LPSDM (Left Power Sliding Door Module)  O  RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  •  •  •  •  •  •  •  •  •  •  •  •  •	HEC (Hybrid Electronic Cluster)	0	•	•	•
TCU#1 (Telematic Control Unit Module)  F_BCM (Front Body Control Module)  O  PDM (Passenger Front Door Module)  LPSDM (Left Power Sliding Door Module)  RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  O  O  O  O  O  O  O  O  O  O  O  O  O	ECS (Electronic Crash Sensor)	0	•	•	•
F_BCM (Front Body Control Module)  PDM (Passenger Front Door Module)  CPDM (Left Power Sliding Door Module)  RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  CSASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  O • • • • • • • • • • • • • • • • • •	BCM (Battery Control Module)	0	•	•	•
PDM (Passenger Front Door Module)  LPSDM (Left Power Sliding Door Module)  RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  •  •  •  •  •  •  •  •  •  •  •  •  •	TCU#1 (Telematic Control Unit Module)	0	•	•	•
LPSDM (Left Power Sliding Door Module)  RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)	F_BCM (Front Body Control Module)	0	•	•	•
RPSDM (Right Power Sliding Door Module)  SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)   •  •  •  •  •  •  •  •  •  •  •  •	PDM (Passenger Front Door Module)	0	•	•	•
SASM (Steering Angle Sensor Module)  FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)	LPSDM (Left Power Sliding Door Module)	0	•	•	•
FCIM (Front Controls Interface Module)  FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  O  O  O  O  O  O  O  O  O  O  O  O  O	RPSDM (Right Power Sliding Door Module)	0	•	•	•
FFH (Fuel Fired Coolant Heating Module)  ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  O  O  O  O  O  O  O  O  O  O  O  O  O	SASM (Steering Angle Sensor Module)	0	•	•	•
ESOF (Electronic Shift On The Fly)  CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  O  •  •  •  •  •  •  •  •  •  •  •  •	FCIM (Front Controls Interface Module)	0	•	•	•
CMU (Connectivity Master Unit)  MPM (Motor Pretensioner Module)  O  •  •  •  •	FFH (Fuel Fired Coolant Heating Module)	0	•	•	•
MPM (Motor Pretensioner Module)	ESOF (Electronic Shift On The Fly)	0	•	•	•
	CMU (Connectivity Master Unit)	0	•	•	•
4X4 (4X4 Control Module) O • •	MPM (Motor Pretensioner Module)	0	•	•	•
	4X4 (4X4 Control Module)	0	•	•	•

S.M. (Weintel Security Module)					
SCEM (Steering Column Control Module)	VSM (Vehicle Security Module)	0	•	•	•
FDIM (Front Display Interface Module)	R_BCM (Rear Body Control Module)	0	•	•	•
DBS   Geployable Bood System	SCCM (Steering Column Control Module)	0	•	•	•
RAP   (Remote Anti-Theft/Personality Module)	FDIM (Front Display Interface Module)	0	•	•	•
LCM (Lighting Control Module)    SEC (Forward Sensing Camera)	DHS (Deployable Hood System)	0	•	•	•
PSWH (Parking Sensor Module)	RAP (Remote Anti-Theft/Personality Module)	0	•	•	•
PSMF1 (Parking Sensor Module)	LCM (Lighting Control Module)	0	•	•	•
FIP   Gruel Injection Pump	FSC (Forward Sensing Camera)	0	•	•	•
ATCM (All Terrain Control Module)  LHID (Left High Intensity Discharge Lamp)  RHID (Right High Intensity Discharge Lamp)  ESU (Electric Supply Unit)  ESM. (Blind Spot Monitoring - Left)  ESM. (Blind Spot Monitoring - Right)  SRM. (Speech Recognition Module)  HID (Head Up Display)  AM. (Amplifier Module)  SCR. (Selective Catalytic Reduction)  DICM (Intelligent Cruise Control Module)  CSCR. (Selective Catalytic Reduction)  CSCR. (Selective Classification System Module)  COSM. (Occupant Classification System Module)  DCCSM (Occupant Classification System Module)  COCSM (Occupant Classification System Module)  DCCC (DC To DC Converter Control Module)  ACC (Air Conditioning)  CRM. (Rear Vehicle Monitoring)  CMM. (Rear Vehicle Monitoring)  CMM. (Rear Conditioning Control Module)  CMM. (Hilt Spot Monitoring)  CMM. (Hilt Spot Monitoring)  CMM. (Hilt Conditioning Control Module)  CMM. (Hilt Conditioning Control Module)  CMM. (Hilt Conditio	PSM#1 (Parking Sensor Module)	0	•	•	•
LHID (Left High Intensity Discharge Lamp)	FIP (Fuel Injection Pump)	0	•	•	•
RHID (Right High Intensity Discharge Lamp)  ESU (Electric Supply Unit)  DSML (Blind Spot Monitoring - Left)  DSMR (Blind Spot Monitoring - Right)  SRM (Speech Recognition Module)  HUD (Head Up Display)  AM (Amplifier Module)  SCR (Selective Catalytic Reduction)  PLG (Power Liftgate)  CCM (Intelligent Cruise Control Module)  OCSM (Occupant Classification System Module)  OCSM (Occupant Classification System Module)  OCSM (Occupant Classification System Module)  OCCOM (Intelligent Module)  OCCOM (Intelligent Module)  OCCOM (Compant Classification System Module)  OCCOM (Air Conditioning)  OCCOM (Rear Vehicle Monitoring)  OCCOM (Rear Vehicle Monitoring)  OCCOM (Rear Vehicle Monitoring)  OCCOM (Compant Classification System Module)  OCCOM (Rear Vehicle Monitoring)  OCCOM (Rear Vehicle Mo	ATCM (All Terrain Control Module)	0	•	•	•
ESU (Electric Supply Unit)  DBML (Blind Spot Monitoring - Left)  DBMR (Blind Spot Monitoring - Right)  SPM (Speech Recognition Module)  HUD (Head Up Display)  AM (Amplifier Module)  SCR (Selective Catalytic Reduction)  PLG (Power Liftgate)  CCM (Intelligent Cruise Control Module)  OCSM (Occupant Classification System Module)  OCSM (Occupant Classification System Module)  DCDC (DC To DC Converter Control Module)  A/C (Air Conditioning)  RVM (Rear Vehicle Monitoring)  DBM/GEM (Body Control Module/Generic Electronic Module)  DBM/GEM (Body Control Module/Generic Electronic Module)  DSMR (Blind Spot Monitoring)  DSMR (Blind Spot Monitoring)  DSMR (Chir Conditioning Control Module)  DSMR (Chir Canditioning Control Module)  DSMR (C	LHID (Left High Intensity Discharge Lamp)	0	•	•	•
BSML (Blind Spot Monitoring - Left)  DSMR (Blind Spot Monitoring - Right)  SRM (Speech Recognition Module)  HID (Head Up Display)  AM (Amplifier Module)  SCR (Selective Catalytic Reduction)  PLG (Power Liftgate)  ICCM (Intelligent Cruise Control Module)  GEM/SJB (Generic Electronic Module/Smart Junction Box)  OCSM (Occupant Classification System Module)  DCDC (DC To DC Converter Control Module)  A/C (Air Conditioning)  RYM (Rear Vehicle Monitoring)  BCM/GEM (Body Control Module/Generic Electronic Module)  ACCMM2 (Air Conditioning Control Module)  DCDC (DC To DC Converter Control Module)  DCDC (DC To DC Converte	RHID (Right High Intensity Discharge Lamp)	0	•	•	•
BSWR (Blind Spot Monitoring - Right)  SRM (Speech Recognition Module)  O  HUD (Head Up Display)  AM (Amplifier Module)  SCR (Selective Catalytic Reduction)  PLG (Power Liftgate)  ICCM (Intelligent Cruise Control Module)  GEM/SJB (Generic Electronic Module/Smart Junction Box)  OCSM (Occupant Classification System Module)  IPM-A (Image Processing Module A)  DCDC (DC To DC Converter Control Module)  A/C (Air Conditioning)  RVM (Rear Vehicle Monitoring)  BCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  DARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  RVM (Rear Gate/Trunk Module)  RGTM (Rear Gate/Trunk Module)  RGTM (Rear Gate/Trunk Module)  RGCM(Rear Gate/Trunk Module)	ESU (Electric Supply Unit)	0	•	•	•
SRM (Speech Recognition Module)         • <t< td=""><td>BSML (Blind Spot Monitoring - Left)</td><td>0</td><td>•</td><td>•</td><td>•</td></t<>	BSML (Blind Spot Monitoring - Left)	0	•	•	•
HUD (Head Up Display)  AM (Amplifier Module)  SCR (Selective Catalytic Reduction)  PLG (Power Liftgate)  ICCM (Intelligent Cruise Control Module)  GEM/SJB (Generic Electronic Module/Smart Junction Box)  OCSM (Occupant Classification System Module)  IPM-A (Image Processing Module A)  DCDC (DC To DC Converter Control Module)  A/C (Air Conditioning)  RVM (Rear Vehicle Monitoring)  BCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  UTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)	BSMR (Blind Spot Monitoring - Right)	0	•	•	•
AM (Amplifier Module)  SCR (Selective Catalytic Reduction)  PLG (Power Liftgate)  ICCM (Intelligent Cruise Control Module)  GEM/SJB (Generic Electronic Module/Smart Junction Box)  OCSM (Occupant Classification System Module)  OCSM (Occupant Classification System Module)  IPM-A (Image Processing Module A)  DCDC (DC To DC Converter Control Module)  A/C (Air Conditioning)  RVM (Rear Vehicle Monitoring)  DCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  DSM (Blind Spot Monitoring)  DLTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RTCM#1 (Reductant Control Module)  RTCM#1 (Reductant Control Module)  RTCM#1 (Reductant Control Module)	SRM (Speech Recognition Module)	0	•	•	•
SCR (Selective Catalytic Reduction)  CRY (Power Liftgate)  CGEM/SJB (Generic Electronic Module)  CGEM/SJB (Generic Electronic Module/Smart Junction Box)  COSM (Occupant Classification System Module)  COSM (Cocupant Classification Bodule)  COSM (Cocupation	HUD (Head Up Display)	0	•	•	•
PLG (Power Liftgate)	AM (Amplifier Module)	0	•	•	•
ICCM (Intelligent Cruise Control Module)  GEM/SJB (Generic Electronic Module/Smart Junction Box)  OCSM (Occupant Classification System Module)  OCSM (Intelligent Cruise Electronic Module)  OCSM (Occupant Classification System Module)  OCSM (Intelligent Cruise Electronic Module)  OCSM (Intelligent Electronic Module	SCR (Selective Catalytic Reduction)	0	•	•	•
GEM/SJB (Generic Electronic Module/Smart Junction Box)  OCSM (Occupant Classification System Module)  OCSM (Occupant Classification System Module)  OCSM (Occupant Classification System Module)  OCSM (Inage Processing Module A)  OCSM (Occupant Classification System Module)  OCSM (Occupation System Module)  OCSM (Occupation Module)  O	PLG (Power Liftgate)	0	•	•	•
OCSM (Occupant Classification System Module)         • <td>ICCM (Intelligent Cruise Control Module)</td> <td>0</td> <td>•</td> <td>•</td> <td>•</td>	ICCM (Intelligent Cruise Control Module)	0	•	•	•
IPM-A (Image Processing Module A)  DCDC (DC To DC Converter Control Module)  A/C (Air Conditioning)  RVM (Rear Vehicle Monitoring)  BCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  CHM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RHT (Redractable Hard Top)  RHT (Retractable Hard Top)	GEM/SJB (Generic Electronic Module/Smart Junction Box)	0	•	•	•
DCDC (DC To DC Converter Control Module)  A/C (Air Conditioning)  RVM (Rear Vehicle Monitoring)  BCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  LTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RHT (Retractable Hard Top)  O O O O O O O O O O O O O O O O O O O	OCSM (Occupant Classification System Module)	0	•	•	•
A/C (Air Conditioning)  RVM (Rear Vehicle Monitoring)  BCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  LTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RHT (Retractable Hard Top)	IPM-A (Image Processing Module A)	0	•	•	•
RVM (Rear Vehicle Monitoring)  BCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  LTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RGTM (Reductant Control Module)  RHT (Retractable Hard Top)	DCDC (DC To DC Converter Control Module)	0	•	•	•
BCM/GEM (Body Control Module/Generic Electronic Module)  ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  LTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)	A/C (Air Conditioning)	0	•	•	•
ACCM#2 (Air Conditioning Control Module)  BSM (Blind Spot Monitoring)  LTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)	RVM (Rear Vehicle Monitoring)	0	•	•	•
BSM (Blind Spot Monitoring)  LTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)	BCM/GEM (Body Control Module/Generic Electronic Module)	0	•	•	•
LTM (Liftgate/Trunk Module)  SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)	ACCM#2 (Air Conditioning Control Module)	0	•	•	•
SDARS (Satellite Digital Audio Receiver System)  MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)  O  O  O  O  O  O  O  O  O  O  O  O  O	BSM (Blind Spot Monitoring)	0	•	•	•
MID#1 (Multi-Information Display)  EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)  O  O  O  O  O  O  O  O  O  O  O  O  O	LTM (Liftgate/Trunk Module)	0	•	•	•
EATC#1 (Electronic Air Temperature Controller)  RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)  O  •  •  •  •  •  •  •  •  •  •  •  •	SDARS (Satellite Digital Audio Receiver System)	0	•	•	•
RGTM (Rear Gate/Trunk Module)  RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)  O  •  •  •  •  •  •  •  •  •  •  •  •	MID#1 (Multi-Information Display)	0	•	•	•
RDCM#1 (Reductant Control Module)  RHT (Retractable Hard Top)  O  •  •  •  •  •  •  •  •  •  •  •  •	EATC#1 (Electronic Air Temperature Controller)	0	•	•	•
RHT (Retractable Hard Top)	RGTM (Rear Gate/Trunk Module)	0	•	•	•
	RDCM#1 (Reductant Control Module)	0	•	•	•
SBS/MRCC (Smart Brake Support/Mazda Radar Cruise Control)	RHT (Retractable Hard Top)	0	•	•	•
	SBS/MRCC (Smart Brake Support/Mazda Radar Cruise Control)	0	•	•	•
AFS/ALM (Adaptive Front Lighting System/Auto Leveling Mod	AFS/ALM (Adaptive Front Lighting System/Auto Leveling Mod	0	•	•	•

TRM (Trailer Module)	0	•	•	•
ACU (Audio Control Unit)	0	•	•	•
SSU#1 (Start Stop Unit)	0	•	•	•
SCBS (Smart City Brake Support)	0	•	•	•
BCM#1 (Body Control Module)	0	•	•	•
DCM (Data Communication Module)	0	•	•	•
EVP#1 (Electrical Vacuum Pump)	0	•	•	•
TBM (Tracking And Blocking Module)	0	•	•	•