

TOYOTA/LEXUS/SCION ECM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

CarMode	CarMode	CarMode	CarMode
4Runner	ALLION/PREMIO	ALPHARD	ALPHARD HV
ALPHARD HV/VELLFIRE HV	ALPHARD/VELLFIRE	ALTEZZA/ALTEZZA GITA	AQUA
ARISTO	AURIS	AURIS HV	AVENSIS
AYGO	Avalon	Avalon HV	BB
BELTA	BLADE	C-HR	C-HR HV
CALDINA	CAMRY	CAMRY HV	CAMRY/AURION
CARINA	CELSIOR	CENTURY	COASTER
COMFORT	COROLLA	COROLLA AXIO	COROLLA AXIO HV/FIELDER HV
COROLLA AXIO/FIELDER	COROLLA HV	COROLLA HV/AURIS HV	COROLLA RUMION
COROLLA RUNX/ALEX	COROLLA SPACIO	COROLLA VERSO	COROLLA/AURIS
CROWN	CROWN COMFORT	CROWN ESTATE	CROWN HV
CROWN MAJESTA	CROWN Mild Hybrid	CROWN PATROL CAR	CROWN SEDAN/COMFORT
CT200h	Celica/CURREN	Corolla iM	DYNA
E'z	ES200	ES240	ES250
ES300h	ES350	ESTIMA	ESTIMA HV
ETIOS	FJ CRUISER	FORTUNER/HILUX SW4	Fun Cargo
GAIA	GS F	GS200t	GS250
GS300	GS300h	GS350	GS430
GS450h	GS460	GX400	GX460
GX470	Granvia/GRAND HIACE	HARRIER	HARRIER HV
HIACE	HIACE/REGIUSACE/HIMEDIC	HIGHLANDER HV	HIGHLANDER/KLUGER
HILUX SURF	HONGQI	HS250h	Highlander
Hilux	INNOVA/KIJANG INNOVA	IPSUM	IS F
IS200D	IS200t	IS220D	IS250
IS250C	IS300	IS300C	IS300h
IS350	IS350C	ISIS	Japan SDF Vehicle
KLUGER	KLUGER HV	LAND CR PRADO	LAND CR.
LAND CRUISER	LAND CRUISER PRADO	LC500	LC500h
LEVIN	LEVIN HV	LFA	LITEACE
LS350	LS430	LS460	LS500
LS500h	LS600h	LX450d	LX460
LX470	LX570	MARK X	MARK X Zio
MARK2 QUALIS/CAMRY GRACIA	MARK2/MARK2 BLIT	MR-S	MR2
Matrix	NADIA	NOAH	NOAH HV/VOXY HV
NOAH HV/VOXY HV/ESQUIRE HV	NOAH/VOXY	NOAH/VOXY/ESQUIRE	NX200
NX200t	NX300	NX300h	Opa
PLATZ	PORTE/SPADE	PREVIA HV	PREVIA/TARAGO
PRIUS	PRIUS +/PRIUS V	PRIUS +/PRIUS V/PRIUS ALPHA	PRIUS C
PRIUS PHV	PRIUS Plug-in	PRIUS alpha	PRIUS α
PROBOX/SUCCEED	PROGRES/BREVIS	Prius Prime	Prius V
Pronard	QUICKDELIVERY	RACTIS	RAUM
RAV4	RC-F	RC200t	RC300
RC300h	RC350	REGIUS/TOURING HIACE	REIZ
RUKUS	RX200t	RX270	RX300
RX350	RX400H	RX450h	Rav4 HV
SAI	SC430	SDF Vehicle	SEQUOIA
SIENTA	SIENTA HV	SOARER	SPADE
SUPRA	SURF	Sienna	Solara

TOWNACE	TOYOACE/CAMROAD/DYNA 150/100	TOYOACE/DYNA 150/100	TOYOACE/DYNA 200
TUNDRA	Tacoma	URBAN CRUISER	VANGUARD
VELLFIRE	VERSO	VIOS	VITZ
VITZ HV	VOLTZ	Venza	Verossa
Verso-s	Verso-s/Ractis	Vista/Vista Ardeo	WINDOM
WISH	WiLL Cypha	WiLL VS	WiLL Vi
YARIS HV	YARIS/ECHO	Yaris	Yaris R
Yaris iA	ZELAS	ZZZ1_P3S	ZZZ2_P4S
ZZZ3_P4C	ZZZ4_P5C	iA	iM
iQ	ist	tC	xB
xD			

ECM Function List (Note:For reference only)

Crank Time Compensation Reset
Deceleration Sensor Zero Point Calibration
Deceleration Sensor Zero Point Clear
ECU Exchange
Engine History Utility
Engine control initialization
History Clear
Key-On Engine Running Self-Test
Learning Value Reset
Shift Control Synchronization
Starter Actuation Count Utility
Supply Pump Initialization
Total Number of Engine Starts Reset
Vehicle Mileage Write