

TOYOTA\_V11.10 Diag Function List(Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

System	EcuInfo	Read Codes	Erase Codes	Live Data
ENGINE AND ECT	○	●	●	●
ENGINE	○	●	●	●
ECT	○	●	●	●
Cruise Control	○	●	●	●
Engine(LH Bank)	○	●	●	●
Engine(RH Bank)	○	●	●	●
HV Battery	○	●	●	●
Hybrid Control	○	●	●	●
Sequential M/T	○	●	●	●
Stop And Go	○	●	●	●
Multi-Mode M/T	○	●	●	●
Radar Cruise	○	●	●	●
Radar Cruise2	○	●	●	●
Laser Cruise	○	●	●	●
E-ACM	○	●	●	●
Motor Generator	○	●	●	●
FCDC	○	●	●	●
FC External Power Supply	○	●	●	●
FC	○	●	●	※
FCHV	○	※	※	※
Idle HV	○	●	●	●
Engine2	○	●	●	●
Transmission	○	●	●	●
ASG	○	●	●	※
AMT	○	●	●	●
A/T	○	●	●	●
Rear Motor Generator	○	●	●	●
EFI	○	●	●	●
Cruise control (SIL diesel engine)	○	●	●	●
ABS/VSC/TRC	○	●	●	●
AHC	○	●	●	●
AIR SUSPENSION	○	●	●	●
FREE TRONIC	○	●	●	●
EHPS	○	●	●	●
EMPS	○	●	●	●
EMS	○	●	●	●
Air suspension/AHC/EMS	○	●	●	●
KDSS	○	●	●	●
ABS/VSC/TRAC/EPB	○	●	●	●
4WD	○	●	●	●
Lane Departure Alert	○	●	●	●
Tire Pressure Monitor	○	●	●	●
ABS/DSC/TCS	○	●	●	●
Electronic-Controlled Power Steering	○	●	●	●
VGRS	○	●	●	●

Stabilizer	○	●	●	●
Intelligent Parking Assist	○	●	●	●
Electric Parking Brake	○	●	●	●
Lane Keeping Aisst	○	●	●	●
Front Stabilizer	○	●	●	●
Rear Stabilizer	○	●	●	●
ARS	○	●	●	●
PPS	○	●	●	●
Front Recognition Camera	○	●	●	●
LKA/LDA	○	●	●	●
LKA/LDA (Sub)	○	●	●	●
PCS/LDA/RSA/LVN	○	●	●	●
Parking Assist Camera	○	●	●	●
EPS	○	●	●	●
Four Wheel Drive	○	●	●	●
AFS	○	●	●	●
AIR CONDITIONER	○	●	●	●
BACK DOOR	○	●	●	●
BODY	○	●	●	●
BODY2	○	●	●	●
BODY NO3	○	●	●	●
BODY NO4	○	●	●	●
BODY NO5	○	●	●	●
CLEARANCE SONAR	○	●	●	●
COMBI SW	○	※	※	※
D-DOOR	○	●	●	●
D-SEAT	○	●	●	●
GATEWAY	○	●	●	●
MIRROR	○	※	※	●
MIRROR-L	○	※	※	●
MIRROR-R	○	※	※	●
OCCUPANT DETECT	○	●	●	●
P-DOOR	○	●	●	●
P-SEAT	○	●	●	●
PWR SOURCE CTRL	○	●	●	●
RAIN SENSOR	○	●	●	●
REAR-SEAT SW	○	※	※	●
RL-DOOR MOTOR	○	●	●	●
RL-SEAT	○	※	※	●
RR-DOOR MOTOR	○	●	●	●
RR-SEAT	○	※	※	●
SLIDE ROOF	○	●	●	●
SRS AIRBAG	○	●	●	●
STEERING PAD SWITCH	○	※	※	●
TILT&TELESCO	○	●	●	●
WIPER	○	※	※	●
Main Body	○	●	●	●
Tvss	○	●	●	●
Entry&Start	○	●	●	●
Master Switch	○	●	●	●
HV Gateway	○	●	●	●
Night View	○	●	●	●
HL AutoLeveling	○	●	●	●
Gateway BEAN	○	●	●	※

Accessory Gateway	○	●	●	●
Front Left Seat A/C	○	●	●	●
Front Right Seat A/C	○	●	●	●
Gateway CAN	○	●	●	※
ECM Gateway	○	●	●	●
ECB Gateway	○	●	●	●
WIL Gateway	○	●	●	●
Center Console Switch	○	※	●	●
Rear Console Switch	○	●	●	●
Rear Left Seat A/C	○	●	※	●
Rear Right Seat A/C	○	●	※	●
Electric Power Control	○	●	●	●
Active Headrest R	○	●	●	●
Active Headrest L	○	●	●	●
Combination Meter	○	●	●	●
Theft Deterrent	○	●	●	●
Pre-Crash	○	●	●	●
Pre-Crash 2	○	●	●	●
PM1 Gateway	○	●	●	●
PM2 Gateway	○	●	●	●
Charging Control	○	●	●	●
Night	○	●	●	●
Smart Access	○	●	●	●
IMB	○	●	●	●
Meter	○	●	●	●
AHS	○	●	●	●
ITS Connect	○	●	●	●
Combi SW	○	※	※	※
Restraint Control Module	○	●	●	●
SCBS	○	●	●	●
Navigation Receiver	○	●	●	※
Remote Security	○	●	●	●
CAN bus Gateway	○	●	●	●
Remote Generator Start	○	※	※	●
Powertrain Gateway2	○	●	●	●
Pedal	○	※	●	●
Radar Cruise	○	●	●	●
Front Left Door	○	●	●	●
Front Right Door	○	●	●	●
Telematic	○	●	●	●
P Master Switch	○	●	●	●
Blind Spot Monitor R	○	●	●	●
Blind Spot Monitor L	○	●	●	●
Active Rear Wing	○	●	●	●
Transmission Control	○	●	●	●
Multi Bus Gateway	○	●	●	●
Multi Bus Monitor No.1	○	●	●	●
Multi Bus Monitor No.2	○	●	●	●
Gateway V	○	●	●	●
IMMOBILISER	○	●	●	●
Central Gateway	○	●	●	●
Head Up Display	○	●	●	●
IPA/ICS/Clearance Sonar	○	●	●	●
PSD_RH	○	●	●	●

PSD LH	○	●	●	●
Power Source Control	○	●	●	※
A/B	○	●	●	※
Theft Deterrent (CAN)	○	●	●	●
Smart Key	○	●	●	●
Intuitive P/A	○	●	●	●
Sliding Sunshade	○	●	●	●
Sliding Roof	○	●	●	●
Driver Seat	○	●	●	●
ASC	○	●	●	●
steering lock	○	●	●	●