

VAUXHALL ETC Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Year	Model	ETC
2005	Vauxhall-Monaro	●
2006	Vauxhall-Monaro	●
2007	Antara-CaptivaShort-Body	●
2007	Vauxhall-VXR8	●
2008	Antara-CaptivaShort-Body	●
2008	Vauxhall-VXR8	●
2009	Antara-CaptivaShort-Body	●
2009	Insignia	●
2009	Vauxhall-VXR8	●
2010	Antara-CaptivaShort-Body	●
2010	Astra-J	●
2010	Corsa-D	●
2010	Insignia	●
2010	Meriva-B	●
2011	Antara-CaptivaShort-Body	●
2011	Astra-J	●
2011	Corsa-D	●
2011	Insignia	●
2011	Meriva-B	●
2011	Vauxhall-VXR8	●
2012	Astra-J	●
2012	Corsa-D	●
2012	Insignia	●
2012	Meriva-B	●
2012	Vauxhall-VXR8	●
2012	Zafira-C	●
2013	Adam	●
2013	Astra-J	●
2013	Cascada	●
2013	Corsa-D	●
2013	Insignia	●
2013	Meriva-B	●
2013	Mokka	●
2013	Zafira-C	●
2014	Adam	●
2014	Astra-J	●
2014	Cascada	●
2014	Corsa-D	●
2014	Insignia	●
2014	Meriva-B	●
2014	Mokka	●
2014	Zafira-C	●
2015	Adam	●
2015	Astra-J	●
2015	Cascada	●
2015	Corsa-E	●
2015	Insignia	●
2015	Meriva-B	●
2015	Mokka	●
2015	Zafira-C	●

2016	Adam	●
2016	Astra-J	●
2016	Astra-K	●
2016	Cascada	●
2016	Corsa-E	●
2016	Insignia	●
2016	Karl-Viva	●
2016	Meriva-B	●
2016	Mokka	●
2016	Zafira-C	●
2017	Adam	●
2017	Astra-J	●
2017	Astra-K	●
2017	Cascada	●
2017	Corsa-E	●
2017	Crossland-X	●
2017	Insignia	●
2017	Karl-Viva	●
2017	Meriva-B	●
2017	Mokka	●
2017	Zafira-C	●
2018	Adam	●
2018	Astra-J	●
2018	Astra-K	●
2018	Cascada	●
2018	Corsa-E	●
2018	Crossland-X	●
2018	Grandland-X	●
2018	Karl-Viva	●
2018	Mokka	●
2018	Zafira-C	●
2019	Adam	●
2019	Astra-J	●
2019	Astra-K	●
2019	Cascada	●
2019	Corsa-E	●
2019	Crossland-X	●
2019	Grandland-X	●
2019	Insignia-B	●
2019	Karl-Viva	●
2019	Mokka	●
2019	Zafira-C	●
2020	Astra-J	●
2020	Astra-K	●
2020	Crossland-X	●
2020	Grandland-X	●
2020	Insignia-B	●

ETC Function List

Read Throttle Again

Throttle Body Idle Air Flow Compensation Reset

Replace Throttle Actuator

Throttle Sweep

Throttle Actuator Reset

Throttle Position

Throttle Position Learn