

VAUXHALL MIS Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Year	Model	MIS
2009	Insignia	●
2010	Astra-J	●
2010	Insignia	●
2011	Antara	●
2011	Astra-J	●
2011	Insignia	●
2012	Ampera	●
2012	Antara	●
2012	Astra-J	●
2012	Combo-D	●
2012	Insignia	●
2012	Zafira-C	●
2013	Adam	●
2013	Ampera	●
2013	Antara	●
2013	Astra-J	●
2013	Cascada	●
2013	Combo-D	●
2013	Insignia	●
2013	Mokka	●
2013	Zafira-C	●
2014	Adam	●
2014	Ampera	●
2014	Antara	●
2014	Astra-J	●
2014	Cascada	●
2014	Combo-D	●
2014	Insignia	●
2014	Meriva-B	●
2014	Mokka	●
2014	Zafira-C	●
2015	Adam	●
2015	Ampera	●
2015	Antara	●
2015	Astra-J	●
2015	Cascada	●
2015	Combo-D	●
2015	Corsa-E	●
2015	Insignia	●
2015	Meriva-B	●
2015	Mokka	●
2015	Movano-B	●
2015	Vivaro-B	●
2015	Zafira-C	●
2016	Adam	●
2016	Antara	●
2016	Astra-J	●
2016	Astra-K	●
2016	Cascada	●
2016	Combo-D	●
2016	Corsa-E	●
2016	Insignia	●
2016	Karl-Viva	●

2016	Meriva-B	●
2016	Mokka	●
2016	Movano-B	●
2016	Vivaro-B	●
2016	Zafira-C	●
2017	Adam	●
2017	Ampera-E	●
2017	Antara	●
2017	Astra-J	●
2017	Astra-K	●
2017	Cascada	●
2017	Combo-D	●
2017	Corsa-E	●
2017	Crossland-X	●
2017	Insignia	●
2017	Karl-Viva	●
2017	Meriva-B	●
2017	Mokka	●
2017	Movano-B	●
2017	Vivaro-B	●
2017	Zafira-C	●
2018	Adam	●
2018	Ampera-E	●
2018	Astra-J	●
2018	Astra-K	●
2018	Cascada	●
2018	Combo-D	●
2018	Corsa-E	●
2018	Crossland-X	●
2018	Grandland-X	●
2018	Insignia-B	●
2018	Karl-Viva	●
2018	Mokka	●
2018	Movano-B	●
2018	Vivaro-B	●
2018	Zafira-C	●
2019	Adam	●
2019	Ampera-E	●
2019	Astra-J	●
2019	Astra-K	●
2019	Cascada	●
2019	Corsa-E	●
2019	Crossland-X	●
2019	Grandland-X	●
2019	Insignia-B	●
2019	Karl-Viva	●
2019	Mokka	●
2019	Movano-B	●
2019	Combo-E	●
2019	Vivaro-B	●
2019	Zafira-C	●
2020	Astra-J	●
2020	Astra-K	●
2020	Crossland-X	●
2020	Grandland-X	●
2020	Insignia-B	●
2020	Movano-B	●
2020	Combo-E	●

MIS Function List

AWD Disabled-by-Malfunction Counter Reset

Adjustable Pedals Softstops Learn
All Cameras Alignment Learn
Ambient Air Temperature Calculation Reset
Assembly Plant Mode
BARO Sensor Reset
Brake Pedal Travel Sensor Learn
Brake Pressure Sensor Reset
Brake System Plunger Motor Position Sensor Learn
Brake System Plunger Pressure Rise Starting Point Learn
Calculated Fuel Economy Setup
Catalyst Reset
Clear Disable History Data
Clutch Pedal Position Learn
Control Module Reset
Crankshaft Position Reluctor Ring Learn
Cylinder Deactivation Exhaust Flow Control Valve Learn
DC Charging Disabled Reset
Distance Sensing Cruise Control Module
EHU24 Audio
EHU24 General No AuxIn
EHU5 Audio
Engine Coolant Overtemperature Warning Reset
Engine Run-in Performance Limitation
Erase All Key Fobs
Erase Valet Mode Code
Erase/Program All Key Fobs
Excessive Clutch Slip Data Reset
Exhaust Flow Control Valve Learn
Exhaust Gas Temperature Sensor Reset
Front Camera Alignment Learn
Frontview Camera Learn
Fuel Economy Reset
Gear Position Sensor Learn
Generator Overtemperature Counter Reset
H02S Heater Learn
H02S Heater Resistance Learned Values Reset
HVAC Afterblow Configuration
Intake System Learned Values Reset
Key Fob 1
Key Fob 2
Key Fob 3
Key Fob 4
Key Fob 5
Key Fob 6
Key Fob 7
Key Fob 8
Knock Counter Reset
Left Camera Alignment Learn
Liftgate Disable History Reset
Long Range Radar Sensor Module Learn
Module Setup
N0x Adsorber Catalyst Data Reset
Neutral Position Sensor Learn
Next Available Slot
Overboost Counter Reset
Parking Heater Failed Start Counter Reset
Parking Heater Overheat Counter Reset
Passenger Compartment Heater Coolant Control Solenoid Valve Learn
Preferred Roaming List Update
Read LIN Bus Device ID Information

Rear Camera Alignment Learn
Remote Vehicle Start Disable History Reset
Reset Teen Driver Key PIN
Right Camera Alignment Learn
SIM Card Data
Service Interval Reset
Setup SDM Part Number in BCM
Showroom Mode
Starter Activations Reset
Temperature Code Index
Trailer Stability Control
Transmission Adaptive Pressure Reset
Transmission Adaptive Torque Reset
Transmission Adaptive Values Learn
Turbocharger Wastegate Learn
Vehicle Direction Camera Learn
Vehicle Health Data Upload
Vehicle Inclination Sensor