

VOLVO MIS Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Year	MIS
C30	2011	●
C30	2012	●
C30	2013	●
C70	2011	●
C70	2012	●
C70	2013	●
S40	2011	●
S40	2012	●
S60	2011	●
S60	2012	●
S60	2013	●
S60	2014	●
S60	2015	●
S60	2016	●
S60	2017	●
S60	2018	●
S60	2019	●
S60	2020	●
S60L	2019	●
S80	2007	●
S80	2008	●
S80	2009	●
S80	2010	●
S80	2011	●
S80	2012	●
S80	2013	●
S80	2014	●
S80	2015	●
S80	2016	●
S90	2017	●
S90	2018	●
S90	2019	●
S90	2020	●
S90L	2017	●
S90L	2018	●
S90L	2019	●
S90L	2020	●
V40	2013	●
V40	2014	●
V40	2015	●
V40	2016	●
V40	2017	●
V40	2018	●
V50	2011	●
V50	2012	●
V60	2011	●
V60	2012	●
V60	2013	●
V60	2014	●
V60	2015	●
V60	2016	●

V60	2017	●
V60	2018	●
V60	2019	●
V60	2020	●
V60 CROSS COUNTRY	2020	●
V70	2008.06-2008.12	●
V70	2009	●
V70	2010	●
V70	2011	●
V70	2012	●
V70	2013	●
V70	2014	●
V70	2015	●
V70	2016	●
V90	2017	●
V90	2018	●
V90	2019	●
V90	2020	●
V90 CROSS COUNTRY	2017	●
V90 CROSS COUNTRY	2018	●
V90 CROSS COUNTRY	2019	●
V90 CROSS COUNTRY	2020	●
XC40	2018	●
XC40	2019	●
XC40	2020	●
XC60	2009	●
XC60	2010	●
XC60	2011	●
XC60	2012	●
XC60	2013	●
XC60	2014	●
XC60	2015	●
XC60	2016	●
XC60	2017	●
XC60	2018	●
XC60	2019	●
XC60	2020	●
XC70	2008	●
XC70	2009	●
XC70	2010	●
XC70	2011	●
XC70	2012	●
XC70	2013	●
XC70	2014	●
XC70	2015	●
XC70	2016	●
XC90	2016	●
XC90	2017	●
XC90	2018	●
XC90	2019	●
XC90	2020	●

MIS Function List

Resetting The Counter For Gearbox Oil Change

Adaptation Of The Exhaust Gas Recirculation(EGR) Valve

Resetting The Adaptation

Activating Gear Indication

Adaptation Of Mass Airflow Sensor

Adaptation Of Turbo Control Motor

Adaptation Of Fuel Pressure Control Valve
Check The Brake Light Switch And Brake Pedal Control Switch Adjustment
Programming Of Parking Assistance Module (PAM)
Adaptation Of Oil Level Sensor
Adjusting Calculated Oil Level
Calibration Of Gear Indication
Activating Of Gear Indication
Calibration Of Gear Position Sensor
Resetting The Flywheel Adaptions
Resetting The Fuel Adaption Values
Resetting Adaptations For Fuel/Air Mix (Fuel Trim)
Resetting Adaptations For Rear Heated Oxygen Sensor Regulation
Resetting Adaptations For The Fuel Pump, Low Pressure Side
Resetting Counter For Fuel Ageing
Test Of Fuel Flow Regulation Valve
Resetting Adaptations For Fuel Flow Regulation Valve
Resetting Adaptations For Front Heated Oxygen Sensor
Resetting Adaptations For Rear Heated Oxygen Sensor
Bleeding The Oil Pressure Pump
Gear Position Sensor Calibration
Calibration Of Brake Control Module (BCM) Internal Hydraulic Control Unit
Maintenance Position, Damper Motor
Calibrate Damper Motor
Identification Of The Control Module
Oil Pressure Pump DEM (Differential Electronic Module) Bleeding
Calibrate The Differential Electronic Module (DEM)
Reset The Adaptation Function Of The Fuel/Air Mixing (Fuel Trim)
Read The Fuel Adaptation Range
Resetting Adaptations For Air Flow Measurement
Resetting Adaptations For The Fuel System (High Pressure Side)
Adaption Of Oil Level Sensor
Reset EGR Valve Adaptive Value
Initialize Trunk Lid Motor
Calibrate The Inertial Measurement Unit (IMU)
Reset ItpMS Calibration Data And Related DtCs