




Fountain Assembly instructions



Please refer to parts letters when assembling.
If you need some more installation videos or warranty information
& return policy, please Scan QR cord



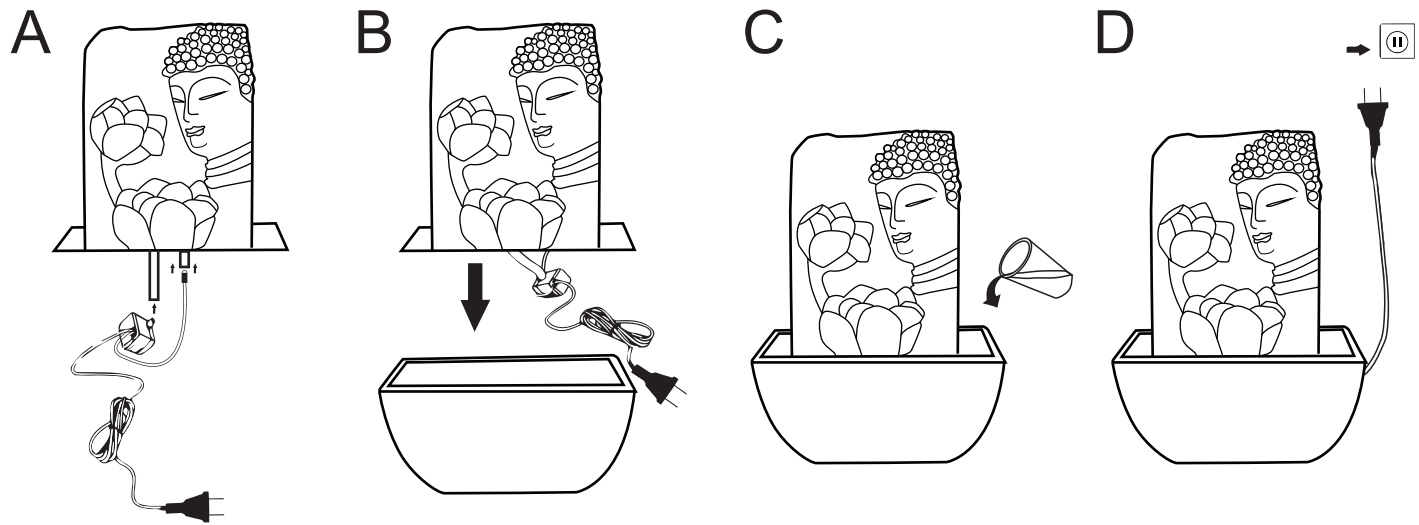

ASSEMBLY INSTRUCTIONS:

STEP 1 - POSITION STATUE PORTION OF FOUNTAIN ON AN EVEN SURFACE. PUSH LED TO THE HOSE AND THEN CONNECT THE PUMP TO THE HOSE (AS SHOWN).

STEP 2 - POSITION BOWL ON EVEN SURFACE, PLACE STATUE PORTION OF FOUNTAIN ONTO BOWL-BASE. LET OUT THE POWER CABLE FROM BACK OF THE FOUNTAIN

STEP 3 - FILL THE FOUNTAIN WITH WATER AND ENSURE THE PUMP IS COMPLETELY SUBMERGED IN WATER

STEP 4 - PLACE SMALL STONES AND CANDLES ON THE FOUNTAIN AS YOU LIKE.

STEP 5 - ENSURE THE CABLE IS POSITIONED TO FORM A DRIP LOOP SO THAT NO WATER CAN SEEP FROM THE BACK TO THE MAIN OUTLET/PLUG.

STEP 6 - ONCE FOUNTAIN IS ASSEMBLED, INSERT PLUG INTO PROPER OUTLET. WATER MAY TAKE A SHORT TIME TO BEGIN FLOWING AS AIR CLEARS FROM THE PUMP TO THE HOSE. WATER FLOW IS ADJUSTABLE BY LEVER ON SIDE OF THE PUMP.

BE SURE TO DISCONNECT FROM THE MAIN OUTLET BEFORE MAKING ANY FOUNTAIN ADJUSTMENTS

IF THE WATER SPLASH OUT OF THE FOUNTAIN OR IF YOU WANT THE WATER RUN SLOWER, YOU CAN ADJUST THE SWITCH ON THE PUMP



WARNINGS:

- FOR INDOOR USE ONLY.
- CHECK FOR LEAKS & SPLASHING AFTER INITIAL SET-UP.
- DO NOT LEAVE FOUNTAIN RUNNING FOR LONG PERIODS OF TIME AND NEVER UNATTENDED.
- CHECK THE AREA AROUND FOUNTAIN REGULARLY TO ENSURE NO LEAKAGE.

MAINTENANCE:

- KEEP WATER CLEAN TO REDUCE MINERAL BUILD-UP, CLEAN PERIODICALLY.
- THE PUMP MUST ALWAYS BE FULLY SUBMERGED IN WATER (EVEN WHEN NOT IN USE) AND NEVER BE PERMITTED TO RUN DRY AS THIS COULD CAUSE PERMANENT DAMAGE. ALSO, WITHOUT SUFFICIENT WATER, IT WILL ALSO CAUSE NOISE.
- DISCONNECT THE POWER & EMPTY BASIN IF THE FOUNTAIN WILL NOT BE IN USE FOR AN EXTENDED TIME.

