


Osaki

OS-AA01

Hand Massager

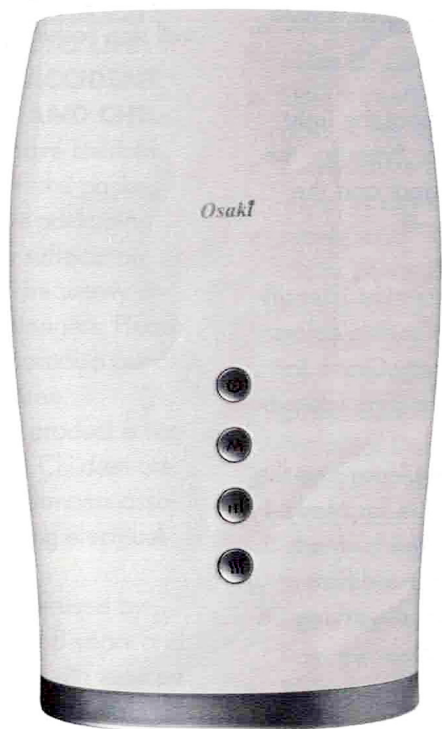

Product Functions:

Air pressure+heating

The default mode is mode 1 with

Mid-intensity.

Rechargeable

15 min timer

Rated voltage: 5V == 1A

Instructions:

1. Power

Press one time and product starts to work,press for second time to turn off .

2. Heating Button

Press one time to heat,the light turn red according. Press for the second time stop heat and the red light will turn off.

3. Intensity Button

To adjust the air pressure intensity please note the following colors: Blue for Mid Intensity,Green for Low Intensity,Red for High Intensity.

4.Mode Button

To adjust the mode please note the following colors:Blue for Mode 1, Green for Mode 2,Red for Mode 3. (Different modes have different times or orders when working on the palm and wrist)

Please note:

1. The product is unable to charge when in use.
2. The product will auto power-off when battery voltage is lower than 3V.
3. The mode light indicator flashes when battery voltage is lower than 3.4 V.
4. When the product is charging, the power button flashes. When it's fully charged,the power button light will stop flashing.



Safety advice

Read all safety advices and instructions. Non-observance of the safety advices and instructions may cause electric shock, fire and/or bad injuries.

KEEP ALL SAFETY NOTICES AND INSTRUCTIONS FOR FUTURE REFERENCE!



WARNING! **DANGER TO LIFE**

AND RISK OF ACCIDENT FOR INFANTS AND CHILDREN!


Never leave children unsupervised with the packaging materials. The packaging material poses a suffocation hazard. Children frequently underestimate the dangers. Please always keep the product out of the reach of children.

- ⚠ **CAUTION!** This product is not a toy for children! Children are not aware of the dangers associated with handling electrical products.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental

capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children should not clean or perform user maintenance unsupervised.

- ⚠ **CAUTION!** The product has a heated surface. Persons insensitive to heat must be careful when using it.
- ⚠ **WARNING!** Avoid the hazard of life by electric shock:
 - Do not insert needles or pointed objects into the product.
 - Never immerse the product into water or any liquid.
 - Never touch the product, or the mains power adaptor with wet hands or use it in very humid environments.
 - Only use the provided mains power adaptor as described in Technical Data section.
 - Make sure that the details on the rating label are in conformity with your mains voltage.
 - In the event of malfunctions, remove the mains power adaptor from the mains socket.
 - Do not open the product or attempt to repair it yourself.

Defective products should only be repaired by qualified personal.

- Always remove the mains power adaptor from the mains socket after each use and before clean the product.
- Keep the power cord away from hot surfaces, sharp edges and mechanical forces.
- Never let the power cord become a trip hazard, that no one can get tangled in it or tread on it.
- Allow the product to cool down before moving it to a different location.
-  **WARNING! HAZARD OF FIRE!** Do not operate the product close to or below curtains, wall cupboards or other inflammable materials.
- Do not use the product on swollen, burnt, inflamed, diseased or injured regions of the skin and body areas. If in doubt, obtain medical advice before using the product.
- Never use the product if you have injuries or pain in the hand.

● Storage

- Let the product completely cool down before storage.
- Do not place other objects on top of the product.
- If the product is not used for a certain period of time, store the product in a clean and dry location.

● Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with following meaning: 1-7: plastics / 20-22: paper and fibre-board / 80-98: composite materials.



The product and packaging materials are recyclable, dispose of it separately for better waste treatment. The Triman logo is valid in France only.



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

● Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery.