



ON BALANCE™



USER GUIDE

DJ SERIES

Thanks for purchasing the DJ Series Digital Mini Scale! This User Guide is designed to get you up and running quickly with your scale. Scales are precision instruments and require proper care and skill to get the best results. If you have questions or need support, visit us at <http://www.obscal.es.com/support> or scan the QR Code on the back of this manual using your smartphone.

What's In The Box

 
User Guide



Two AAA
Batteries



DJ Series Digital
Mini Scale with
Cover/Tray

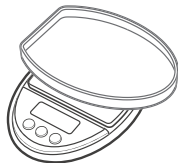

Key Descriptions



ON/OFF MODE TARE

 
ON/OFF - Turns the scale ON and OFF.

MODE - Changes the weighing unit.

TARE - Zeroes the scale. Also subtracts the weight of an empty container (see Tare Function).

Weighing Your First Item

1. Press the **ON/OFF** key to turn the scale on.
2. Place the item on the centre of the weighing platform.
3. Take your reading from the display. You can press the **MODE** key to convert between weighing units.
4. The scale's auto-off function will turn the scale off after 3 minutes of inactivity or you can press the **ON/OFF** key to turn the scale off.

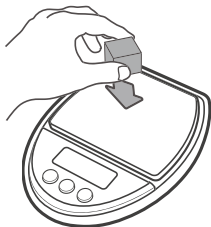

Things To Avoid



Unlevel Surfaces



Radio Frequency
Interference



High Humidity



Air Currents



 
Vibration



Extreme Temps

Tare Function

The Tare function allows you to subtract the weight of a container so that the display only shows the weight of the contents.

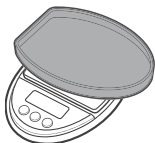

Place an empty tray or container on the platform.



Press the **TARE** key to subtract the container's weight.



Add items to the container to see their weight on the display.



NOTE: The weight of the container will subtract from the available capacity and will leave a negative value on the display once the weight is removed. Press **TARE** again to return the display to zero.

Accuracy

Your scale comes calibrated from the factory and most users won't need to calibrate their scale for a long time. You should check your scale's accuracy periodically using calibration weights and perform calibration if necessary.



 
NOTE: Only use trusted calibration weights. Household items such as bottles and cans with weights printed on the side are not suitable for checking accuracy as these values are approximate and don't include the container weight (Net Weight).

Calibration



Calibration adjustment is permanent and should only be performed using accurate calibration weights that match the requirements for your scale (see the chart on back). Do not use coins or other household items to calibrate.

1. Prepare the required weight for your scale (see chart on back).
2. Find a flat and level surface to perform calibration and let the scale adjust to room temperature.
3. Press **ON/OFF** to turn the scale on and wait for the scale to stabilise.
4. Press and hold the **MODE** key until the display shows 'CAL'.
5. Make sure nothing is on the platform then press **MODE** to confirm the zero point.
6. The display will then flash the required calibration weight.
7. Place the required calibration weight on the centre of the platform.
8. The display will show 'PASS' then return to normal weighing mode. You may now turn the scale off or continue weighing.

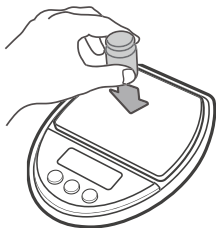

Specifications

DJ-100-RD

Max Capacity 100.00 g / 64.30 dwt /
1543.2 gn / 500.00 ct

Readability 0.01 g / 0.01dwt /
0.2 gn / 0.05 ct

**Weighing
Units** g, dwt, gn, ct

Dimensions Overall: 103 mm x 73 mm x 20 mm
Platform: 62 mm x 56 mm
Display: 28 mm x 10 mm

**Calibration
Weight** 100g

Power 2 x AAA Batteries

Warranty 10 Year Limited Warranty

**For more information, including
weighing tips and support, scan
this code with your smartphone**

**Or visit us online at
www.obscales.com/support/**

