

Owner's Manual

Safariland™ User's Guide

CAUTION: This holster is designed to accommodate a handgun with an approved light system mounted to it. The holster retention system is designed to function optimally with the light installed on the handgun. To ensure proper functioning of the holster retention system, ensure that the approved light is installed on the handgun in accordance to the manufacturer's recommendations.

Step 2

When placing the handgun in the holster, do not place finger in trigger guard, or near the trigger. Position trigger finger adjacent to, but away from the trigger and, if possible, support the tip of the finger on the front of the trigger guard. While inserting handgun in the holster, always place thumb over the hammer or behind the slide. Be certain handgun is thoroughly seated in holster with ejection port lock engaged with the ALS lever. Pull up slightly on the handgun to ensure ALS lock is engaged.

Step 3

To draw handgun, while obtaining a shooting grip with trigger finger extended straight and, use the thumb to move ejection port locking lever back enough for weapon to clear, at the same time start to squeeze your fingers around the grip. As you complete your grip, move your thumb back, unlocking the ALS(R) lever. As you draw the handgun straight up, your thumb will slide off the ALS (R) lever as you complete your grip and draw. This operation can become one motion with practice and proper technique.

CAUTION: Prior to wearing the holster on duty, the user must accomplish draw from fully secured holster in less than two seconds while under simulated stress or a life-threatening situation. Have a partner time your surprise command to completed draw.

A handgun seated in a new holster will fit more tightly than after a reasonable, break-in period has occurred. Thus, the holster should not be used with a loaded handgun or on duty until the under two-second drawing standard indicated above is accomplished by the user. Should the holster remain tight after a reasonable break-in period, apply a liberal amount of common silicone spray to the inside of the holster.

CAUTION: Should the holster continue to bind or remain tight, **cease use immediately.** Contact Safariland's Customer Care at (800) 347-1200

Owner's Manual

Safariland™ User's Guide

The tensioning device should be set so that any unnecessary movement in the muzzle area is eliminated. NOTE: Do not over tighten as this may affect a smooth draw from the holster. Turn the tension adjustment screw clockwise to tighten or counter clockwise to relieve retention. Repeat the entire procedure until you are satisfied with the handgun's security and draw from the holster.

CAUTION: Practice and training as prescribed in this manual are mandatory prior to using the holster with a loaded handgun. Do not use a loaded handgun during practice and training. Practice using the holster with an unloaded handgun until you are thoroughly competent and proficient in its safe use.

Regular practice to assure proficiency in using the holster must be continued as long as it is to be used. The amount of practice and training required will depend upon the dexterity, coordination and prior experience with holsters and handguns of each particular user.

**THE SAFARILAND
GROUP**

3120 East Mission Boulevard
Ontario, California 91761 U.S.A.
Tel (909) 923-7300 Fax (909) 923-7400
©2017 Safariland

Owner's Manual

Safariland™ User's Guide

6376RDS, 6377RDS, 6378RDS, 6379RDS



Read and understand entire manual before using holster.

Operating Instructions

Step 1

In order to draw a handgun from a Safariland® Model 6376RDS, 6377RDS, 6378RDS or 6379RDS holster, it is necessary to install on a dress or gun belt (the 6378RDS with paddle can be used without a belt). The 6376RDS is standard with a hi-ride molded belt loop in either 1.5" (38mm) or 1.75" (45mm) widths. The 6377RDS holster comes with a slotted belt loop. The belt loop comes in a 1.5" (38mm) belt width with slots that can be cut to fit 1.75" (45mm) belt widths. Several belt loop variations are available to fit belts up to 2.25" (58mm). The 6379RDS comes with a belt clip installed and fits belt widths from 1.5" (38mm) to 2.25" (58mm). The 6378RDS comes with the same belt loop found on the 6377RDS as well as a paddle and can be worn with or without a belt.

Each model has the same "3-Hole Pattern" used for mounting and therefore each attachment piece is interchangeable.

Owner's Manual

WARNING

Owner's Manual

Care and Maintenance

Owner's Manual

Safariland™ User's Guide

Read and understand entire manual before using holster.

Improper or careless use of a firearm or a firearm and holster may result in serious injury or death. It is the user's responsibility to have a thorough knowledge of and be properly trained in all aspects of firearm and holster safety and use.

- ❑ Do not place a loaded handgun in a holster without first testing the holster for proper fit with the handgun in an unloaded condition.
- ❑ Do not carry any handgun with a round in the chamber unless you have received professional training in use of the handgun and holster and are willing to assume responsibility and risk (including accidental discharge) of carrying a loaded handgun.
- ❑ If your handgun is equipped with a safety lever, be sure that safety is engaged when holstering the handgun.
- ❑ When drawing handgun from holster or replacing it in holster do not place finger in trigger guard, or near the trigger. Position trigger finger adjacent to but away from the trigger and, if possible, support tip of finger on the front of trigger guard.
- ❑ When putting handgun in holster always place thumb over the hammer or behind the slide.
- ❑ Always keep hammer strap and thumb break forward or clear of trigger guard when putting handgun in holster. Do not allow strap or any other object to enter trigger guard.
- ❑ Always secure the retaining or safety strap(s) on holster after inserting handgun in holster.
- ❑ Never holster any semi-automatic handgun in a single-action mode (except handguns which are single action only; e.g.s., the Colt 1911 and the Browning Hi-Power style handgun).
- ❑ Do not attempt to cock a holstered handgun as this can cause severe damage to the handgun or holster or both and may contribute to an accidental discharge.
- ❑ Always place hand on the handgun and holster when running or performing other vigorous activity.
- ❑ Do not use customized, modified, worn or broken handguns or those that are not of original manufacturer's specifications in a Safariland holster.
- ❑ Do not, in any way, modify, disassemble or remove any part from this holster, unless approved by Safariland.
- ❑ Do not expose holster to extreme heat conditions.
- ❑ Do not leave holster in trunk of vehicle during extremely hot weather.
- ❑ Do not rely on any holster being "snatch proof". There is no such holster. Rely only on extensive, proper training and vigilance.
- ❑ It is the user's responsibility to properly maintain holster regularly, including checking snaps, screws and other components for proper function.
- ❑ Be aware that handguns with lights mounted to them create an opening in the holster that could possibly allow access to the trigger.

Failure to heed these warnings or follow the operating instructions may result in accidental discharge of a handgun causing serious injury or death.

WARNING! Never store your Safariland holster or accessories near a heat source. Space heaters, radiators, heating registers, fireplaces, or other heating sources emit high temperatures that can deform or destroy the polymer from which many Safariland products are manufactured. The non-reflective surface on Safariland products will efficiently absorb radiant heat and can reach temperatures in excess of 200 degrees Fahrenheit, even several feet away from certain heating sources. **Exposure to high heat can cause them to deform, and in some cases can cause the weapon to be locked in place.** If you have accidentally exposed your equipment to a heat source, you should immediately remove it from the area, allow it to cool to room temperature and then operate it to insure correct function.

Read and understand all owner's manuals, instructions, and guides prepared by the manufacturer for your handgun prior to use.

Safariland holsters are designed to carry specific handguns. Before use, be sure holster selected is designed to carry corresponding handgun. If there is any doubt, do not use holster. Contact Safariland's Customer Care at (800) 347-1200 or (909) 923-7300. Carrying a handgun in an ill-fitting or improper holster can result in serious injury or death.

The purchase and use of this Safariland holster is done at the sole and exclusive risk of the user.

Congratulations on your Safariland purchase. You have selected a product with construction technology that is unique and state of the art in the manufacturing of holsters, belts and accessories.

The product you have received is constructed with one or more of the following materials; a soft glove leather, natural suede and/or SafariLaminate. Care and maintenance of this product is dictated by the material from which it is constructed. Use of an incorrect cleaning material will result in damage to the finish of the product.

SafariLaminate can be cleaned by wiping with a clean damp cloth. A paste type leather polish may be used to clean and protect the leather portions of the product. Products manufactured with suede can be cleaned by brushing with a soft brush. Do not use spray lacquer on any product as it will damage the finish.

Additional Warnings

It is important to note that most natural and man-made products may eventually "wear out" or become unsuitable for the function for which they were designed. Stress and strain placed on any given holster will vary according to usage; therefore it is difficult to indicate a recommended replacement date for this product. It is the user's responsibility to assure, after use, that the holster is able to continue service within its design parameters.

It is the user's responsibility to daily inspect the holster for signs of excessive wear, or loss of retention of the handgun, and tightness of all screws and hardware. If any possible problem is detected or any doubt exists, do not use. Call Safariland's Customer Care at (800) 347-1200 or (909) 923-7300.