

IMPORTANT SAFETY WARNINGS

- Improper or careless use of a firearm and holster may result in serious injury or death. It is the user's responsibility to have thorough knowledge of and be properly trained in all aspects of firearm and holster safety and use.
- Do not carry any handgun with a round in the chamber unless you have received professional training in the use of the handgun and holster and are willing to assume responsibility and risk (including accidental discharge) of carrying a loaded handgun.
- If your handgun is equipped with a safety lever, be sure that safety is engaged when holstering the handgun.
- When drawing a handgun from a holster or placing it into a holster, do not place finger in the trigger guard or near the trigger guard. Position trigger finger adjacent to but away from the trigger and, if possible, support the tip of the finger on the front of the trigger guard.
- When putting a handgun in the holster always place thumb over the hammer or behind the slide.
- Always secure the retaining or safety strap(s) on holster after inserting handgun in holster.
- Never holster any semi-automatic handgun in a single-action mode (except handguns which are single action only; ex. Colt 1911 or the Browning Hi-Power).
- Do not attempt to cock a holstered handgun as this can cause severe damage to the handgun or holster or both and may contribute to an accidental discharge.
- Always place hand on the handgun and holster when running or performing other vigorous activity.
- Do not use customized, modified, worn or broken handguns or those that are not of original manufacturers specifications in Safariland holsters.
- Do not, in any way modify, disassemble or remove any part from this holster.
- Do not rely on any holster being snatch proof. There is no such holster. Rely only on extensive, proper training and vigilance.
- It is the user's responsibility to properly maintain the holster by checking components such as snaps, screw, etc. for proper function.
- Be aware that handguns with lights mounted to them create an opening in the holster that could possibly allow access to the trigger.

WARNING: Failure to heed these warnings or follow the operating instructions may result in accidental discharge of a handgun causing serious injury or death.

EXPRESS LIMITED WARRANTY FOR HOLSTER AND ACCESSORY PRODUCTS

Safariland™ (the "Company") warrants its holster products to be free from defects in materials and workmanship for a period of two (2) years from date of purchase. This warranty is subject to the proper Care and Maintenance of the product and proper use of the product as detailed in the Consumer and Safety Information.

If you believe this product has any defects in materials or workmanship, cease use immediately and contact customer service for a remedy. If a product proves to be defective in material or workmanship, we will repair or replace the product and send it to you at the Company's expense. All returns must include the proof of purchase and documentation specifying the claimed defect.

This is a LIMITED WARRANTY, and is the sole and exclusive warranty of this product by the Company. It shall not be enlarged by any representations, descriptions, course of dealing, trade usage, rendering of technical advice, service or otherwise. Furthermore, it shall not be altered or expanded by any acts, statements, or agreements of any dealer, employee or agent of the Company (other than by a duly authorized officer of the Company).

THE COMPANY MAKES NO OTHER WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY.

IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY PUNITIVE, EXEMPLARY, OR CONSEQUENTIAL DAMAGES, ANTICIPATED OR LOST PROFITS, INCIDENTAL DAMAGES, LOSS OF TIME, OR OTHER INDIRECT LOSSES OR EXPENSES THAT ARISE FROM ANY CAUSE RELATING TO THE PRODUCT, REGARDLESS OF THE FORM OF THE ACTION, WHETHER IN TORT (INCLUDING NEGLIGENCE), CONTRACT, STRICT LIABILITY OR OTHERWISE, AND REGARDLESS OF WHETHER THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For any warranty issue, please contact customer care for a prompt resolution to your concern at the number provided below.

(800) 347-1200 or (909) 923-7300.


SAFARILAND™

A BRAND OF THE SAFARILAND GROUP
TOGETHER, WE SAVE LIVES™

3041 FAYE ROAD, JACKSONVILLE, FL 32226
(800) 347-1200 (USA ONLY) OR (909) 923-7300 | FAX (909) 923-7400

© 2020 SAFARILAND, LLC

USER GUIDE



SAFARILAND™

INNOVATION NOT IMITATION™

MODEL

USPSA-KIT2



IMPORTANT
READ AND UNDERSTAND
ENTIRE GUIDE BEFORE USING.

READ BEFORE USE

FOLLOW INSTRUCTIONS CAREFULLY.
RETAIN FOR FUTURE REFERENCE.

 
STEP 1

Install Holster

Remove T-plate from belt loop by unscrewing the 1/8th hexdrive screw from the hinge assembly. Separate hinge, if the hinge is stuck, rotate hinge assembly to break tension, or lightly tap the bottom of the T-plate.

Install T-plate onto your choice of Safariland holster using 3 Safariland 8-32 x 3/8 screws (1104461) or 8-32 x 1/4 screws (1104461) and 3 Safariland leather washers (1119158) or nylon washers (1166730) depending on individual holster needs.


Reinstall T-plate and holster subassembly onto belt loop. Snug down the hinge's 1/8th hexscrew hand tight for adjustment later.

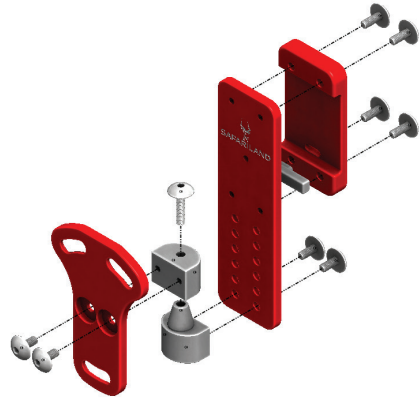


STEP 2

Configure Belt Size

 USPSA Kit2 is designed to be used with 1.5" (38mm) and 1.75" (45mm) width competition belts via the use of a belt shim. The belt shim comes preinstalled in the belt clamp for the 1.5" (38mm) configuration. With the belt shim removed the belt clamp is in the 1.75" (45mm) configuration.

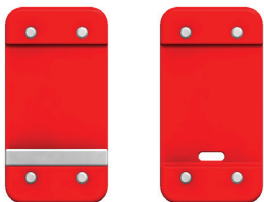

 The belt clamp is designed to press tightly against the interior face of the belt. Using the 4 screws on the belt clamp, tighten until there is no movement between the belt and belt loop.

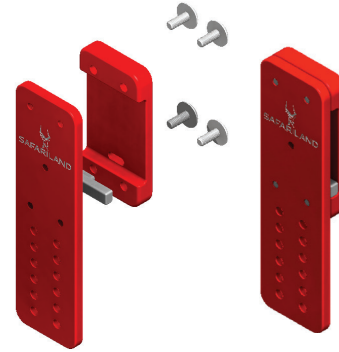

STEP 3

Adjust as Necessary

Pitch: Pitch is adjusted on the T-plate by loosening the 3 screws connecting the holster and T-plate, rotating the holster to desired pitch angle and retightening the screws.

Yaw: Yaw is adjusted by loosening the hinge screw and rotating the holster to desired yaw angle and retightening the screw.

Ride Height: Ride height is adjusted by moving the hinge assembly up or down the series of holes in the hanger plate.

STEP 4

ELS Configuration

USPSA Kit2 can be configured to work with the Safariland ELS mounts. Remove the belt clamp from the hanger plate. Install male ELS fork onto the hanger plate with 3 screws, utilizing the top 2 screw holes from the belt clamp. **NOTE:** More pitch angle can be achieved by adjusting the angle of the ELS fork.



PRACTICE

Regular practice to assure proficiency in using the holster must be continued if it is to be used. The amount of practice and training required will depend upon dexterity, coordination and prior experience with holsters and handguns of each user.

CARE AND MAINTENANCE

WARNING: Never store your Safariland holster or accessories near a heat source. Space heaters, radiators, heating registers, fireplaces, or other heating sources emit high temperatures that can deform or destroy the polymer from which many Safariland products are manufactured. The non-reflective surface on Safariland products will efficiently absorb radiant heat and can reach temperatures in excess of 200 degrees Fahrenheit, even several feet away from certain heating sources. Exposure to high heat can cause them to deform, and in some cases can cause the weapon to be locked in place. If you have accidentally exposed your equipment to a heat source, you should immediately remove it from the area, allow it to cool to room temperature and then operate it to insure correct function.

It is important to note that most natural and man-made products may eventually "wear out" or become unsuitable for the function for which they were designed. Stress and strain placed on any given holster will vary according to usage; therefore it is difficult to indicate a recommended replacement date for this product. It is the user's responsibility to assure, after use, that the holster is able to continue service within its design parameters.

It is the user's responsibility to daily inspect the holster for signs of excessive wear, or loss of retention of the handgun, and tightness of all screws and hardware. If any possible problem is detected or any doubt exists, do not use. Call Safariland's Customer Service at (800) 347-1200.

Read and understand all owners manuals, instructions, and guides prepared by the manufacturer for your handgun.

Safariland holsters are designed to carry specific handguns. **Before use, be sure holster selected is designed to carry corresponding handgun. If there is any doubt, do not use holster.**

WARNING: Carrying a handgun in an ill-fitting or improper holster can result in serious injury or death. The purchase and use of this Safariland holster is done at the sole and exclusive risk of the user.