

FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS: Secondary Alternator Cover Part No. EC-V4S-SF-2020-1-GBR / Secondary Clutch Cover Part No. EC-V4S-SF-2020-2-GBR Brake Lever Guard Part No. BLG-14-A160-GBR



SECONDARY ALTERNATOR COVER PART NO. EC-V4S-SF-2020-1-GBR

- 1 Remove the 4 standard bolts as shown as bolt position 1, 2, 3 & 4.
- 2 Place the secondary alternator cover against the standard alternator.
- Insert the 4 supplied bolts and tighten to <u>a maximum of 10Nm</u> as per Manufacturer's recommendations.
 DO NOT OVERTIGHTEN






Bolt 4 M6X35A2-TORX - 10Nm

Bolt 3 M6X30A2-TORX -10Nm

SECONDARY CLUTCH COVER PART NO. EC-V4S-SF-2020-2-GBR IN DEVELOPMENT

UNIVERSAL BRAKE LEVER GUARD WITH 14mm INSERT - 15mm PART NO. BLG-14-A160-GBR

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

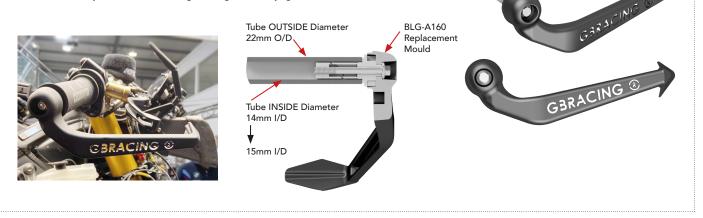

www.GBRacing.eu