

02

Page 1 of 6



## SAFETY WARNING

Please <u>read and understand</u> all instructions and safety warning prior to install the product. Failure to do so could result in product damage, personal injury or even death.

- Stay alert! Watch what you are doing and use common sense while handling this product.
- Inspect product for damage prior to installation, do not use if product is in unsafe condition.
- Do not install product while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the installer, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.

ltem	Part No.	Description	Qty.
		-	-

			COMPONENTS
Those items are sho	own on the first page.		
01	A030-01	Front Left Aluminum A-arm Guard	1
02	A030-02	Front Right Aluminum A-arm <b>G</b> uard	1

#### HARDWARE

Those items are included with each kit to install components.


03	A-1505	M6-1.00 Flange Lock Nut	8
04	A-2658	M6-1.00 x 20mm Carriage Bolt	8
05	A-4013	7/8" Rubber Clamp / 0.281-hole dia.	8



# INSTALLATION INSTRUCTIONS

#### PREPARATION

- Using a jack under center of front end, lift until the front wheels leave the ground.
- Remove the wheels.
- Remove both factory A-arm guards.
- Using the image below as a guide, insert the rubber clamps on the a-arm, on each side.

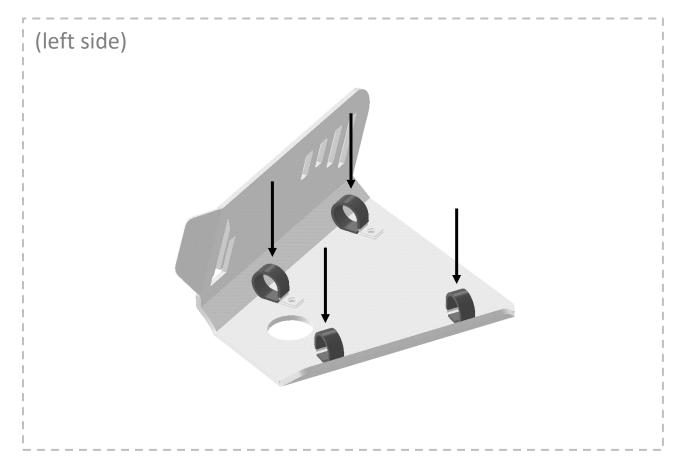


### INSTALLATION

- 1. Install the guards to the suspension arms. Use the M6 bolts and M6 lock nuts to secure the guards to the arms (using the rubber clamps).
- 2. Tight all the hardware once the guards are correctly installed.
- 3. Put the wheels back on the ATV. Torque all lugs to factory specification. NOTE: Check that the a-arm guards will clear the others components of the ATV. Re-adjust the guards if it's necessary.



REAR A-ARM GUARDS SUZUKI KINGQUAD 500/750 (2010+)

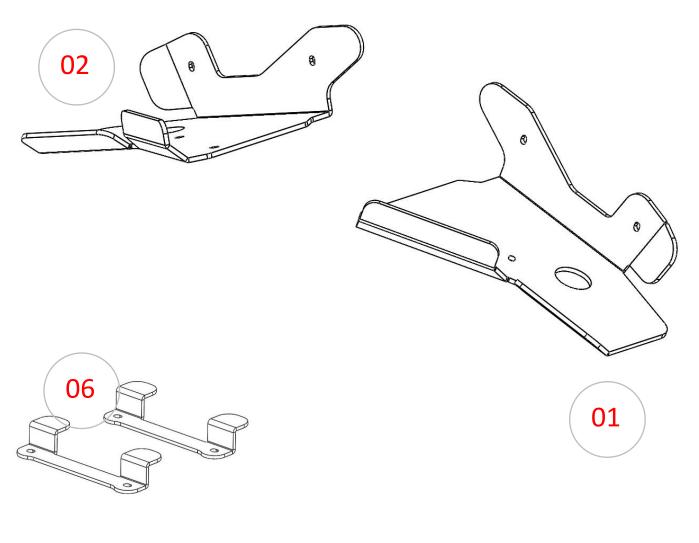

Page 4 of 6



## SAFETY WARNING

Please <u>read and understand</u> all instructions and safety warning prior to install the product. Failure to do so could result in product damage, personal injury or even death.

- Stay alert! Watch what you are doing and use common sense while handling this product.
- Inspect product for damage prior to installation, do not use if product is in unsafe condition.
- Do not install product while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the installer, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.

ltem	Part No.	Description	Qty.
item		Description	

			COMPONEN
Those items are she	own on the first page.		
01	A030-03	Rear Left Aluminum A-arm Guard	1
02	A030-04	Rear Right Aluminum A-arm Guard	1

#### HARDWARE


Those items are included with each kit to install components.

03	A-1505	M6-1.00 Flange Lock Nut	4
04	A-2605	M6-1.00 x 20mm Hex Flange Bolt	8
05	A-4001	Rubber Strip / Adhesive Back, 1x2" x 1/8" Thick	8
06	B-5604	Mounting Clamp	2

Page 5 of 6

### PREPARATION

- Using a jack under center of rear end, lift until the rear wheels leave the ground.
- Remove the wheels.
- Remove both factory A-arm guards.
- As shown below, stick the rubber strip on the new PERFEX A-arm guards.

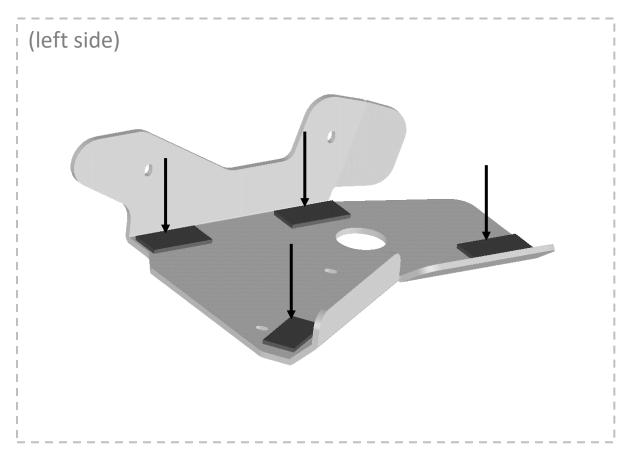

### INSTALLATION

- 4. Install the guards to the suspension arms. Use the provided mounting clamps, M6 bolts and M6 lock nuts to secure the guards to the arms.
- 5. Secure the back side of the guards to the factory mounting point. Use the remaining M6 bolts.
- 6. Tight all the hardware once the guards are correctly installed.
- 7. Put the wheels back on the ATV. Torque all lugs to factory specification. NOTE: Check that the a-arm guards will clear the others components of the ATV. Re-adjust the guards if it's necessary.

Page 6 of 6

