

CNSRV WTR



(PURPOSE) **SAFELY DEFROSTS FROZEN FOOD**
(CONSERVES) **WATER + MONEY + TIME**

(DEFROSTER DIRECTIONS)

Run On Countertop or In 24” Prep Sink

1) Turn Switch to **OFF** & Plug in the Food Defroster.

LEAVE THE SWITCH TURNED TO OFF!

2) Place the Bagged Frozen Food Into the Interior Container.

3) Fill the Interior Container With Water Until the Water Overflows Into the Exterior Container Through the Three Holes on Both Sides. Continue Filling Until the Water Level in the Exterior Container Reaches the “Fill Line”. You’ll be Able to See the Water Level Reach the “Fill Line” Through the Exterior Container.

Interior Container = Completely Filled With Food + Water

Exterior Container = Filled to the “Fill Line” With Water

4) Attach Optional Net-Hooks to Holes- to Keep Food Submerged.

5) Turn the Switch to **ON** & Let The Defroster Run for Needed Time.

6) THE FOOD IS DEFROSTED!

7) Turn the Food Defroster **OFF**.

8) Remove the Defrosted Food.

9) Open the Drain of the Exterior Container to Drain Water.

10) Open the Drain of the Interior Container to Drain Water.
(Leave the Exterior Container Drain Open).

*Always follow all healthcode guidelines. For more information visit www.cnsrvwtr.com

***Read & Follow All Safety Instructions Prior to Use, Improper Use May Void Warranty:**

Appliance **MUST** be plugged into an outlet that is installed in accordance with all appropriate codes & ordinances

DO NOT operate appliance if appliance is malfunctioning or appears damaged

DO NOT use appliance for anything other than its intended use

DO NOT operate appliance without adequate water filled to the fill line.

DO NOT handle plug with wet hands or in a wet environment

DO NOT remove plug from receptacle by pulling the cord

DO NOT TOUCH pump or heater within 15 minutes of use.

FOR A QUICK AND EASY TRAINING VIDEO PLEASE VISIT:

PATENT PENDING. <https://www.cnsrvwtr.com/pages/how-to>

