

CNSRV WTR



(PURPOSE) SAFELY DEFROSTS FROZEN FOOD
(CONSERVES) WATER + MONEY + TIME

(CLEANING INSTRUCTIONS)

Turn the Machine Off & Unplug the Electrical Cord Before Cleaning.

Do Not Spray Water Towards the Electrical Plug or Cord. Keep Electrical Plug Clear of Water. This Could Cause Damage.

- 1) Take the Interior Container Out of the Exterior Container.**
- 2) Remove Any Potential Food Debris With a Sponge.**
- 3) Wash Both Containers and Parts in Warm Detergent Thoroughly With a Clean Cloth or Sponge.**
- 4) Soak Recirculating Parts In Detergent, Avoid Plug.**
- 5) Rinse With Clean Water, Apply Sanitizer, and Allow to Air Dry.**

The Defroster Must be Thoroughly Washed, Rinsed, & Sanitized as Required by Local Regulation & After Being Idle for an Extended Period of Time.

Notice: Never Steam Clean

*Always follow all healthcode guidelines. For more information visit www.cnsrvwtr.com

***Read & Follow All Safety Instructions Prior to Use, Improper Use May Void Warranty:**

Appliance MUST be plugged into an outlet that is installed in accordance with all appropriate codes & ordinances

DO NOT operate appliance if appliance is malfunctioning or appears damaged

DO NOT use appliance for anything other than its intended use

DO NOT operate appliance without adequate water filled to the fill line.

DO NOT handle plug with wet hands or in a wet environment

DO NOT remove plug from receptacle by pulling the cord

DO NOT TOUCH pump or heater within 15 minutes of use.