GPS Data Test

Step 1:

With GPS Power OFF apply power to Trio Autopilot

Step 2:

Momentarily press the autopilot encoder (center) knob and the autopilot screen will display "No GPS"

Step 3:

Apply power to GPS

Step 4:

Navigate to the "Self-Test Page"

Step 5:

If connected properly your CDI will receive a signal from the GPS and you will see a change on the CDI.

Step 6:

If connected properly the Trio Autopilot will display the following:

WAAS Unit

Blue GPSS and GPSV lights will illuminate and blink indicating the ARINC 429 connection and format is OK.

No GPS message will clear - Green TRK light or Yellow CRS light will illuminate indicating the RS 232 connection and format is OK.

Non WAAS Unit

Blue GPSS light will illuminate and blink indicating the ARINC 429 connection and format is OK.

No GPS message will clear - Solid Green TRK light or Solid Yellow CRS light will illuminate indicating the RS 232 connection and format is OK.

RS 232 ONLY Unit (Portable or VFR Only)

No GPS message will clear - Green TRK light or Yellow CRS light will illuminate indicating the RS 232 connection and format is OK.

Note: Some GPS units do not pass the necessary data to test the Trio Autopilot data on the self-test page.

Please contact The STC Group LLC if this test is unsuccessful.