



# Classroom Sound Meter

Encourage students to monitor their  
own sound levels



## User Guide

[www.tts-group.co.uk](http://www.tts-group.co.uk)




## Important Information

- Please retain the information in this User Guide for future reference.
- Please read all instructions fully before using.
- To clean, wipe the surface with a clean damp cloth.
- Do not allow the product to come into contact with water or any other liquids.
- Keep the product away from direct sunlight and heat.
- If your product malfunctions please switch it off and then back on again to reset it.

## Pack Contents

- Classroom Sound Meter
- User guide

## Know Your Product

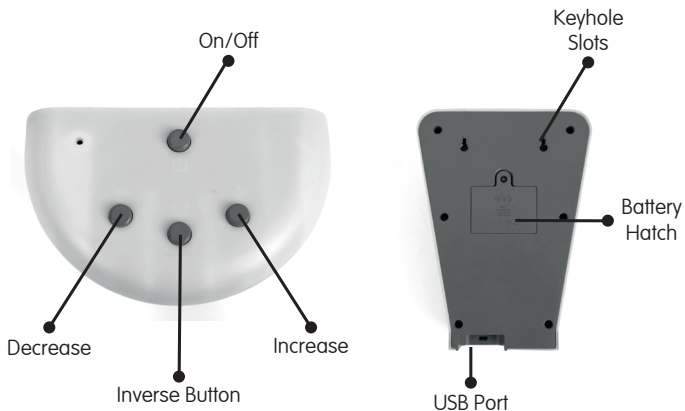

# Classroom Sound Meter

## Using Your Product

- To switch your product on press the ON/OFF button on the top of your sound meter.
- To set the level, use the + and - keys until the green light reaches the required level.
- Once any sound is made above the limit set, the green and amber lights at this level and below will light.
- If sound is made above the set limit, the levels below will light and the amber lights above the limit will light.
- If sound is continuously above the set level for more than 3 seconds all lights will flash.
- The inverse switch will allow the light function to be reversed so the louder it is the less lights are shown.

## Battery Precautions

- This product is powered by 3 x AAA batteries (not included).
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Only batteries of equal size and type should be used.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.

## Replacing Batteries

- Remove the battery hatch cover and carefully remove the batteries and dispose of them responsibly.
- Insert new batteries, ensuring the correct polarity. Replace the battery hatch firmly and accordingly.
- Different types of batteries or new and used batteries are not to be mixed.
- Exhausted batteries are to be removed from the toy.



## Trouble Shooting

Problem	Solution
Product will not detect noise or light up	Remove all exhausted batteries and replace with new ones

## Technical Support

Please visit [www.tts-group.co.uk](http://www.tts-group.co.uk) for the latest product information.

Email [feedback@tts-group.co.uk](mailto:feedback@tts-group.co.uk) for technical support.

TTS Group Ltd.  
Park Lane Business Park  
Kirkby-in-Ashfield  
Nottinghamshire  
NG17 9GU, UK.  
Freephone: 0800 318686 Freefax: 0800 137525

**WARNING:** Do not dispose of this product in household waste.

**WARNING:** Hand it over to a collection point for recycling electronic appliances.

Made in China, on behalf of TTS Group Ltd.

TTS Product Code:

**IT10084**



TTS is proud to be part of **RM**™ plc