

The carrot, a humble vegetable.
Incredibly versatile - it can be dipped,
diced, stewed, sautéed and even made
into one of life's finest cakes. Yet it
doesn't blow its own trumpet or expect
recognition, instead it quietly goes
about its business making things more
delicious and nutritious. It's a big ask for
my calligraphy pen design to live up to
this champion of the vegetable world's
legacy but I've certainly tried my
darndest. Vive la Carrot!

"Don't take Cife too SeTionsly. You'll acvey get out afive!"

Bugs Bunny

Designed by: Tow UM

 
Owned by:



Lets get Started

To loosen the flange, twist the brass nut away from you and insert your preferred nib, making sure that it is touching the brass beneath and to the right of it (to the left for lefties).

Tighten the nut slightly by twisting it towards you until it is loosely holding the nib.



Next, remove the nib and then turn the nut a little more before re-inserting the nib. Repeat as neccessary until you have a lovely snug fit. There is no need to overtighten. It's exactly the same process to use a smaller nib like a Brause 66 EF.

To remove the nib, use your thumb to push on the back end of the nib until it pops out (no need to unscrew the nut). If the nib is particularly snug, use a soft cloth or piece of card to cushion your thumb as you push the nib out.



Made to Measure

You can change the angle of the nib so that it suits your writing style perfectly. Once you set the correct angle, you'll find the nib will glide across the page without snagging. If you're a leftie, you can also flip the flange around so that it's on the other side of the pen (figure 3).



Insert the allen key into the small screw on the top of the pen and loosen by turning it anti-clockwise.



4)

Pinch the nib and adjust to your desired angle, then tighten the screw with the allen key to set it in place.

