




Super Automatic
COFFEE MACHINE



INSTRUCTION MANUAL

MAKING A PRE-SET COFFEE

The most popular coffee drinks have been programmed into the coffee maker. The preparation of the coffee and the milk/foam are set to default settings, and you have the option to customize these once you set up a profile (see page 15 for details).

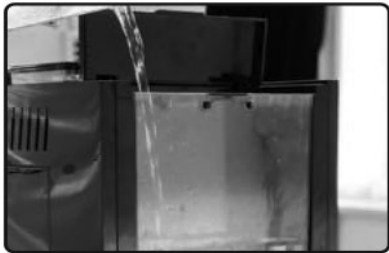

1. Make sure your coffee machine has enough water in the tank and coffee beans in the hopper. If the drink you want to make requires milk, pour fresh cool milk into a cup and set the milk tube into the cup. Make sure the other end is properly attached to the Milk System.



2. Touch the screen. Allow up to 2 minutes for the machine to complete the start up and/or cleaning functions.



3. Put your coffee cup under the dispenser. Position the height close enough to your cup prevent splashing.

MAKING A PRE-SET COFFEE



4. Press the icon for the drink you want to make.



5. Relax and enjoy the aroma while the machine does all the work.



6. Wait for the machine to finish making the drink, which will be indicated on the screen. Remove your cup and enjoy!

SPECIAL COFFEE RECIPES

The coffee maker comes with delicious coffee recipes that need more than coffee and milk to prepare. To make these special coffee drinks, follow the below steps.



1. Press the Coffee Recipes Icon on the top left of the main screen. Place your cup under the dispenser. Position the height of the dispenser low enough to prevent splashing.



2. Select (touch) which drink recipe you want to make from the menu.



3. Take note of all the ingredients needed on the screen. Collect all ingredients so you have them to hand. If milk is included in the recipe, set up the milk system with enough milk.

Note: the screen may turn off after being idle, so you may need to re-select the drink after you finish collecting the ingredients.



4. Follow the instructions on the screen as it walks you through the steps of the coffee recipe, and enjoy!

REMOVING & REPLACING THE BREWER SYSTEM

If you need to remove the brewer system for cleaning, follow the steps below. These will show you how to remove and replace it. If you have any trouble with getting it back in place or closing the door, do not force it. Watch the How-To Videos described on page 23 or call Customer Service.

REMOVING THE BREWER SYSTEM



1. Open the door on the side of the unit.




2. Take out the waste basket so this is not in your way when trying to remove the brewer system.



3. Grab the handle and press down with your thumb on the top surface to unlock it, and pull it out.

REPLACING THE BREWER SYSTEM

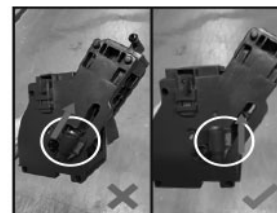

1. Make sure the Brewer System is in the standard configuration.



2. Slide this back into the unit, making sure it is in the track grooves. You will hear it click once it is back in place.



3. Put the waste basket back in place and close the door.

SETTING UP THE UNIT

Installing the Milk System



How to attach it on the front of the machine



How to attach the tube to the milk system



Using the Bean Hopper



Coarse +
Weaker





Fine +
Stronger



COFFEE GROUND CHUTE

To use the Coffee Ground Chute in your machine, follow these steps:

1. Press the () icon on the top right of the screen. This will now look like this ().
2. Open the lid of the Coffee Bean Hopper, and remove the lid for the coffee grounds chute. Use the included white scoop (1/8 cup) and put a full scoop of coffee grounds into the chute.



Important: Do not allow anything other than coffee grounds into this chute.



Do not put more than one scoop (1/8 cup) per brewing cycle. Improper use could damage the machine.

3. Put the lid back on the chute and close the Coffee Bean Hopper lid. Select the drink you want to make.



Note: In this mode, you will not be able to brew double-serving drinks. These will turn gray on the menu and can not be selected until you return the the regular mode (whole coffee beans).

MAKING HOT WATER, HOT MILK, MILK FOAM



MAKING HOT WATER

To make Hot Water, go to the Drinks Menu screen. Press the arrow on the right side of the screen to scroll to the last screen. Place your cup under the dispenser and position it so it is directly over the cup (to reduce splashing). Select the Hot Water icon. Wait for the machine to fill your cup with hot water. If more hot water is needed, press the icon again. If you need to stop the hot water from being dispensed during the cycle, press the CANCEL button.



MAKING HOT MILK & MILK FOAM


Fill a cup with the milk of your choice. Attach the milk tube to the frother attachment, and place the other end of the tube in the cup of milk. Place your cup under the dispenser of the machine and position it directly over the cup (to reduce splashing). Go to the Drinks Menu screen, and scroll to the last screen using the arrow button on the right side of the screen. Select the Hot Milk or Milk Foam icon, depending on which one you want. If you need more hot milk or froth, press the button again. If your cup is nearly full and you need to stop mid cycle, press the CANCEL button.



SETTING UP THE UNIT



6. Add at least 1oz (1/8 cup) of coffee beans into the bean hopper.

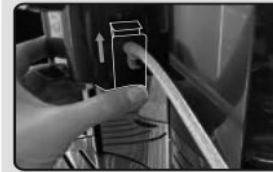

7. Install the Milk System to the front of the unit. Attach the milk tube into the hole on the right side of the Milk System.



8. Plug the machine in.



9. Touch the display screen with your finger. At this time, the machine will start up, perform a self-test, heat water, and self-clean. Self-Cleaning uses about a 1/4 cup of water. The tray can hold about 3 cups of water.



10. Once the Main Screen is available, your machine is ready for use. Do not try to operate it before this is displayed.

SETTING UP THE UNIT




1. Remove the coffee machine from the box and place it on a suitable surface.




2. Remove all packing materials and tape.



3. Ensure the brewer unit, dust pan, and waste basket are in place.

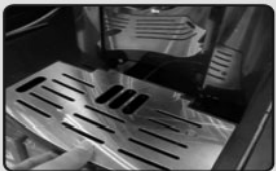


4. Place the front drip tray on the product.

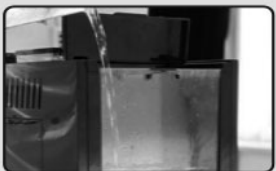


5. Add water to the tank up to the Max fill line. Do not overfill.

CUSTOMIZING DRINK SETTINGS

To customize drinks on the machine, create a profile with your customized settings. Up to 10 profiles can be created.

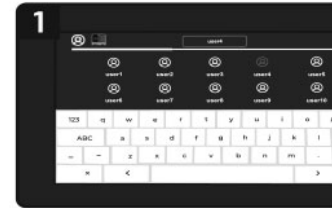
 


Press the  icon on the top left of the screen. You can rename the icon by touching the username on the top of the screen and using the touch screen keyboard to customize your user name.



Select the drinks you want to include in your profile. You can select all drinks, or specific drinks you enjoy. Select the check box to select them, and uncheck that box to unselect them. This can be easily updated at any time.



Press the  icon on the bottom right of the screen. Touch the icon for the drink you want to customize. On the next screen, press the  icon on the bottom left corner of the screen.



The customization settings will appear. Adjust the level of each setting to suit your personal taste preference. Press the back arrow, and repeat with any other drinks you want to customize. Return to the home screen when done.

CUSTOMIZING MACHINE SETTINGS

You have the option to change the machine settings listed below to make its use as smooth as possible for you. To access these settings, select the (☰) icon in the top right corner of the home screen, and then select the (⚙️) settings icon. Then select the icon listed below to adjust the settings for that function.



AUTOMATIC CLEANING SETTINGS



Milk System Auto Clean: You can adjust how many minutes after brewing your last coffee that the machine will auto clean the milk system. You have the option to set this to 0 minutes if you do not want it to clean this system. It is recommended to keep the milk system clean for hygiene reasons, but you can change the delay time from the default settings if this works better for you.











Brewer System Auto Clean: You can adjust how many minutes after brewing your last coffee that the machine will auto clean the brewer system. You have the option to set this to 0 minutes if you do not want it to clean this system. Default settings are recommended, but you can change this to best suit your needs.




Waste Basket Emptying Level: Set the number of “coffee-waste cakes” (1 made per single brew cycle) that the waste basket will hold before it prompts you to empty it. It is recommended to empty this at least once per week to prevent organic growth. Set this to an amount that is most workable for you.


MAIN FEATURES

Here is a summary of the key features that your coffee machine has. Read the entire manual for more details.


-  Intuitive 7" High-Res Touch-Screen Interface
-  Programmed with 11 Speciality Coffee Drinks & 18 Coffee Recipes
-  Bean Hopper Capacity of 1/2 lb (250g)
-  Removable 61 fl. oz (1.8L) Water Tank
-  Adjustable Grind Control with Precision Burrs
-  Double Brewing Function to make two coffees at the same time: Espresso, Latte, Cappuccino, Flat White and Cafe Macchiato
-  Automatic Self-Cleaning of Brewer Unit & Milk System ensures hygiene and consistently great tasting coffee
-  Removable Drip Tray, Coffee Waste Bin and Water Tank for easy cleaning




Customizable Coffee
Control the Temperature, Strength, & Volume of your coffee and the amount of Hot Milk or Foam



Programmable Profiles Up to 10 Different Users
Perfect for any household



Compact Design
Fits beautifully on your kitchen countertop. Includes adjustable Coffee and Milk Foam System to fit your favorite coffee cup.



One Touch Automatic Milk Foam and Hot Milk System
Make Milk Foam from your favorite Milk and Milk Substitutes, including Whole Milk, Almond Milk, Rice Milk, Oat Milk etc.

■ ACCESSORIES



Milk System
Attachment (x2)



Milk Tube (x2)



Milk Tube
Brush



Cleaning
Brush



Coffee
Scoop



Water Hardness
Test Paper



Cleaning
Detergent
/ Descaling
Tablet



Power Cord

■ CUSTOMIZING MACHINE SETTINGS



WATER HARDNESS



Brewer System Descaling: Set how often you want the machine to descale the brewer system. This can be set against the hardness of your water, or kept at default settings. The machine will prompt you with the steps to descale the machine.



Entire System Descaling: Set how often you want the machine to descale the entire system. This can be set against the hardness of your water, or kept at default settings. The machine will prompt you with the steps to descale the machine.



Factory Reset: If you want to reset to the factory settings, press this button. All settings will return to the original default settings. Profiles will not be erased, but the customized setting levels will all be restored to the factory default settings.

CLEANING & MAINTENANCE

This is a summary of the regular cleaning and maintenance actions that will be needed.

AFTER EACH BREW

Brewer System: The brewer unit will automatically clean itself every time the machine turns on/off or has been idle for too long. You may adjust the delay time for cleaning in the Customization Settings. See page 17 & 18 for more details.


Milk System: The Milk System is automatically flushed clean and has a default setting to clean the system a few minutes after brewing has finished. The timing after brewing that the cleaning starts can be changed in the customization settings. The milk tube needs to be rinsed by hand after use, and can be cleaned with the milk tube brush if needed.

WEEKLY

Drip Tray: Depending on use, this may need to be emptied every week or more often. Simply remove the tray and pour the water into your sink and wipe the top plate. Every couple of weeks, you can clean the interior surfaces to prevent any buildup.

Brewing Waste Basket: This is a small black container that is to the left of the brewer unit when you open the side door. It will need to be emptied when full. There will be a message on the screen to prompt you to empty the basket when it is full. Depending on how much coffee you brew, this would be done about once per week. You can customize the settings of when the coffee waste bin is considered full. See page 17 for details.

PRODUCT ORIENTATION

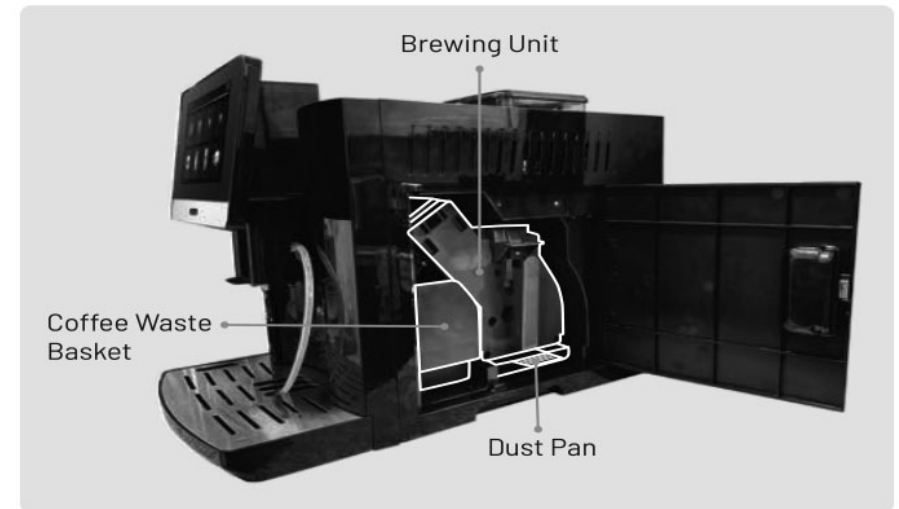

PRODUCT ORIENTATION

Below is a diagram showing the parts of your coffee machine. Refer back to this as needed when reading the rest of the manual.



CLEANING & MAINTENANCE

MONTHLY OR AS NEEDED

Display Screen: If this gets dirty or oily, wipe it clean with a clean, slightly damp microfiber cloth. Do not use chemicals and avoid too much water as these could cause damage.

Dust Pan: Pull out the tray, dispose of the loose grounds, and then put back in place.

Interior Brewing System Area: If you see a mess when opening the side door, turn the unit off and unplug it. Remove the brewer, dust pan and waste basket. Use the brush to sweep it clean. If needed, wipe with a clean, slightly damp microfiber cloth.

Descaling the Brewer System: Depending on the hardness of the water you are using, you may need to descale the brewer system occasionally. Press the (☰) icon on the top right corner of the home screen. Then press the Descale Brewer System (☑) icon.

Follow the prompts on the screen. If you do not have descaling tablets, you can alternatively add a cup of vinegar to the water tank. It is recommended to place a cup under the dispenser to collect the water during the descaling process. You will need to empty the cup or the drip tray more than once during the cycle to prevent water from overflowing.

Descaling the Entire System: When needed, press the menu (☰) icon on the top right of the Home Screen. Then press the Descale Whole System icon (☑). The screen will prompt you to complete the steps. Place a descaling tablet or 1 cup of vinegar in the water tank when directed to. Be aware that a lot of water will be used, so use a cup to collect water and empty this regularly during the descale cycle to prevent the drip tray from overflowing.

■ TROUBLESHOOTING

Machine is not turning on: Check that the plug is correctly attached to the socket of the unit, and that it is properly plugged into an active outlet. "Welcome Screen" will show once the power is restored.

Coffee dispenses too slowly/slow dripping: This has 4 possible causes.

- a) Coffee grounds are too fine – adjust the grind adjustment knob clockwise to a coarser setting.
- b) Low on Water – fill the water tank to the MAX line, and check that it is correctly installed.
- c) Brewer System is dirty – clean the brewer system using the automatic cleaning function. You can also remove the brewer system, rinse it clean with warm water, and allow it to fully air-dry before replacing it.
- d) Blockage from Mineral Deposits – descale the machine following the steps. See page 20 for instructions.

After doing each handling above, make a cup of hot water to check if the water flow has been handled.

Very Weak Coffee: There are 4 potential causes.

- a) Coffee beans are damp – throw these away and replace with dry coffee beans.
- b) Grounds Too Coarse – turn the grind setting knob to the left (count-clockwise) to make them finer.
- c) Brewing for the first time – the first few cups of coffee can be watery because the system is adjusting. After brewing about five cups of coffee, it will consistently brew proper strength coffee.
- d) Default settings may be too weak for your preference. Set custom settings with increased coffee amount. See page 16 for more details.

■ SAFETY INFORMATION



When adding water to the unit, use cold or room temperature water. Do not add hot water to the water tank because it could damage the unit.



Keep the unit dry and in a location where there is no risk of it being submerged, and where there is no risk of water entering the internal components. When cleaning, be sure to use a soft, clean rag. If water is needed for cleaning, you can use a slightly damp cloth.



When using the nozzles for hot water and steam, do not touch the metal tubes and do not put any body part in front of the nozzle, and make sure no person or animal is close to the nozzle. The water and steam coming out are hot and could cause injury.



If a problem or malfunction occurs, refer to the Troubleshooting section. If this does not resolve it, call the Customer Service team. Do not perform modifications or internal repairs without written approval and instructions from customer service.



If this unit will not be used for an extended period of time, clean it before storing to prevent organic growth. Empty the water reservoir, clean out the Milk System, clean the drip tray, and clean out the interior parts including the coffee waste basket.

If you have any questions about the unit or its operation, please call or email customer service.

☎ +1 (727) 386-9117 ☎ Mon-Fri 9:00 AM – 5:00 PM (EST)
✉ support@zulay.net

SAFETY INFORMATION



Please read this manual before using the unit and keep it for future reference. Operate the machine as directed.



This unit is meant for indoor, personal household use only. Not for commercial use.



This unit should be set up on a dry, flat, stable surface, and operated in a ventilated area.



This is not a toy. Keep the machine and its packaging out of reach of children and pets to avoid injury.



This unit is only to be operated on a standard 120V power supply with a 3-prong outlet that has a functioning grounding wire.



The machine will not work when the water is below the floating white indicator (about 1" of water).



Do not put anything other than coffee beans into the bean hopper. Never put liquid, syrup, powder, or other substances into it.



Turn off and unplug the machine before opening the side door to clean inside the unit. This is not necessary if you are only emptying the waste basket or dust pan.



This unit is meant for use in environments with a temperature between 50°F – 113°F (10°C – 45°C). Do not use or store this machine in freezing temperatures as frost may damage the machine.



Keep the unit away from heat sources. Do not place the unit on or near a heated stovetop. Never place the unit inside an oven, over or near open flames, or in any other location that could cause damage from fire or heat.

TROUBLESHOOTING

Strange Noises from Coffee Grinder: A foreign object could have gotten into the grinder. Ensure the machine is turned off & unplugged before inspecting the grinder. Contact customer service for assistance.

Note: The brewer system can make noise as it completes the brewing cycle. This is normal.

Poor Quality Milk Foam: There are 4 possible reasons for this.

a) Milk System or Milk Tube not installed correctly – Please refer to page 9 of this manual to ensure that both the Milk System and the Milk System Tube are correctly attached and installed.

b) Milk System is Dirty – clean the milk system and milk tube. See page 19 for instructions.

c) Blockage from Mineral Deposits – descale the machine. See page 20 for instructions.

d) Different Milk Type – Different milks and milk alternatives create different foam results. For more information about results from different types of milk, go to <https://bit.ly/MilkTesting>.

Drip Tray Overflowing/Filling Up Too Quickly: Your machine is set up to do an Auto Clean function every time you turn it on/off or the machine is idle. Please be aware of this and ensure the drip tray is emptied regularly. For information on how to change the cleaning frequency, see page 17.

IMPORTANT!: When descaling, the machine will use about a tank of water. It is recommended to place a cup under the nozzle to collect water, and to empty this regularly. Descaling the machine without using a cup and regularly emptying it or the drip tray would result in overflowing water.



Super Automatic
COFFEE MACHINE



ONE YEAR LIMITED WARRANTY

This product is warrantied to the original purchaser for one year from the date of purchase, against manufacturer's defects under normal use. Additionally, our top-notch customer service team can help you with any questions or issues. For full details, scan the QR Code.

JUST A FEW STEPS AWAY:



Open the Camera
App on your phone



Point to the code and
focus your camera
on the code



Click the notification
that pops up*

*If you're having trouble download a QR Code App go to this link:
<https://www.zulaykitchen.com/pages/magia-coffee-machine-warranty>

HOW-TO VIDEOS

We have made How-To Videos to help you become more familiar with your Magia Super Automatic Coffee Machine. This series of videos cover the different functions of the coffee machine, maintenance actions, troubleshooting and more.

Scan the QR code above or go to
<https://www.zulaykitchen.com/pages/magia-coffee-machine-manual>

Thank you For Your Purchase

Thank you for choosing the **MAGIA** Super Automatic Coffee Machine for your home coffee needs. This user manual includes important information to help you operate the machine safely, and to help you create barista level coffee drinks in the comfort of your home.

Please read this manual prior to using. The simple maintenance actions are important to keep your machine operating and continuing to make high quality drinks for years to come.

If any issues ever come up, please feel free to reach out to our caring Kitchen Happiness customer service team.

We hope you enjoy using your new coffee machine, and sharing some great coffee with friends and family!

CONTENTS

PAGES

1.	SAFETY INFORMATION.....	01 - 02
2.	PRODUCT ORIENTATION.....	03 - 04
3.	ACCESSORIES.....	05
4.	MAIN FEATURES.....	06
5.	SETTING UP THE UNIT.....	07 - 09
6.	REMOVING & REPLACING.....	10
	THE BREWER SYSTEM	
7.	MAKING A PRE-SET COFFEE.....	11 - 12
8.	SPECIAL COFFEE RECIPES.....	13
9.	COFFEE GROUND CHUTE.....	14
10.	MAKING HOT WATER, MILK & FOAM.....	15
11.	CUSTOMIZING DRINK SETTINGS.....	16
12.	CUSTOMIZING MACHINE SETTINGS.....	17 - 18
13.	CLEANING & MAINTENANCE.....	19 - 20
14.	TROUBLE SHOOTING.....	21 - 22
15.	WARRANTY & HOW-TO VIDEO.....	23
	INFORMATION	
16.	CONTACT INFORMATION.....	24



by ZULAY ✕ KITCHEN



WE ARE HERE FOR YOU

If you have any questions about the unit or its operation, please call or email customer service.

☎ +1(727)386-9117 ☎ Mon-Fri 9:00 AM - 5:00 PM (EST)

✉ support@zulay.net