

INSTRUCTION MANUAL



ELECTRIC WINE OPENER

SAFETY INSTRUCTIONS

- 1 This device contains sharp, moving parts and should not be used by or near children. Always use caution when using this item and keep out of reach of children.
- 2 Do not touch the corkscrew or inside of the opener, or insert utensils into the container while operating to prevent bodily injury or damage to the unit. Hold the unit only by the outer housing.
- 3 The foil cutter contains sharp blades. Use with caution and keep out of reach of children.
- 4 Do not operate or charge the electric wine opener if the cord or plug has been damaged, the appliance malfunctions or is damaged in any way.
- 5 Do not immerse the wine opener into water or any other liquid to avoid risk of electric shock and/or damage to the product.
- 6 Do not operate in the presence of flammable or explosive fumes.
- 7 Do not burn the wine opener or expose it to extreme heat.
The batteries can explode in a fire.
- 8 Use this item only for its intended use.
- 9 This item is intended for household use only.
- 10 For indoor use only.
- 11 Do not try to make the Wine Opener operate faster or force it onto a bottle.
- 12 Charge the wine opener only with the included charging base and power cord.
- 13 Turn the appliance off and unplug it when not in use, before assembling, disassembling or cleaning.
- 14 Do not open the wine opener or charging unit. If you have any problems, contact the Zulay Kitchen customer service team.
- 15 Ensure the Wine Opener is straight on the bottle or it may not properly extract the cork.

CHARGING INSTRUCTIONS

It is best to charge your Wine Opener for 10–12 hours prior to its first use. To charge, plug one end of the charging cord into the charging base and the other end into a wall socket. Place your Wine Opener into the charging stand, you will know it is charging when the LED light illuminates. Your Wine Opener can open approximately 30 bottles on a single charge. It takes 8–10 hours to fully charge.

OPERATING INSTRUCTIONS

Place the Wine Opener on top of the wine bottle, keeping it as straight as possible. Holding your Wine Opener at an angle will not allow it to remove the cork properly and may cause it to stop before removing the cork.

While holding your Wine Opener securely, press the Down switch. The corkscrew will turn, entering the cork and removing it from the bottle. When the mechanism stops, the cork has been removed from the bottle.

To remove the cork from your Wine Opener, lift the mechanism away from the wine bottle and press the Up switch. The corkscrew will turn counterclockwise and the cork will be released.

TIPS

If your Wine Opener stops before the cork is fully removed from the bottle, it is likely low on charge. Release the cork using the Up switch and place your Wine Opener on the charger.

If it takes an unusually long amount of time to remove a cork, you can gently push down on your Wine Opener to assist the corkscrew.

Your Wine Opener might experience problems with some small or synthetic corks. In this case, please remove the cork manually.

CLEANING INSTRUCTIONS

To clean your Wine Opener, ensure it is OFF and use a damp cloth or sponge to wipe it and then fully dry it before stowing. Use caution around the spiral mechanism which is sharp!

DO NOT immerse your Wine Opener in water or attempt to clean it in the dishwasher.

LIFETIME WARRANTY AND SATISFACTION GUARANTEE

We believe in our product so much that if for any reason you are not fully satisfied, we will make it right with a replacement or refund without you ever having to go to the post office. For full details on how to register go to:
www.zulaykitchen.com/warranty

WE ARE HERE FOR YOU

If you have a question or need support, let us know.

☎ (727) 386-9117 ⌚ Mon-Fri 9:00 AM - 5:00 PM (EST) ✉ support@zulay.net