



## Our Story

Zulay Kitchen is named after my extraordinary mother, Zulay. She was raised in poverty-stricken Venezuela and, against all odds, brought my brother and me to live in the US. As a single mother, she worked extra-long hours but still found time to cook healthy meals for us. At the time, I thought nothing of it. But now that I'm married with children of my own, I see how much of a super-hero mom she really was.

My wife and I created Zulay Kitchen to make shopping easier than ever in today's busy world. We believe that cooking should be fast and easy, so you have more time to enjoy with your loved ones.

*Aaron* Aaron Cordovez, Co-Founder of Zulay Kitchen

## Lifetime Warranty and Satisfaction Guarantee

We believe in our product so much that if for any reason you are not fully satisfied, we will make it right with a replacement or refund without you ever having to go to the post office. To register and for full details: [www.zulaykitchen.com/warranty](http://www.zulaykitchen.com/warranty)

## We Are Here For You

If you have a question or need support, let us know.


☎ (727) 386-9117

🕒 Mon-Fri 9:00 AM - 5:00 PM (EST)

✉ [support@zulay.net](mailto:support@zulay.net)



# IMMERSION BLENDER USER'S MANUAL

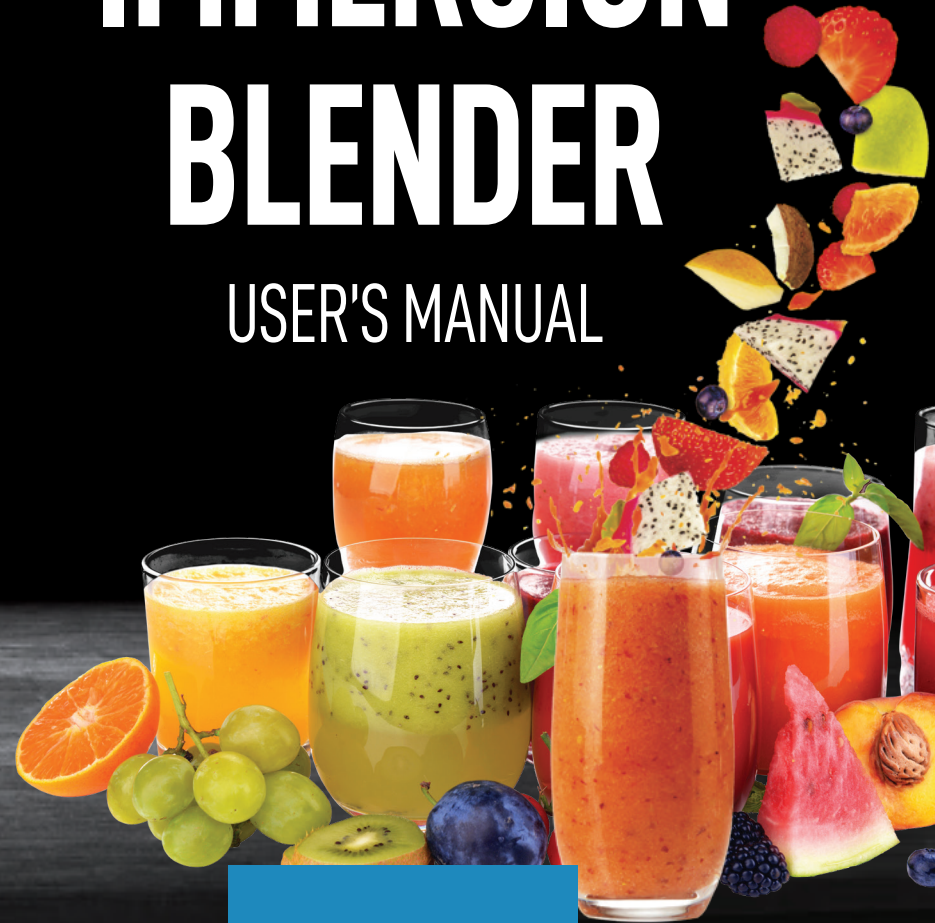

## SAFETY INFORMATION

Always use basic safety precautions when using an electrical appliance such as this Immersion Blender. Some basic safety guidelines are included below.

- Read all instructions prior to using your immersion blender.
- Never put the motor body, cord or electrical plug of the blender in water or other liquid.
- Turn the blender off, ensure the motor has stopped completely, and that it is unplugged from the outlet before putting on or removing attachments and before cleaning.
- Only the Blending Shaft, Whisk and Frother attachments are safe to immerse into water or other liquids. Never submerge any other part of this blender, and never use with wet hands.
- If your blender falls into a liquid, immediately unplug the unit first, and then remove from the liquid.
- This is not a toy and is not to be used by children. Keep out of reach of children at all times.
- Always unplug the blender when not in use, when cleaning, or when changing the detachable tool (blender, whisk, frother).
- Always use the plug when inserting or removing from the outlet; never pull from the cord.
- Do not touch moving parts.
- While using the blender, keep your hair, hands, clothing and any accessories or other kitchen tools away from the blender, as well as the mixing container.
- If there is any damage to the blender or cord, or anything does not seem to be working correctly, do not use. Reach out to our customer service team with the contact information on back page.
- Remove the detachable shaft (blender, whisk or frother) from the blender before washing them.
- Use care when handling the detachable blender shaft. The blades are sharp.
- Use care when working with hot liquids by using a large enough container with tall sides and not over-filling.
- Only use the attachments included in this package.
- Do not allow cords to hang where they can be grabbed or tripped over, and never place over a stove top or other hot or potentially hot surface.
- Use only as intended, for personal indoor use.

## USING YOUR BLENDER

- 1 Determine which attachment you need. If you are using the whisk or frother, insert this attachment into the gear box and press until it clicks in place.
- 2 Attach the blending shaft or gearbox onto the motor body by turning counter-clockwise to snap it in place.
- 3 Prepare your ingredients in a deep container with tall sides to prevent spills.
- 4 Plug in the blender and adjust the speed as needed using the speed control knob on the top of the unit.
- 5 Switch on using the power button. For top speed, hold down the turbo button. Start with and keep the blade below the surface of your mixture while it is running to prevent splashes.
- 6 Blend, whisk or froth your ingredients by moving the unit slowly up and down and in circles.
- 7 When done blending, unplug the unit. It is recommended to rinse immediately after use to make an easy clean up.

## IMMERSION BLENDER PARTS



## CLEANING YOUR BLENDER

- 1 Ensure unit is unplugged before cleaning.
- 2 Remove the attachments by turning the blending shaft or gearbox clockwise. If using the whisk or frother, remove it from the gearbox.
- 3 Wipe the motor body with a damp soft cloth or sponge.
- 4 Wipe down the gearbox as needed.
- 5 Clean the metal attachment (blending shaft, whisk or frother) in the dishwasher, or wash by hand with mild detergent and hot water.

**CAUTION: BLADE IS SHARP, SO BE CAREFUL WHEN CLEANING IT.**