

CLOUDNOLA

www.cloudnola.com



Block Clock

3-in-1 LED Alarm Clock
time, temperature and date



 
Time
LED Display




3 Single
Alarms



Temperature
(F / C)

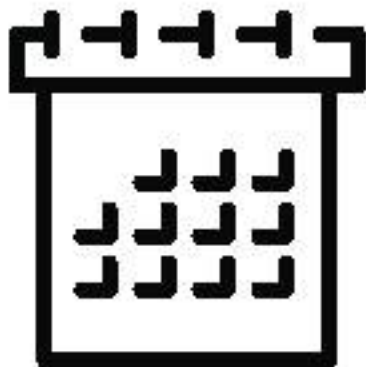

Calendar

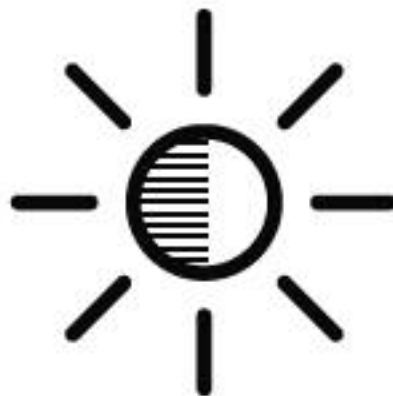 


4 Level
Brightness



12 or 24 hours
display

 ENGLISH INSTRUCTIONS

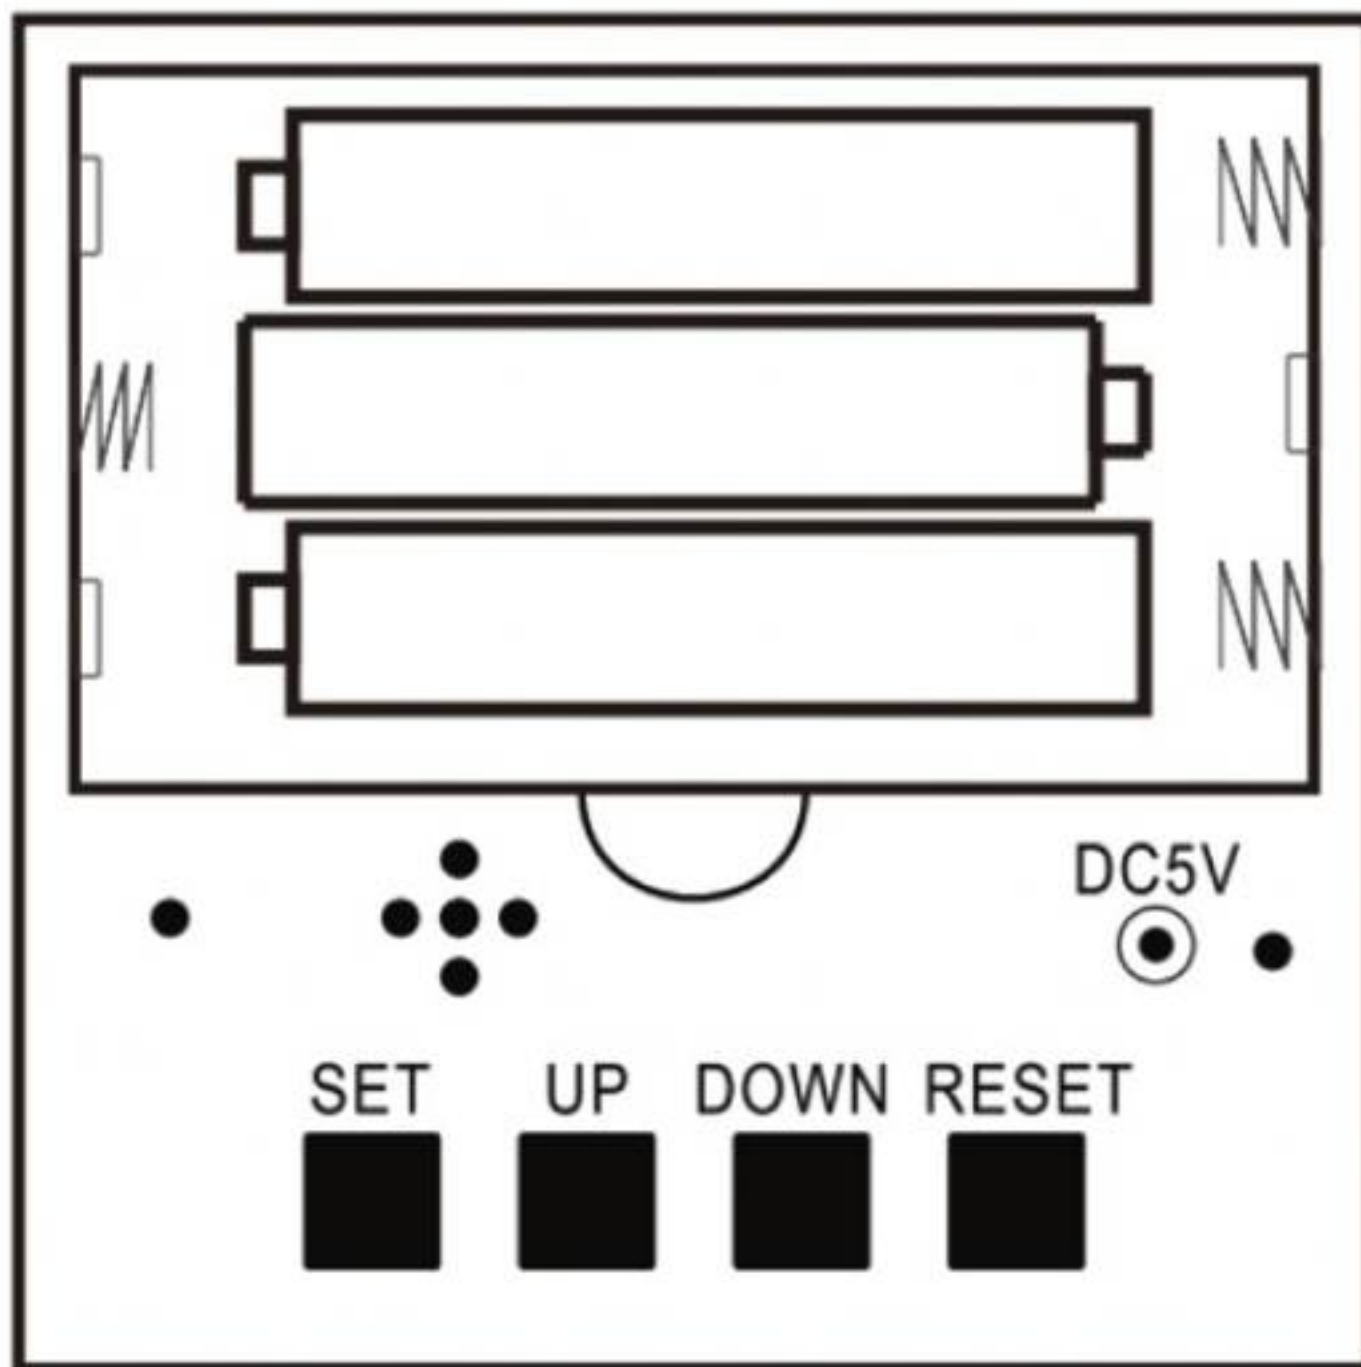

1. REMOVE PLASTIC COVER

Please remove the battery plastic cover from the backup batteries.

IMPORTANT: The batteries are for back up only, for daily use its recommended to use USB cabel. With LED bulbs, the digital clock consumes more power and drains out the batteries within a week.

2. PLUG USB CABLE

Put the USB cable in the alarm clock and in the wall socket.

3. DISPLAY SETTINGS

Choose the display mode. Use SET to switch from dp-1 to dp-2.

Display dp-1: Time, date and temperature successively displaying

Display dp-2: Time displaying only

4. TIME / ALARM / DATE CONTROL

Press and hold SET for 3 seconds.

When the right symbol is flashing, adjust UP and DOWN to set.

You may set: **YEAR** -> **MONTH** -> **DATE** -> **HOUR** ->
MINUTE -> **12/24H** -> **A(larm)**

It's possible to set three different alarms.

--:A1 -> **--:A2** -> **--:A3**. Each alarm lasts 1 minute.

To turn down the Alarm , press any button.

This clock has no snooze function.

5. SOUND CONTROL

Use DOWN to switch from SOUND ON to SOUND OFF.

oN:Sd = SOUND ON

-- :Sd = SOUND OFF

6. TEMPARATURE CONTROL

Use UP to switch from °C (Celsius) to °F (Fahrenheit).

7. DISPLAY LUMINANCE

Press and hold UP for 3 seconds. Use DOWN to switch from L3 to a lower level. Use UP to switch to a higher level.

There are 4 levels, **L0**, **L1**, **L2** and **L3**.

8. RESET

Use RESET to reset the settings.

BATTERIES

- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon/zinc), or rechargeable (Ni-cad, Ni-Mh, etc) batteries.
- Remove exhausted or dead batteries from the product and dispose of properly.
- Remove battery(s) if product is not to be used for a long time

